



CAEMaestro

User Guide - Aria

Your worldwide
training partner
of choice



Proprietary Notice

This document, including the information contained herein, is confidential and/or proprietary to CAE Inc., and shall not be reproduced or disclosed in whole or in part, or used for any purpose whatsoever without the prior written authorization of CAE Inc.

Trademark Information

Trademarks and/or registered trademarks of CAE Inc. and/or its affiliates include but are not limited to Apollo, Ares, AresAR, Athena, BabySIM, Caesar, CathLabVR, EndoVR, HPS Human Patient Simulator, iStan, Juno, LapVR, Lucina, LucinaAR, Luna, Maestro, Muse, NeuroVR, Orion, PediaSIM, Vimedix, VimedixAR and Vivo. All other brands and product names are trademarks or registered trademarks of their respective owners. All logos, tradenames and trademarks referred to and used herein remain the property of their respective owners and may not be used, changed, copied, altered, or quoted without the written consent of the respective owner. All rights reserved.

CONTENTS

- System Requirements 1**
 - Software and Hardware1
 - CAE Maestro Software1
 - Windows® Operating System.....1
- Introducing CAE Maestro 3**
 - Instructor Tablet.3
 - Microsoft Surface Go 23
 - CAE Maestro Application Overview4
 - Simulation Mode Comparison4
 - Run on the Fly.....4
 - Simulated Clinical Experience (SCE).5
- Using CAE Maestro 7**
 - Starting a Simulation7
 - Run on the Fly Simulations8
 - Run an SCE.9
 - Run Screen Features11
 - The CPR Monitor.....11
 - Records13
 - Checklists14
 - Monitor Signals.....15
 - Event Log17
 - Reset an SCE18
 - Changing Patient Status20
 - Patient Status Parameters.....20
 - Changing a Patient’s Parameters22
 - Applying Conditions and Interventions.....24
 - Conditions25
 - Medications.....26
 - Treatments30
 - Transitioning Scenario States.....32
 - SCE Timeline Controls33
 - Using Markers.....34
- Patient Display 35**
 - Patient Status Display35

Patient Controls	36
Change the Control Widget Layout	43
Alarm State	44
Editing Parameters	45
Managing SCEs.....	47
Review an SCE	48
View SCE Details	48
SCE Editor Navigation Tabs	49
SCE Editor Panels	49
Create a Custom SCE	49
Copy an SCE	50
Creating a New SCE	51
Import or Export an SCE	54
Using the SCE Editor	57
Patient Profile	58
Setting a Patient’s Baseline	58
Scenarios	60
Add, Modify or Delete Scenario States	63
Checklists	68
Patient Records	71
Upload Patient Records	71
Edit or Delete Patient Records	72
Runtime Configuration	73
Preparation	74
Administrative Tools	75
System Administration	76
System Information and Settings	76
Set the Default System Language	77
Additional Administrative Tools	77
SCE Management	77
Session History - History Screen	78
Using the CAE Patient Monitor.....	79
Accessing the Patient Monitor	79
Settings	81
Layout	82
Sounds	86

Snapshot	87
Patient Records	88
12-Lead ECG	89
Using the Intercom	91
Communicate with Participants	92
Speak as the Patient	92
Settings	93
Appendix A - Maestro Parameter Descriptions.....	95
Appendix B - Medication Information	135

THIS PAGE INTENTIONALLY LEFT BLANK

SYSTEM REQUIREMENTS

This section describes the minimum and optimal requirements to run the simulator.

Software and Hardware

Any device used to operate CAE Maestro™ must meet the following minimum hardware requirements.

Note: Periodic system updates for Maestro are available at: <https://caehealthcare.com/support/software-updates>. You can download software updates from any Windows computer with an Internet connection.

These requirements also apply to devices running Maestro Standalone.

CAE Maestro Software

The following identifies the software version associated with the release of this user guide.

Document	Document Version	Software Version
CAE Maestro for Aria	905K690152 v1.0	CAE Maestro (Aria) v2.8

Windows® Operating System

Minimum Requirements	
Software	<ul style="list-style-type: none"> • Win 10 Pro • .NET 4.8
Hardware	<ul style="list-style-type: none"> • Surface Go 2 • Intel Pentium Gold Processor 4425Y • 4 GB DDR3 RAM • 32 GB Hard Drive space available • 1920x1280 screen resolution • USB-C • Wireless 802.11 a/b/g/n/ac/ax

Note: Not compatible with macOS.

THIS PAGE INTENTIONALLY LEFT BLANK

INTRODUCING CAE MAESTRO

CAE Maestro™ is a user friendly software that allows facilitators to control and monitor CAE patient simulators, in addition to creating Simulated Clinical Experiences (SCEs). Maestro includes dynamic controls that allow you to adjust the physiology of the patient as you proceed through a simulation, whether you are using it On the Fly or running a programmed SCE. A patient status overview on the runtime screen allows the facilitator to keep track of the current status of the manikin and the display on the CAE Patient Monitor. Maestro's dynamic flexibility and ease of use allow you to adjust the learner's training experience to meet their needs, capabilities, and experience.

Instructor Tablet

This section describes the tablet used to operate CAE Maestro. Maestro can also be installed on a laptop as standalone software. For more information, see the *System Requirements* section of this user guide.

Microsoft Surface Go 2

A Surface Go 2 Instructor Tablet is used to run the software.

The Surface Go 2 provides the capabilities of a laptop in an ultra-portable tablet. This mobile workstation features a Windows 10 Pro operating system with an Intel Pentium Gold Processor, a 10.5 in (26.6 cm) touchscreen, and up to 13 hours of battery life. The Surface Go 2 tablet comes equipped with pre-installed instructor software.



Surface Go 2 Instructor Tablet

CAE Maestro Application Overview

Users have the following choices for managing their simulation in the CAE Maestro software:

- Run simulations “On the fly” in Manual mode
- Run simulations “On the fly” in Modeled mode using CAE Physiology
- Run preconfigured simulations using Simulated Clinical Experiences (SCEs) in Manual or Modeled mode

Simulation Mode Comparison

On the Fly vs. SCE

There are two ways to run a simulation in Maestro: On the fly and Simulated Clinical Experience (SCE). Users can start a simulation or choose to design content for the simulation and save it as an SCE.

When operating On the fly, no content is authored ahead of time and the simulation is simply controlled in real-time by the instructor.

With an SCE, some details of the simulation are defined ahead of time (e.g. states, patient profile, and other scenario background information). During an SCE, users can also make changes On the Fly as needed.

Run on the Fly

Running simulations on the fly includes no predetermined scenarios or intended progression of events, and provides facilitators with a simple way to run a simulation with no advanced programming. You can run on the fly in Manual or Modeled mode.

In Manual mode, the user drives all changes to the patient’s condition and responses to interventions by making manual selections in the software.

In Modeled mode, the simulation is automatically driven by CAE Physiology (a computational model of human physiology). This model controls patient status, progression of clinical signs, and response to interventions. Modeled mode also allows the instructor to override the model’s output with manual inputs.

From the Run Screen, you can manually alter the patient’s status and adjust parameters as needed for specific situations. The functionality in this mode is described in the *Run an SCE* section of this user guide.

Note: Only systems that include the CAE Physiology (optional on some simulators) can be run in Modeled mode.

Simulated Clinical Experience (SCE)

Simulated Clinical Experiences (SCEs) are process tools that let facilitators execute a learning strategy using simulation. Preconfigured CAE SCEs provide an extensive overview and outline of the learning exercise, and require minimal additional faculty development time for use. Each SCE is typically comprised of a patient and a scenario.

THIS PAGE INTENTIONALLY LEFT BLANK

USING CAE MAESTRO


Using the CAE Maestro software, you can create and run SCEs, assess learners, and adjust system controls.

Note: For optimal performance, no other software program should be open while Maestro is running.

Starting a Simulation

Upon launching the CAE Maestro app, the Home Screen appears and users have the option to choose one of the following simulation types: Run on the fly (Modeled), Run on the fly (Manual), or Run an SCE.

Note: Modeled physiology is optional.

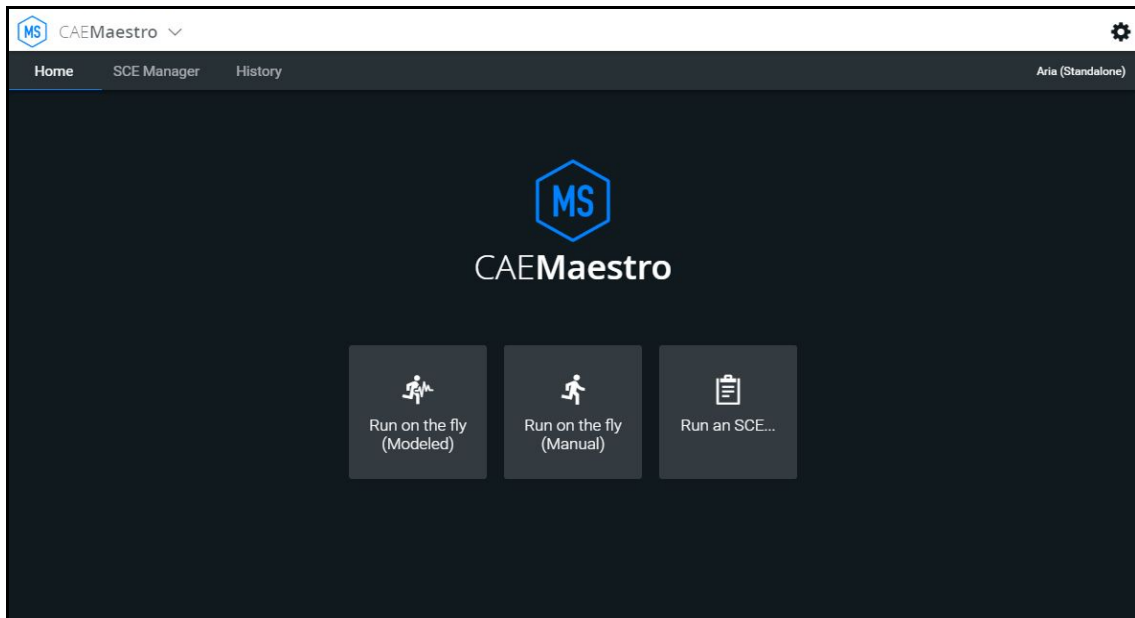


CAE Maestro Home Screen

Run on the Fly Simulations

The Run on the fly (Manual or Modeled) simulation starts a simulation without an SCE.

To begin a Run on the fly simulation:

1. From the Home Screen, tap the **Run on the fly** button.
2. Select the patient's gender.

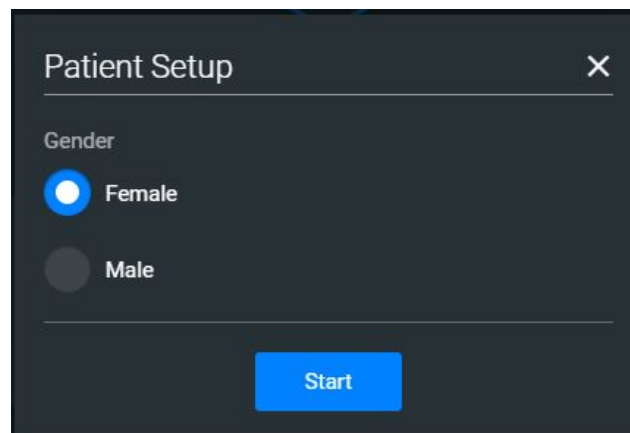

Start Screen - Select Gender


3. Tap **Start** to begin the simulation.

Run an SCE

From the SCE Manager, various simulations are available.

To run an SCE:

1. From the Home Screen, tap **Run an SCE**.
The **SCE Manager** tab is selected by default.
2. Tap the **Preconfigured SCEs** tab to view the list of preloaded SCEs.

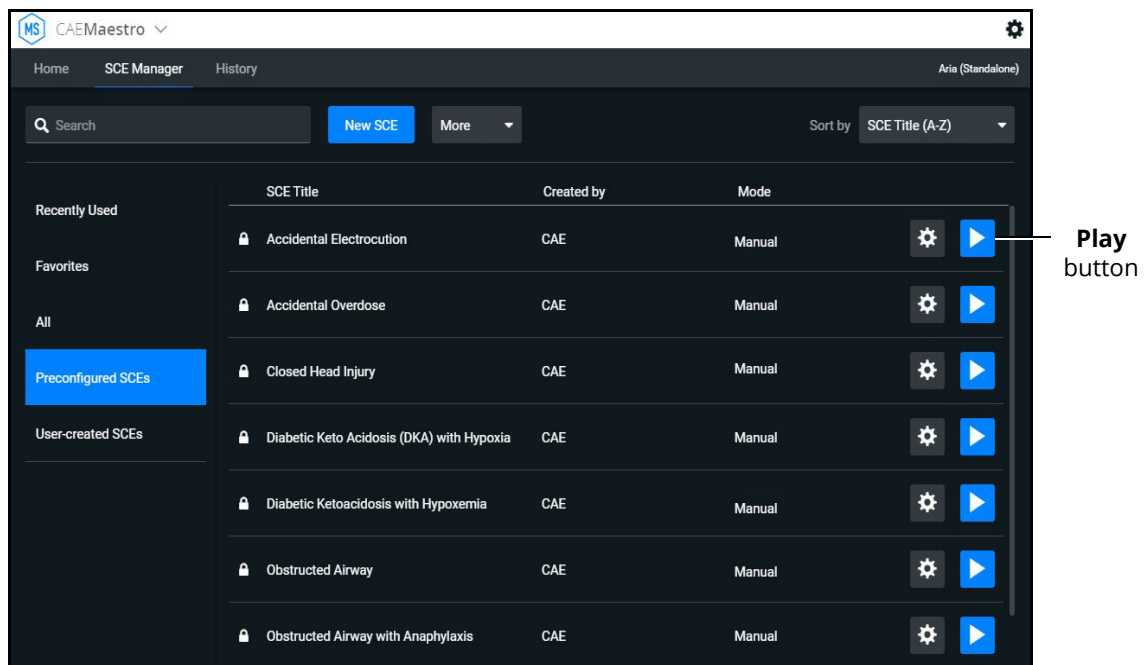


SCE Manager Screen - Preconfigured SCEs

There are two ways to start an SCE:

- Tap the **Play** button,
- OR
- Tap the SCE title to view SCE details before launching.

3. Tap the **Run SCE** button to start an SCE.

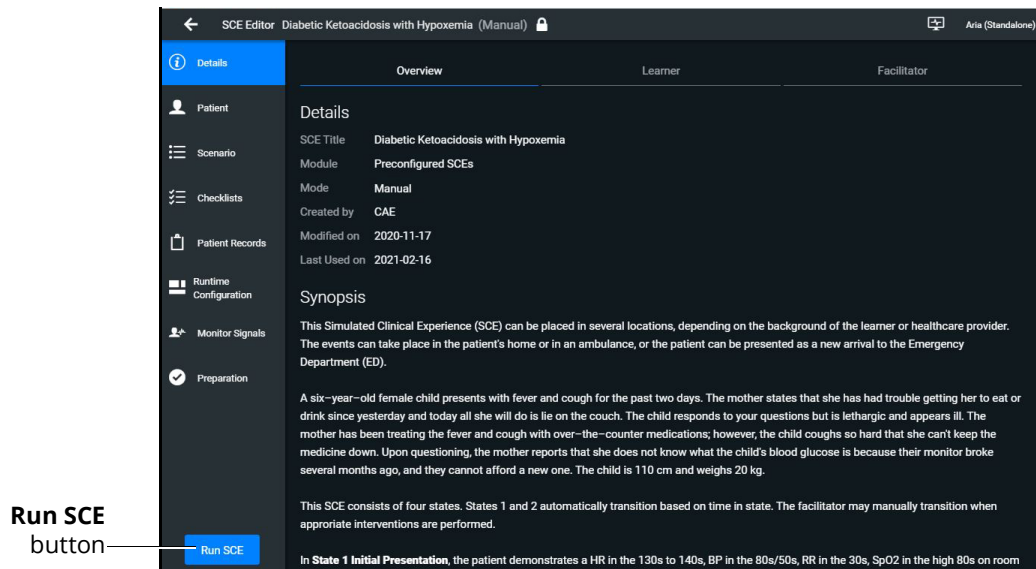


SCE Manager Details Screen - Run SCE Button

The Run Screen appears and displays the Patient Baseline state.



SCE Run Screen

4. Tap the **Scenario** icon in the upper-right corner of the Run Screen.

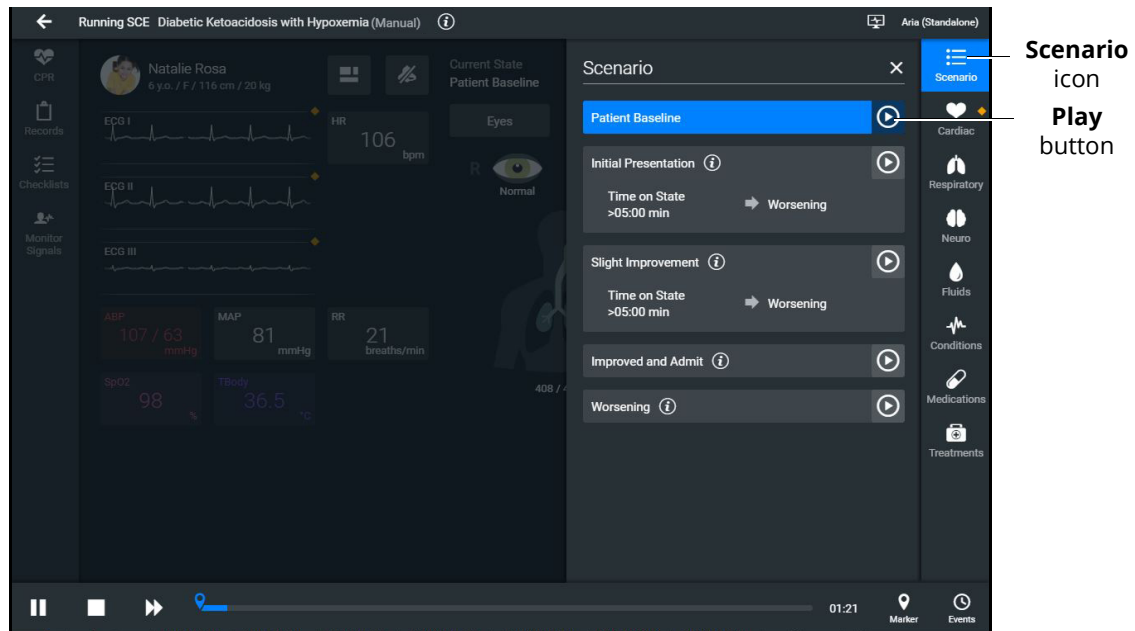

SCE Run Screen - Scenario Icon

The list of scenario states appears. A scenario will remain in the Patient Baseline until the **Play** button is tapped in another state.

5. Tap the **Play** button to apply a state to the running SCE.

Run Screen Features

When an SCE is started or when running on the fly, the Run Screen appears and displays a series of panels that group related controls and information. The content for each control is dynamic and varies whether you run scenarios on the fly or as an SCE. Users can adjust the status of the patient while they proceed through a simulation using these controls. When running an SCE, some panels contain additional controls.


The CPR Monitor

The CPR Monitor is used to monitor the efficacy of CPR interventions and is available from the Run Screen.

Note: The CPR Monitor is only active while running Maestro on a simulator.


To use the CPR monitor:

1. Tap the **CPR Monitor** button at the top-left of the Run Screen.

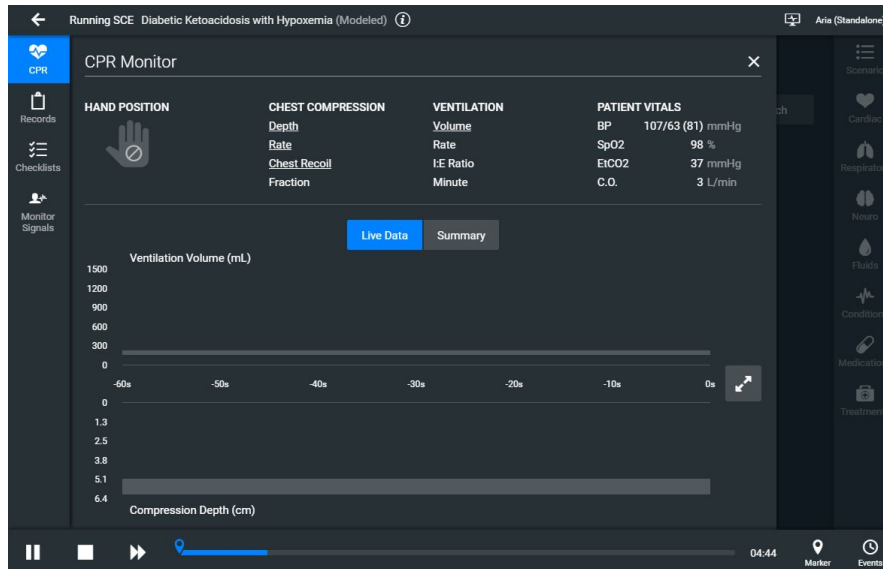

CPR Monitor - Live Data

2. Tap the **Summary** button to display the summary view.

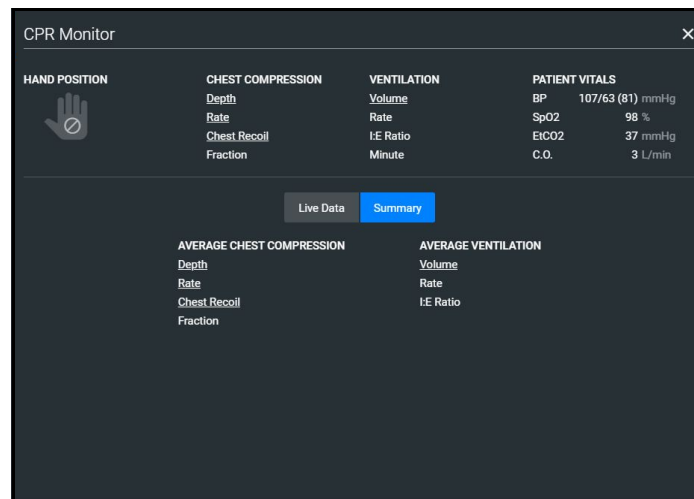

CPR Monitor - Summary

3. Tap the **Live Data** button to return to the Live Data view.

The CPR Monitor displays several statistics, including current hand position, compression and ventilation rates, compression depth, ventilation volume, and compression-ventilation ratio.

CPR data is recorded in the Event Log.

To close the CPR monitor, tap the **X** button.

Records

You can display patient records while an SCE is running.


To display a patient record:

1. From the Maestro Run screen, select **Records**.

The Patient Files tab displays by default.

To view patient files, select **Show Library** button.

The list appears with all available patient records appears.

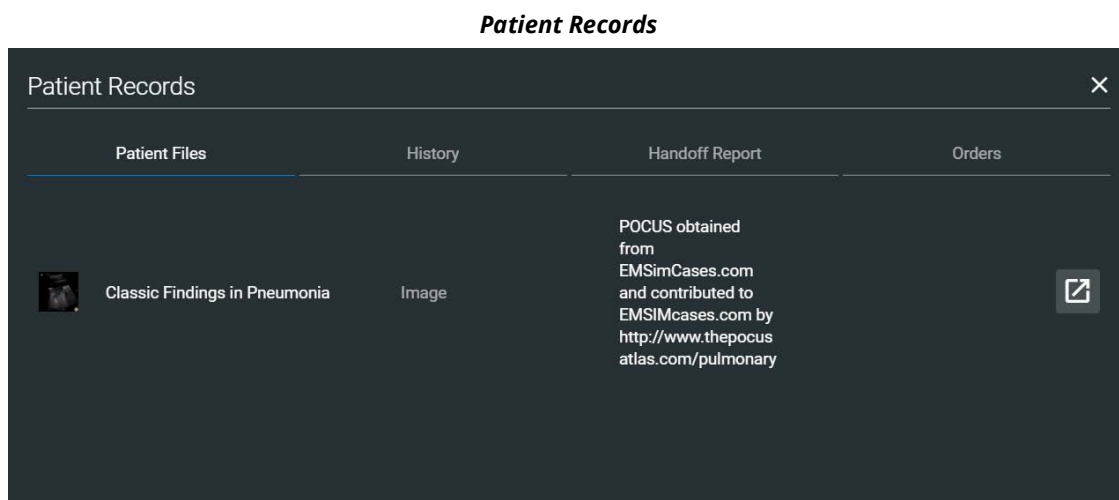

2. (Optional) To preview a patient record before sending to the Patient Monitor, select the record and tap the **Preview** button.
3. Select a patient record and tap **Send to Patient Monitor**.

The patient record opens in CAE Patient Monitor.

Note: Only one patient record displays at a time.

To stop displaying a patient record in the Patient Monitor, on the patient record tap **Remove from Patient Monitor**.

To close the Patient Record list, tap **Records**.


Checklists

To access learner checklists:

1. Tap the **Checklist** tab.

When a checklist is selected it is highlighted in blue and the content of the checklist is displayed in the right panel.

2. Tap **Begin** to launch the first checklist and start verifying steps performed by learner.

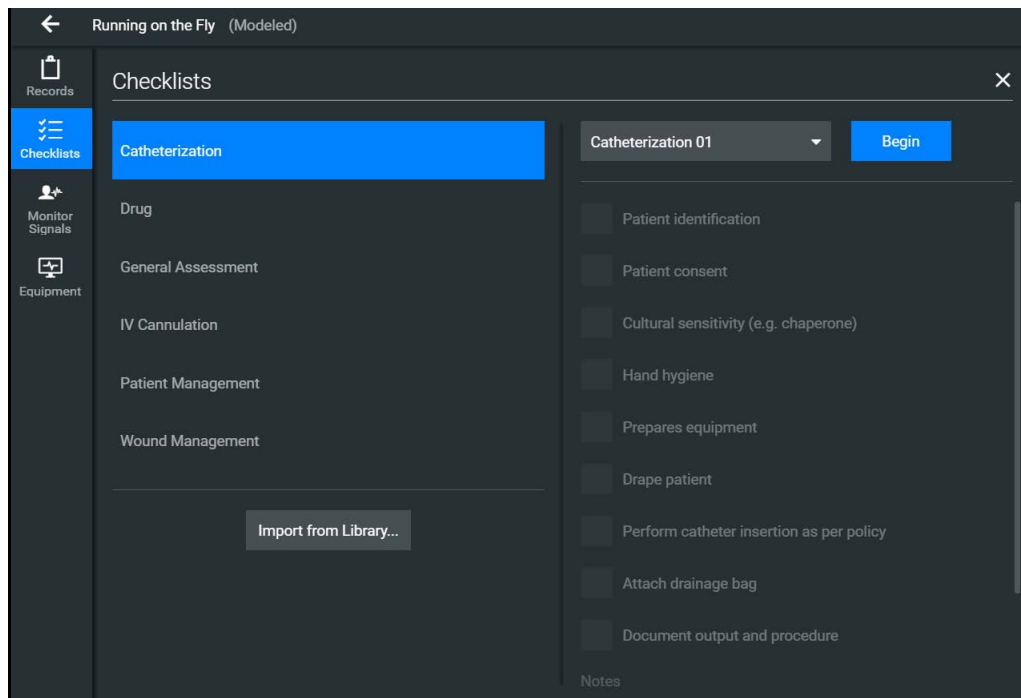

The Checklists Popup Screen

3. After a checklist has been completed, tap **New Instance** to begin another checklist for the next learner.

The Checklist drop-down list displays each instance completed, numbered 01 as first instance, 02 as second instance, etc. within each state.

4. Tap the **X** to close the Checklist panel.


Monitor Signals

The Monitor Signals tab gives the users control over the values and signals that appear on the simulated Patient Monitor.

Tap the **Monitor Signals** icon to define which patient indicators will be monitored.

Use the drop-down menus to define which patient parameters will be visible for learners viewing the patient monitor.

Use the toggles to turn the various values and signals on and off.

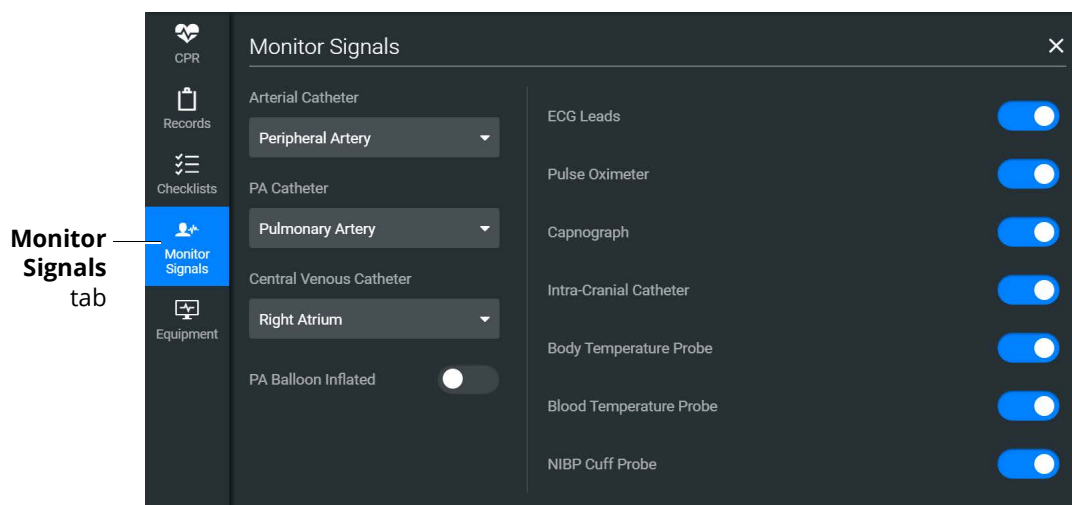

Monitor Signals

By default, all probes are on. When probes are turned off, it impacts different waveforms and numerical values on the patient monitor.

Probe Turned Off	Impact
ECG Leads	Hides the ECG waveform and HR value
Pulse Oximeter	Hides the PLETH waveform and SpO2 value
Capnograph	Hides the CO2 waveform and EtCO2 value
Intra-Cranial Catheter	Hides the Intra-Cranial Catheter values
Body Temperature	Hides the TAxilla and TBody values
Blood Temperature	Hides the TBlood and TRectal values

Note: At present, the 'TAxilla' and 'TRectal' values do not disappear when the Body Temperature is toggled Off.

Setting the catheter placement to Atmosphere causes a flat line to appear, even when an override is used. Available catheters include:

- Arterial Catheter
- PA Catheter
- Central Venous Catheter

If the catheter placement is *None*, no trace appears at all.

Tap the **PA Balloon Inflated** toggle to inflate the patient's PA Balloon. Tap it again to deflate.


For more information about monitor signals, see *Appendix A - Parameter Descriptions*.

Event Log

During an SCE, all changes (manual or detected by the system) to simulation settings, learner actions, and checklist results are recorded in the Event Log.


To access the Event Log, tap the **Events** button in the bottom-right corner of the Run Screen.

The event log records the time and details of instructor and learner actions, which are color coded by category.

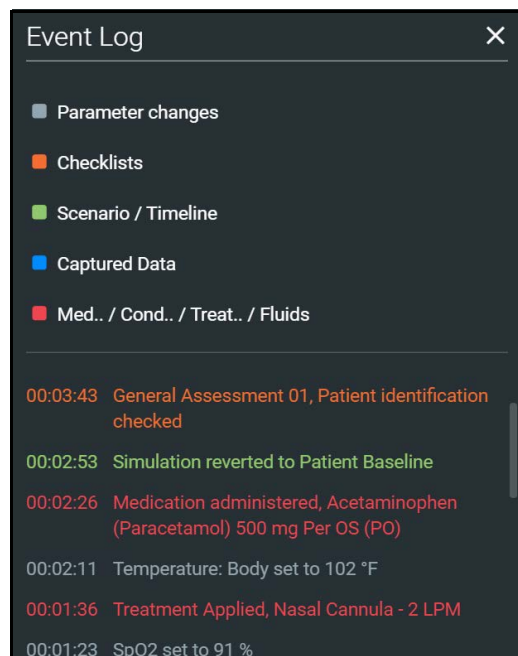

Event Log

In Manual SCEs, the administered medication information tracked in the Event Log does not have an automatic effect on patient physiology.

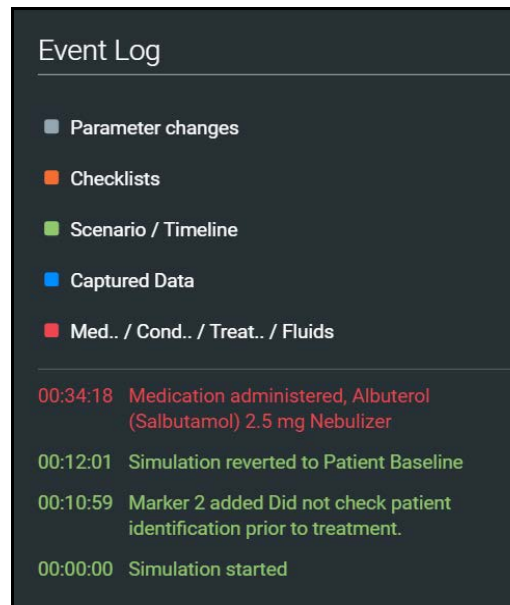


Medication Information in Event Log

Reset an SCE

Resetting an SCE brings the patient's initial status data back to its original status. The SCE time is unaffected. Reset data appears in the Event Log.


To reset patient data:

 1. While running an SCE, select the first marker on the timeline.




Timeline

2. Tap **Revert**.

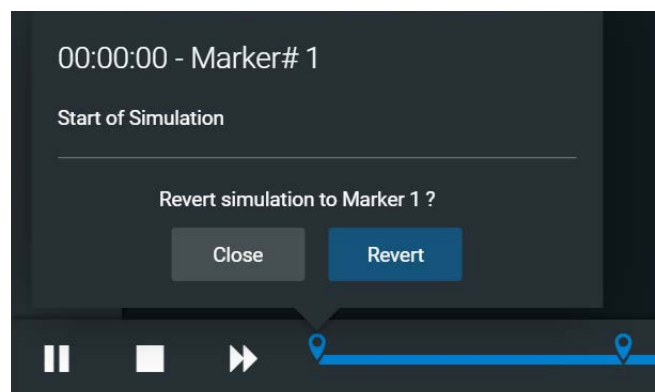

Revert to Marker

The patient returns to the Baseline state. The patient reset is indicated on the SCE timeline bar and in the Event Log.

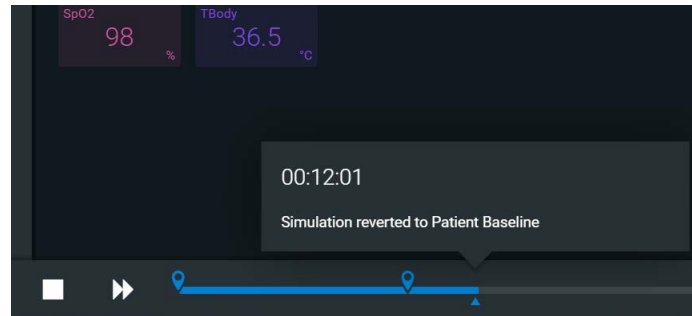

Reset Notification

Changing Patient Status


You can adjust the patient status when running on the fly or running an SCE by:

- Using one of the parameter panels on the Run Screen to modify parameters. For more information, see *Patient Status Display* section of this user guide
- Applying a Condition, Treatment, or Medication
- Applying a Scenario state

Patient Status Parameters

From the Run Screen, select a parameter icon to display the associated parameters panel for various body systems and features. To access a parameters panel, tap the appropriate icon or button on the right side of the Run Screen for:

- Cardiac
- Respiratory
- Neuro
- Fluids

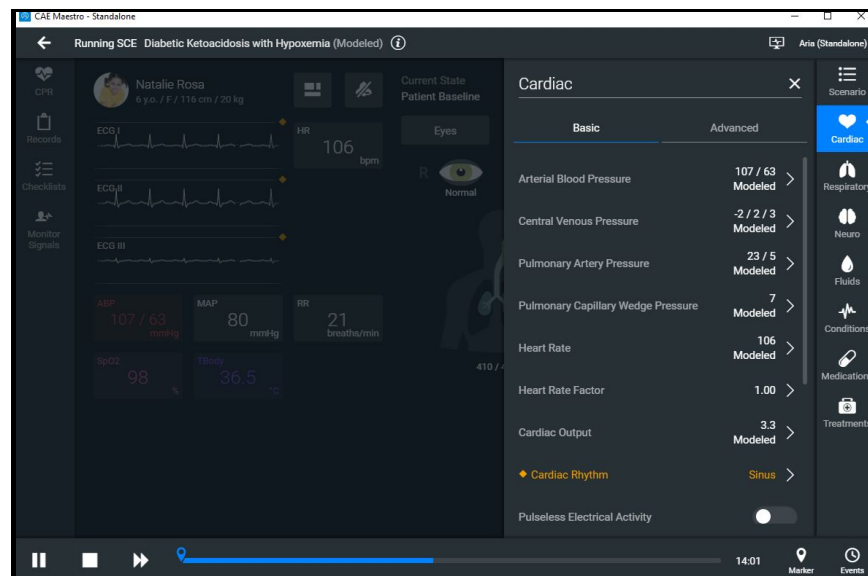

Run Screen with Cardiac Parameters

Types of Parameters

There are two types of parameters: numeric and discrete.

Once a parameter is selected and set, the patient's physiology changes according to the model for that parameter.

Numeric Parameters

To change numeric parameters, tap in the relevant field and enter a new value in place of the existing one. Or, use the slider to move through the range of parameter values until the numeric value is established.

In Run on the fly Modeled mode, there are a larger set of parameters that are either monitored patient values, or physiological model inputs. When users set or modify monitored patient values, it overrides the output of the physiological model. To return to a physiologically modeled value, tap the **Modeled** button and tap **Accept**.

Changing physiological model inputs indirectly impacts the output of the physiological model. When a modeled input is called a Factor, it acts as a multiplier. For example, Heart Rate Factor 2.0 is two times the baseline Heart Rate.

Discrete Parameters

Discrete parameters let users choose the appropriate option from a drop-down menu or toggle switch.

The following image shows the Bronchial Occlusion controls in the Respiratory parameter. The Bronchial Occlusion control is set using a discrete parameter switch that toggles between **OFF** and **ON**.




Bronchial Occlusion Parameter

Some parameters have two toggle switches or buttons, one for each side of the manikin.

Changing a Patient's Parameters

To change a patient's parameters:


1. Tap the appropriate parameters icon to view the parameter panel.

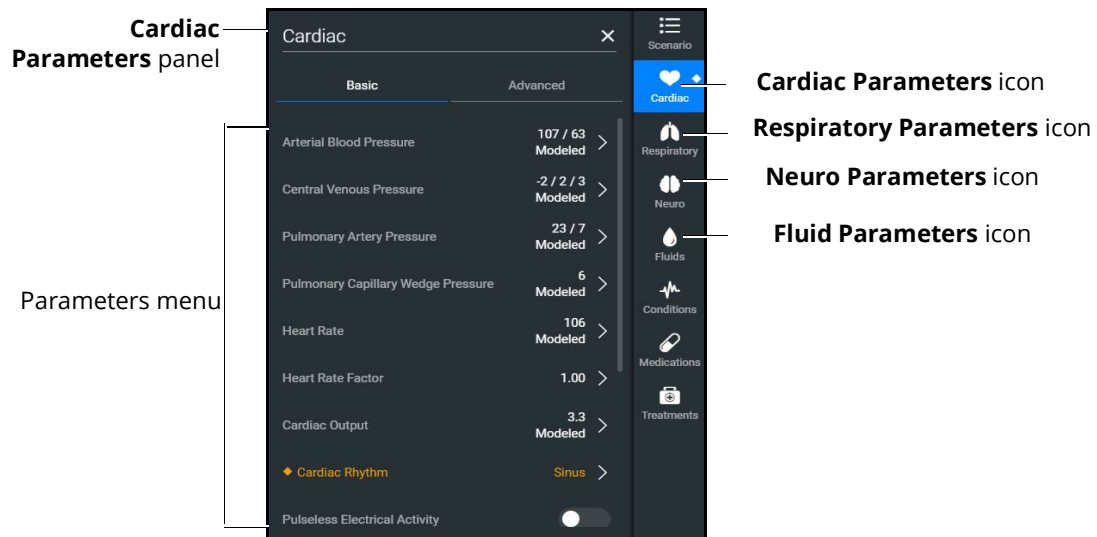

Cardiac Parameters Panel

If running on the fly or running an SCE in Modeled mode, the parameters will display the physiological responses in real-time.

Note: Patient status parameters can be toggled between modeled and override modes. Tap the arrow next to a parameter to open the control menu on the right side of the screen. Turn on the Override switch to adjust settings as desired, then tap **Accept**.

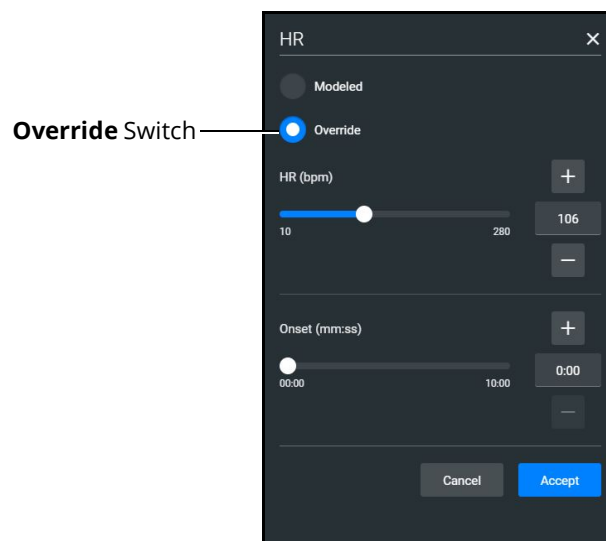

Override Controls


When you override a setting, an orange diamond-shaped indicator will appear at the upper-right corner of that parameter icon to show it is no longer driven by the model. The same indicator will also appear on the parameter widget and associated waveforms.



Override indicator

Override Indicator

2. Select the desired parameter. The Parameter Controls screen appears.

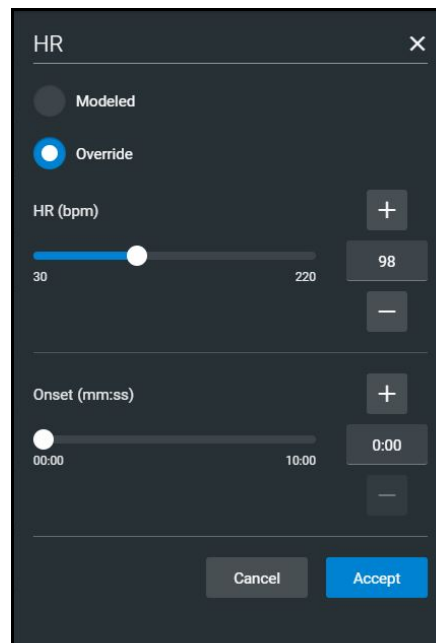

Heart Rate Parameter Controls

3. Set the new value and tap **Accept**.


Applying Conditions and Interventions

Conditions or interventions, such as medications and treatments, may be applied during simulation. Once applied, conditions are reflected in the patient's physiology (if in Modeled mode) and logged. All medications and other interventions are also logged, and most also affect the patient's physiology (in Modeled mode only).

When programming an SCE, conditions, medications, and treatments likely to be used in a given simulation case can be set up as Quicklinks, which will appear in alphabetical order at the top of the panel for quick access.

Note: Quicklinks can only be added when creating or editing an SCE.

To learn more about setting up Quicklinks, see *Runtime Configuration* in *Using the SCE Editor* section of this user guide.

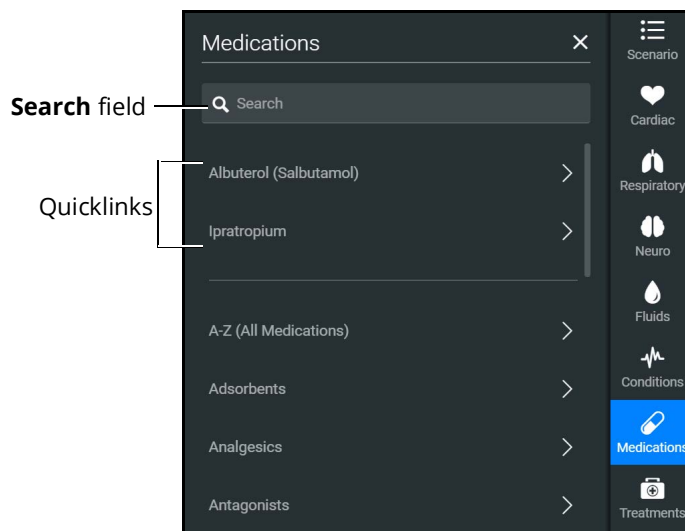


Medications Panel - Quicklinks

TIP: Tap the appropriate icon to collapse or expand the control.

Conditions

Conditions are preprogrammed pathophysiological states that incorporate one or more physiological parameters and are designed to enable multiple physiological changes more easily. Conditions are similar to scenario states in that they can contain multiple parameter changes that make it easy to quickly adjust the patient’s status.

Conditions are especially useful when programming in Modeled mode, where they continuously interact with the modeled physiology and any interventions to ensure appropriate changes for the condition.

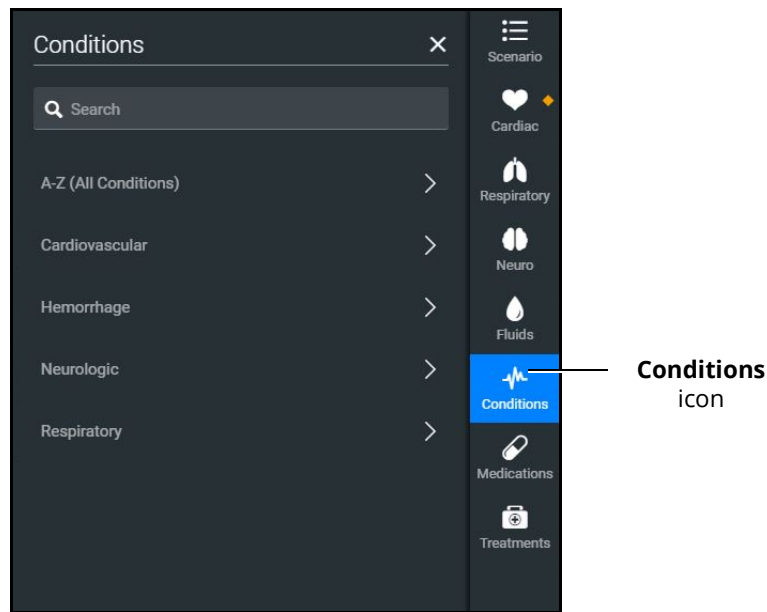

Conditions Panel


To apply a condition:

1. In the **Conditions** panel, tap a Quicklink, if available, or select a condition from within the listed categories or by tapping on **A-Z (All Conditions)**. You can also use the Search feature to quickly find a specific condition.
2. Tap the name of the desired condition and select a severity, if available.
3. Tap **Apply condition**.

Medications

To choose a medication:

1. In the **Medications** panel, tap one of the Quicklinks, or from the Medications list, tap **A-Z (All Medications)** to browse all medications in alphabetical order, or use the Search feature to quickly find a specific medication. Medications are also grouped by category below the **A-Z (All Medications)** list option.

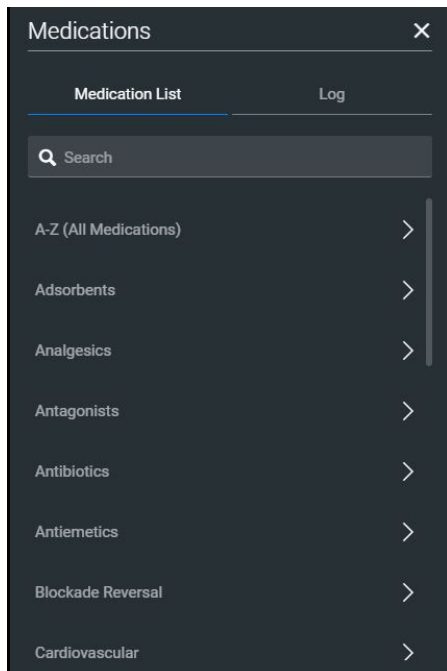


Medications Panel

A menu appears and shows the available medications.

2. Tap on a specific medication to choose a dose and route of administration.


The medication controls appear. The delivery method and amount options, which include pre-defined doses and custom dose options, are displayed.

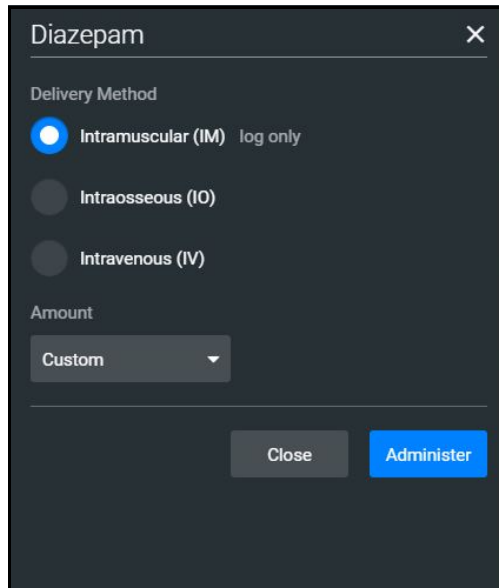

Medication Controls

Under **Delivery Method** options, tap the desired route of administration.

In the **Amount** drop-down menu, select a pre-defined dose or choose Custom to enter a custom dose.

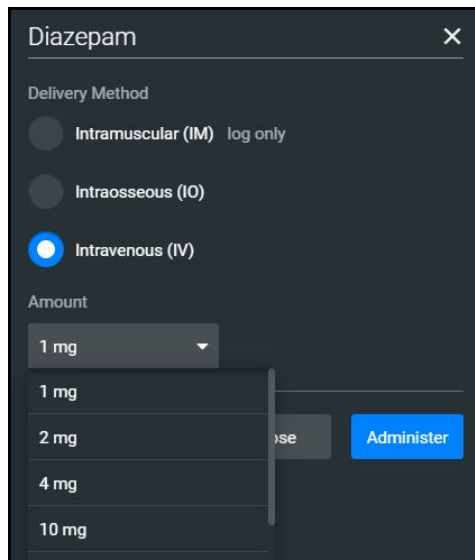

Custom Dose

3. Tap **Administer**.

Note: All administered medications are added to the **Event** log.

In Manual mode, administered medications do not affect the patient's status. Any associated changes to the vital signs or other parameters must be manually adjusted. For more information, see *Changing Patient Status* section of this user guide.


In Modeled mode, medications affect the patient's status unless labeled *log only*. Medications are also logged in the **Log** tab on the **Medications** panel.

The Medications Log

The Medications Log, present in Modeled mode only, tracks the administered medications. If applicable, the infusion rate of the medication is also displayed.

To view the Medications Log:


1. From the Run Screen, tap the **Medications** control.
2. Tap the **Log** tab.

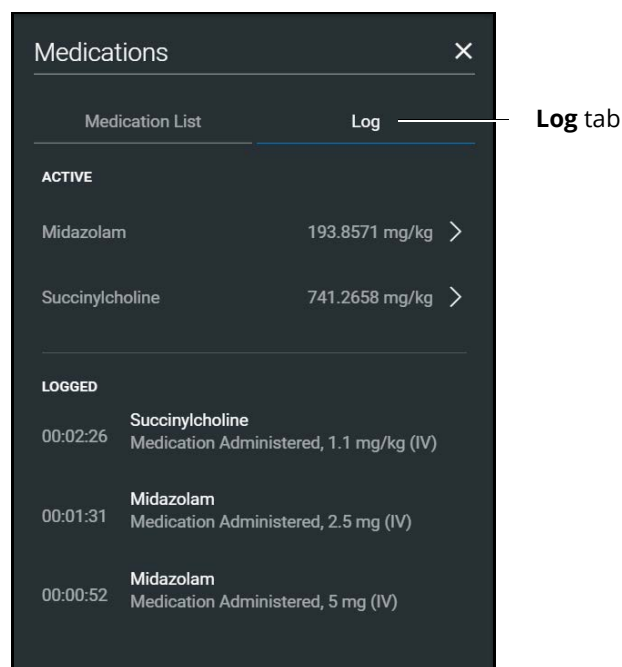

Medications Log

The medications that have previously been administered appear in the *Logged* section of the screen. Medications that are currently impacting the patient physiology appear in the *Active* section of the screen.

Tap an active medication to display medication information.

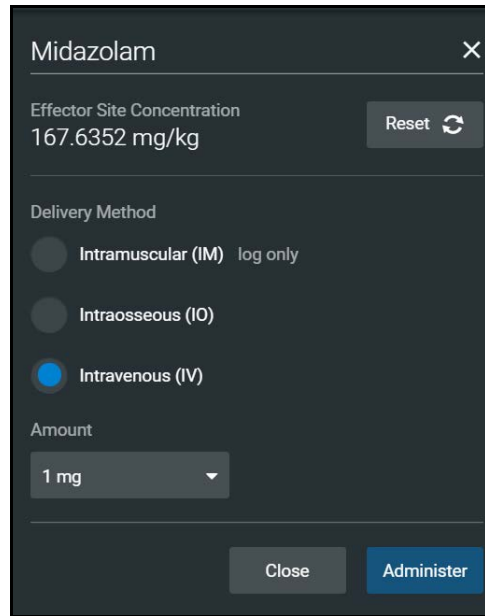

Midazolam

Effector Site Concentration
167.6352 mg/kg

Reset

Delivery Method

Intramuscular (IM) log only

Intraosseous (IO)

Intravenous (IV)

Amount

1 mg

Close Administer

Medication Information

The normalized effector site concentration is shown next to each medication listing. This represents the amount of medication that is affecting the patient physiology.

Reset a Medication

To reset a medication:


1. From the Medications Log, select an active medication.
2. From the medication information, tap **Reset**.
3. When the Reset Effector Site Concentration prompt appears, tap **Reset**.

The medication is cleared from the Active list. The original administration information remains in the Medications Log, however, and the **Events** Log reflects both the administration and resetting of the medication.


Treatments

To apply a treatment:

1. Tap the **Treatments** icon and select a treatment from the Quicklinks, or select a category to see treatments organized by type, or tap **A-Z (All Treatments)**. You can also use the Search function. Navigate through the menus to locate the desired treatment.

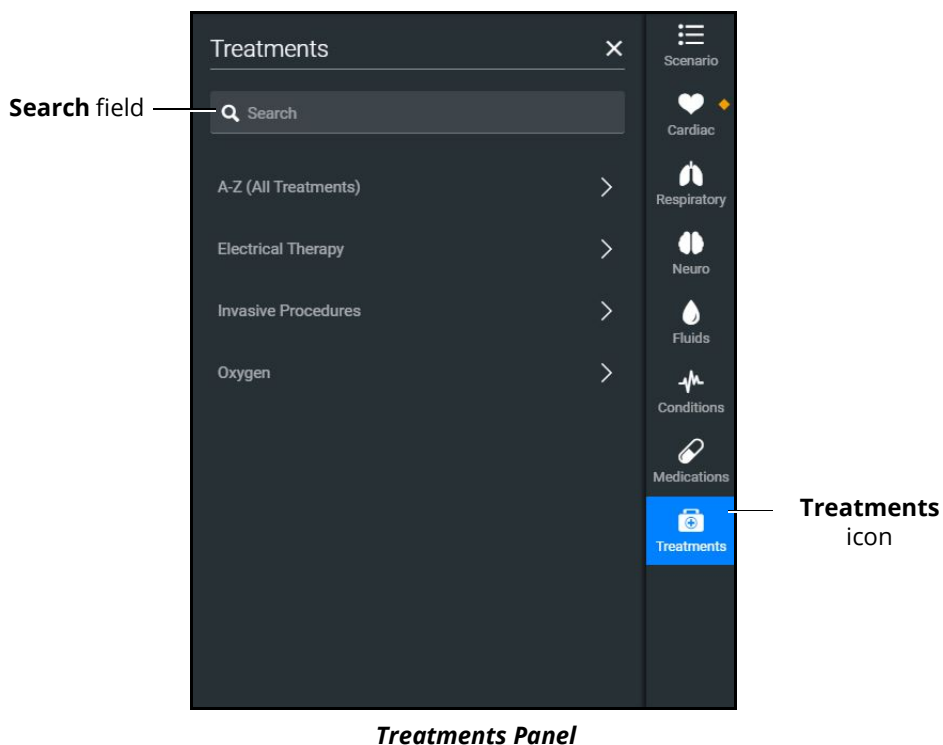

Make further selections as needed, such as the Room Air or LPM of oxygen for the nasal cannula.

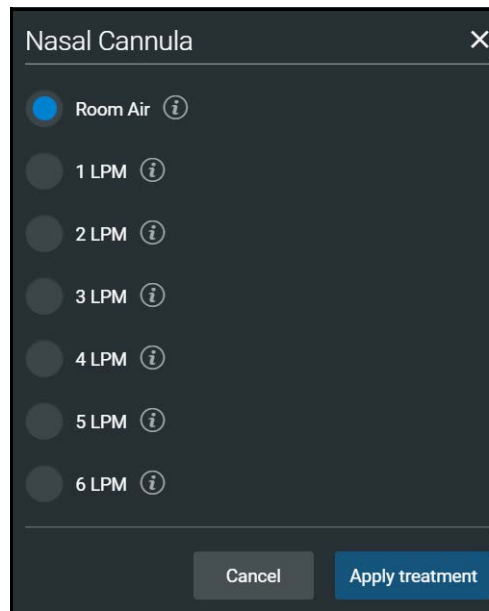


Treatments Menu

2. Select a treatment and tap **Apply treatment**.

Transitioning Scenario States

To move between scenario states from the Run Screen:

1. Tap the **Scenario** icon to expand the scenario panel.

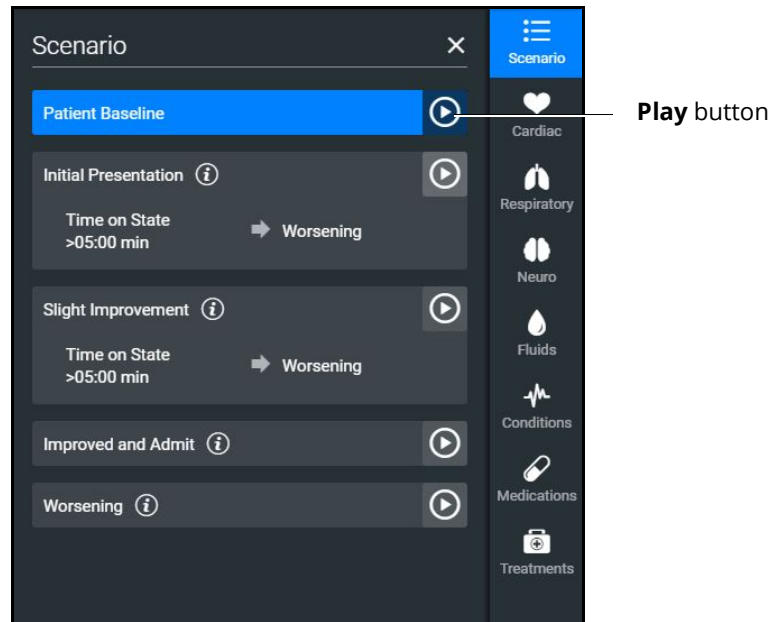


Scenario Management Panel

2. Tap the **Play** button in the desired state to advance from the current state to the desired state.

To pause or continue a scenario, tap the **Pause** or **Play** button from the Scenario Management menu.

SCE Timeline Controls

 The SCE timeline controls are located at the bottom of the Run Screen.



Timeline

- The **Timeline** bar shows the amount of time that has elapsed and markers that have been created.
- The **Marker** button places a marker at the current point in the SCE. The marker can be used to annotate, or to reset the patient's physiology to what it was when the marker was placed. For more information, see *Using Markers* section of this user guide.
- The **Fast-Forward** button accelerates the SCE time to a 4x or 8x speed. This feature is optimal to obtain monitor readings for the learners to reference during scenarios, as well as advance the states and programmed physiology in a shorter amount of time.
- The **Pause/Play** button pauses the SCE (and the simulator) or starts the SCE if it has been paused. The **Pause/Play** button also returns the SCE time to normal speed after **Fast-Forward** has been selected.


Using Markers

To annotate the timeline, tap the white **Marker** button to the right of the timeline.




Timeline with Markers

A blue marker appears on the timeline bar and the Marker panel appears. Notes or comments may be added as needed. Tap **Save**.

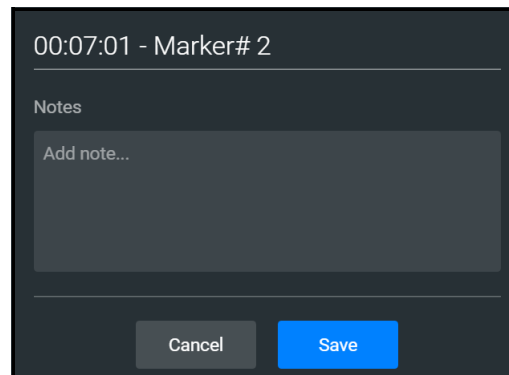

Marker Panel

To return to the patient status at the time a marker was created, tap the marker on the timeline, then tap **Revert**.

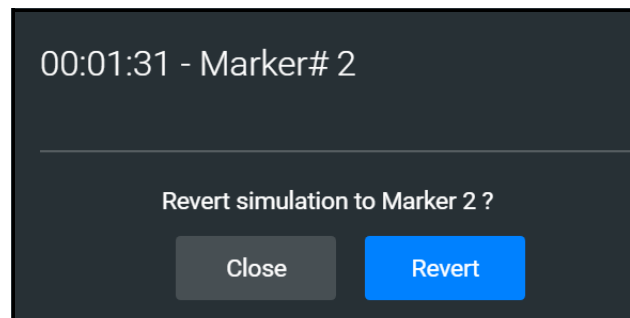

Revert to Marker #2

The patient's status returns to the selected point in the timeline.

Note: When running an SCE, the SCE time continues moving forward and does not reset to the marker time.

PATIENT DISPLAY

The Patient Status appears when running on the fly or running an SCE.


The Patient Status displays the same information except when running an SCE:

- the Current State (e.g. Patient Baseline) appears
- the Scenario icon appears at the upper-right of the Run screen

Patient Status Display

Patient Status display appears in the main frame on the Run Screen when running on the fly or running an SCE.

The status includes numeric data and waveforms, as well as the Patient Baseline if running an SCE.

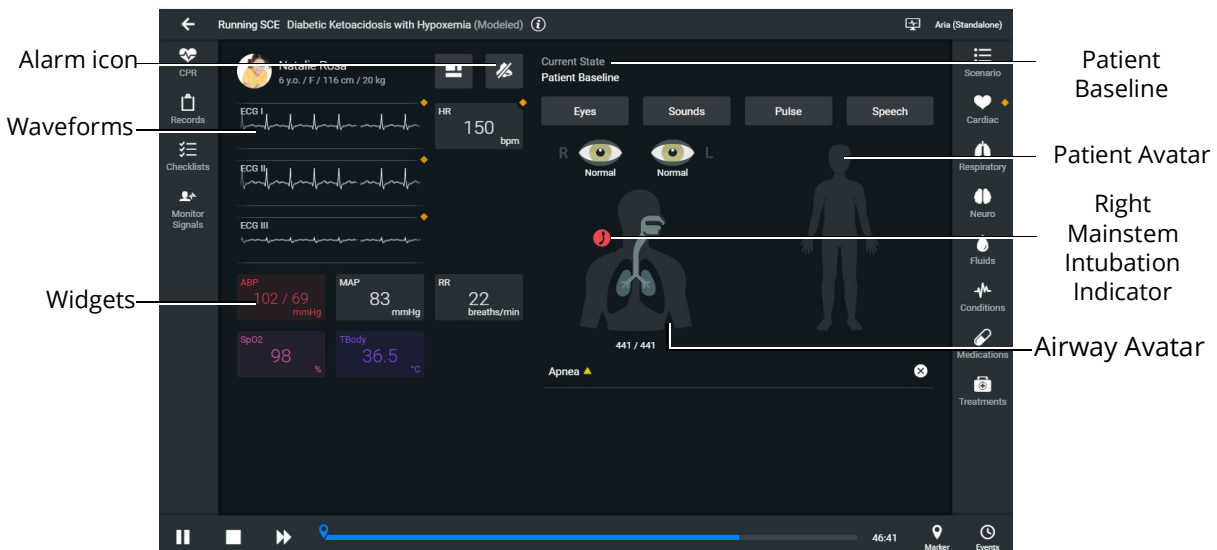

Patient Status Display

From this screen, users can:

- tap the Alarm icon to mute or unmute alarm sounds.
- tap waveforms, numeric widgets, and other parameters to adjust them.
- edit a layout.

Patient Controls

The patient's current state is shown on the Patient Status Display, allowing users to easily adjust parameters and patient states. The following controls are available whether running on the fly or running an SCE:

- Eyes
- Sounds
- Pulse
- Speech
- Respiratory

Eyes


To change Eye states:

1. From the Patient Status Display panel, tap on the Eyes button or the eyes illustration.



Patient Baseline - Eyes Button and Illustration

The Eye states panel appears.

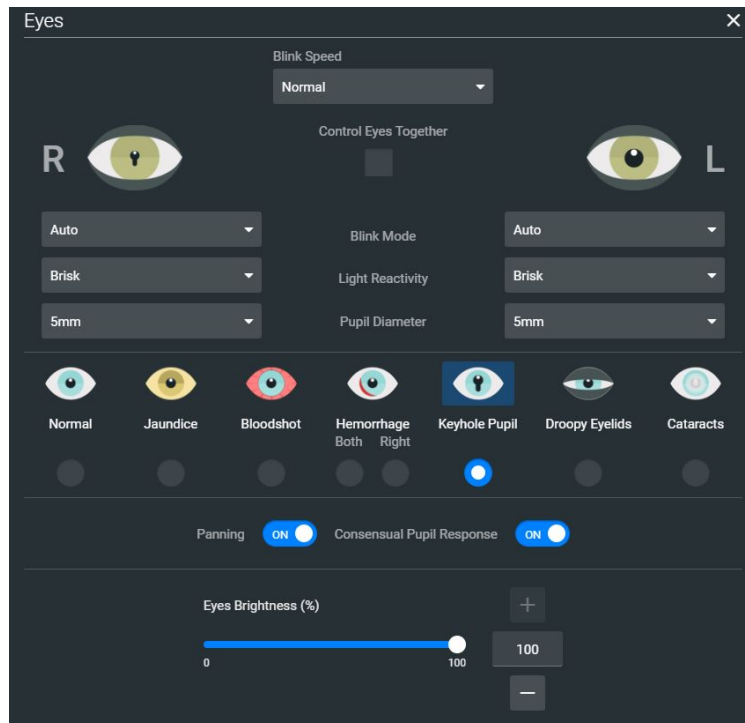

Eye States Panel

2. Adjust eye states including blink speed, blink mode, light reactivity, pupil diameter, and pupil states as desired by using the drop-down menus and toggles. Close the panel (by tapping the **X**) to apply the changes.

Sounds


To change Sounds:

1. From the Patient Status Display screen, tap the **Sounds** button.



Patient Baseline - Sounds Button

2. Adjust Sounds including heart, lung, bowel, and Korotkoff sounds by choosing each sound tab and using the drop-down menus, toggles, and sliders as desired. Close the panel (by tapping the X) to apply the changes.

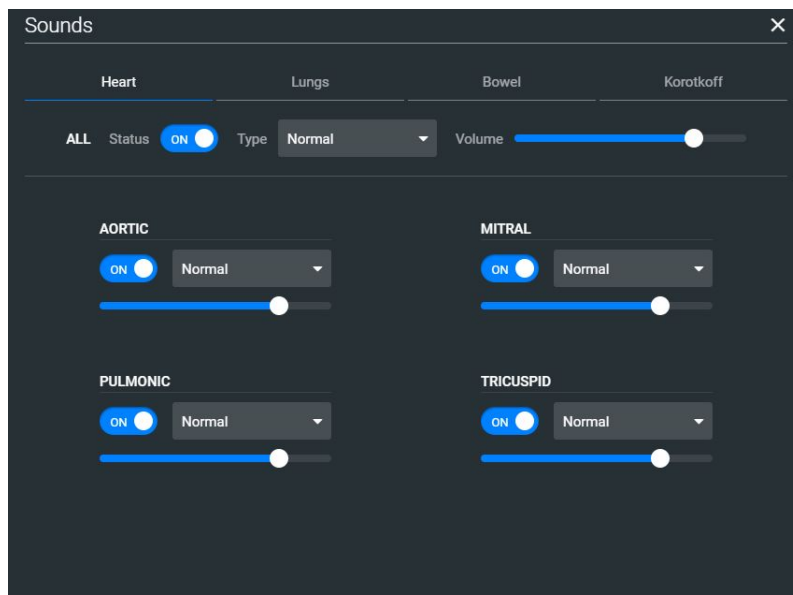


Patient Baseline - Sounds States Panel

Pulse

To change pulse parameters:

1. From the Patient Status Display screen, tap the **Pulse** button.

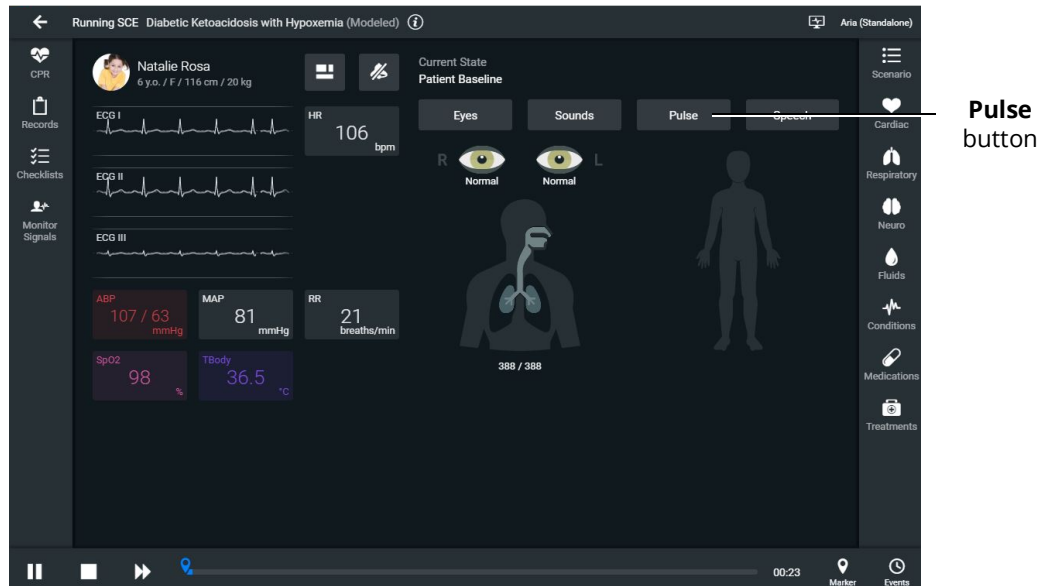


Patient Baseline - Pulse Button

The Pulse panel appears.

The numeric widgets display the *pulse deficit value* for each associated location on the patient body diagram. This is the value at which the pulse will disappear if the systolic blood pressure drops below that value. The pulse deficit values default settings are the accepted clinical values, but these may be modified using the controls, if desired.

2. Tap a numeric widget, and the associated pulse parameter control window will open allowing you to adjust the pulse parameter controls.

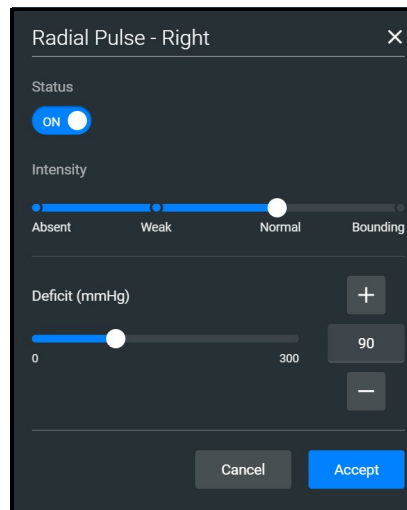

Pulse Parameter Controls


3. Tap the **Accept** button to apply the changes.

Speech

Aria comes equipped with many speech options and vocal speech sounds. Speech can be turned on or off and volume can be adjusted.


To choose speech and vocal speech sounds:

1. From the Patient Status Display screen, tap the **Speech** button.

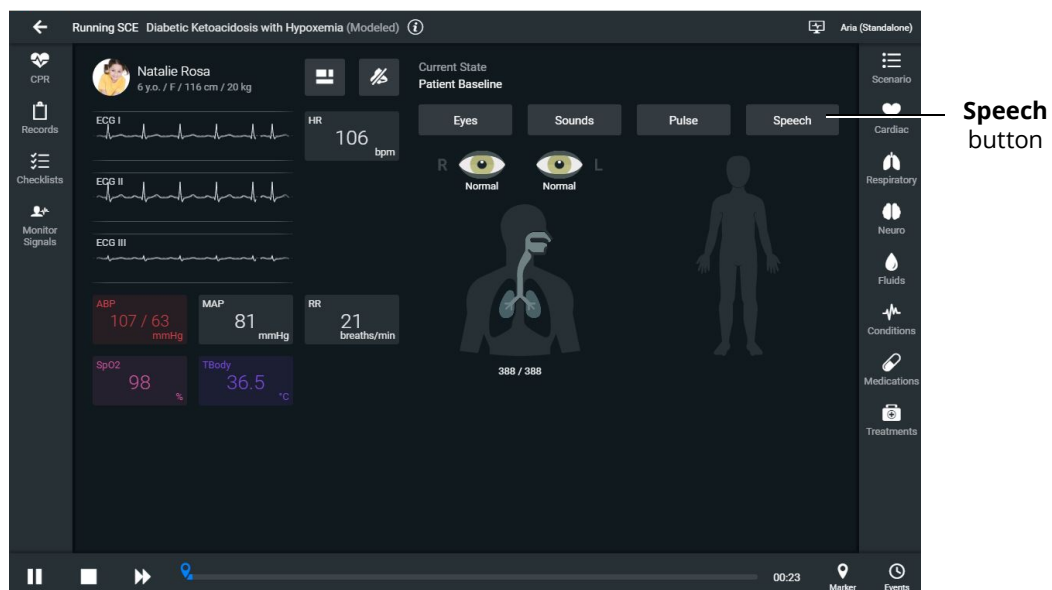

Patient Baseline - Speech Button

The Speech panel appears.

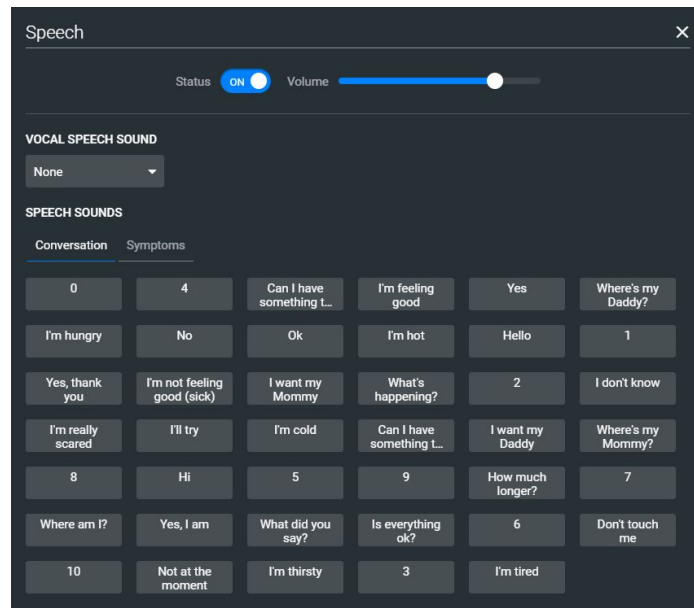


Speech Panel

2. To turn the speech on or off, tap the **Status** toggle. Adjust the slider next to the Status toggle to control the speech volume.
3. Tap the **Vocal Speech Sound** drop-down box to open the menu and select an option as desired.
4. Tap **Conversation** or **Symptoms** to view the list of speech options. Click on a speech option as desired.

Respiratory


To adjust respiratory parameter controls:

1. From the Patient Status Display screen, tap the airway avatar.

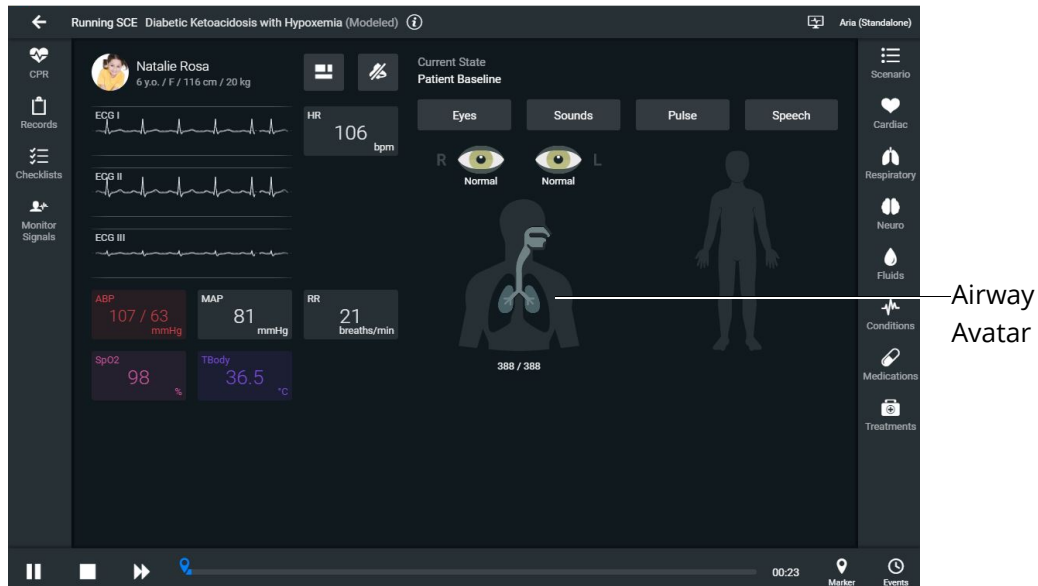

Patient Baseline - Airway Avatar

The Respiratory Parameter Controls panel appears.

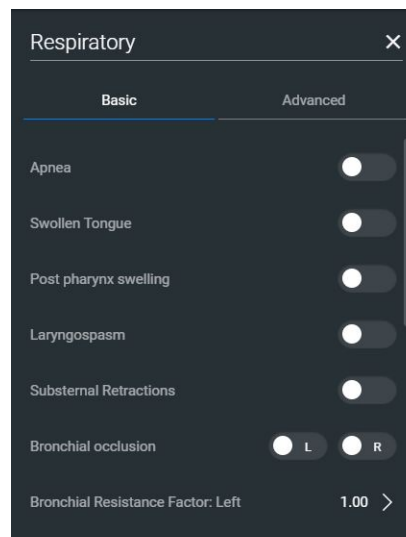

Respiratory Parameter Controls

2. Adjust the controls as desired. Close the panel (by tapping the **X**) to apply the changes.

Change the Control Widget Layout

You can change the layout of the patient vitals display and save parameters as part of the layout.


To change the control widget layout:

1. In the Run Screen, tap the **Patient Status** button.



Patient Status Button

The Edit Vitals Layout & Alarms panel appears.

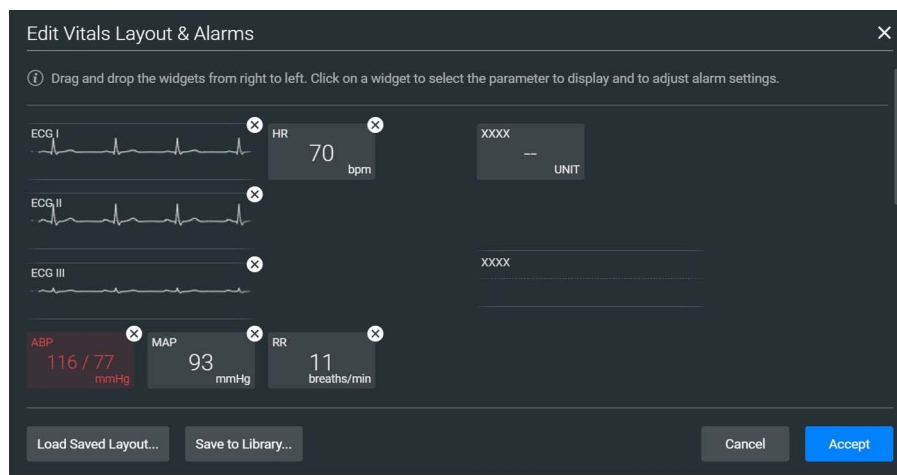

Edit Vitals Layout and Alarms

2. Either begin modifying the baseline layout or tap **Load Saved Layout** to select another patient display layout to modify.
3. Drag and drop a waveform or numeric widget from the right side of the panel to an available display space on the left.

Once in place, the Select Waveform or Select Numeric Widget panel appears.

4. Tap a widget to modify which value will be displayed.
5. To delete a widget, tap the **X** to delete it.


Note: When a widget is deleted, there will be a blank space. Widgets are not rearranged.

6. Select or change the physiological parameter(s) as needed. Tap **Save**.
7. When the Edit Vitals Layout & Alarms panel appears either:
 - Tap **Accept** to update the layout without saving it.
 - Tap **Save to Library** to save the layout

Note: When changes are applied in Runtime, the layout is stored for Runtime only. In the case of the SCE editor, the changes would be stored with the SCE so that a copy of the layout is locally stored with the SCE. This way, they are not impacted by changes to the layouts, or if the SCE is moved to another simulator.

Alarm State

When an alarm is not muted and a value reaches critical state, the associated widget flashes.

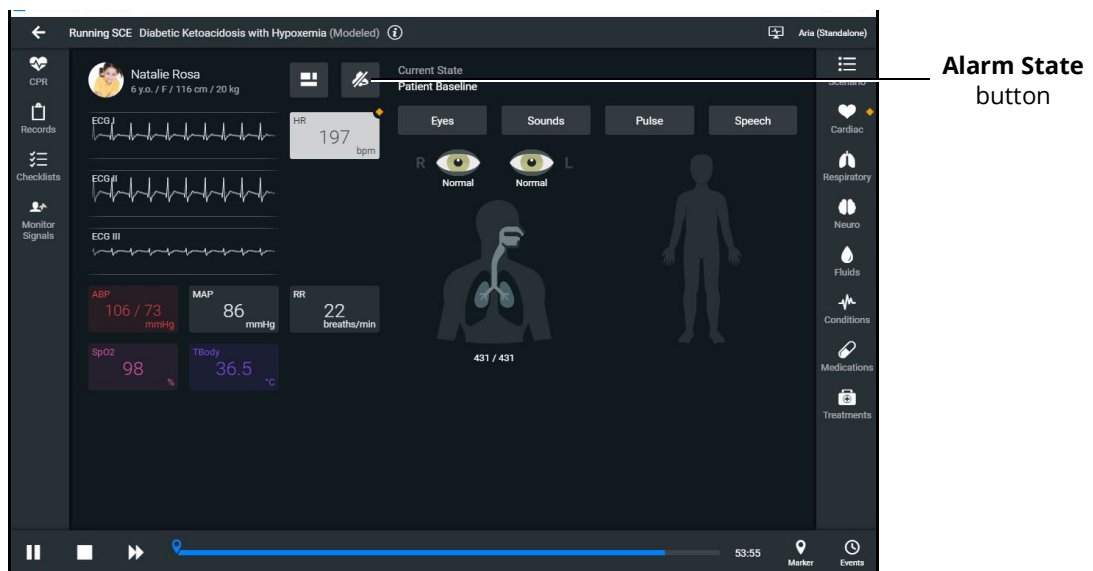

Alarm State Button - Unmuted

To mute the alarms, tap the **Alarm State** button. The icon will turn blue when it is muted.


Editing Parameters

You can edit parameters in one of two ways:

- Parameter Editor
- Quick Edit

To edit a parameter in the Parameter Editor controls:

1. Tap on a waveform or vital sign widget to open the Parameter Editor controls.
2. Tap on the radio button to Override.
3. Use the sliders, text fields, or (+) and (-) to adjust parameters.

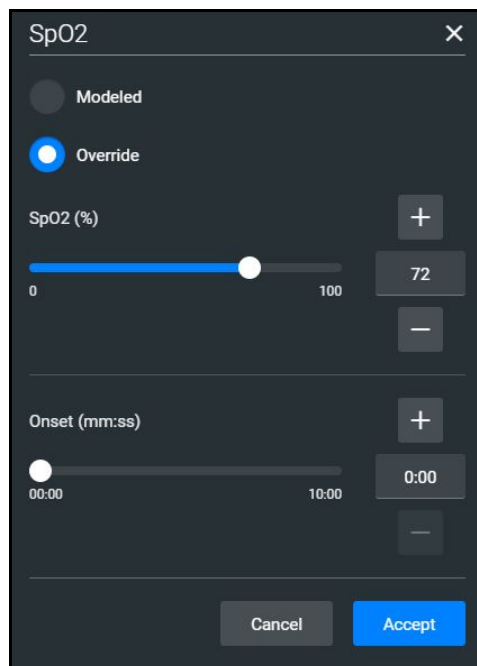


Parameter Editor Controls

4. Tap **Accept**.

To edit a parameter using Quick Edit:

1. Tap and hold a waveform or vital sign widget until (+) and (-) icons appear over the widget.

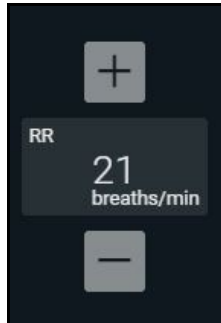

Plus/Minus Widget


2. Tap the (+) or (-) signs to adjust the parameter.
3. Tap outside of the Quick Edit area to save the changes and close the editor.

Panels, accessed from the Run screen, allow the application of conditions, medications and treatments during simulation. Once applied, changes are reflected in the patient's physiology and logged.

MANAGING SCEs

The Maestro SCE Manager is where you can view and print information for all SCEs. You can also create, edit, copy, or delete custom SCEs and Learning Modules.

To access the SCE Manager screen, from the Maestro Home Screen click **SCE Manager**.

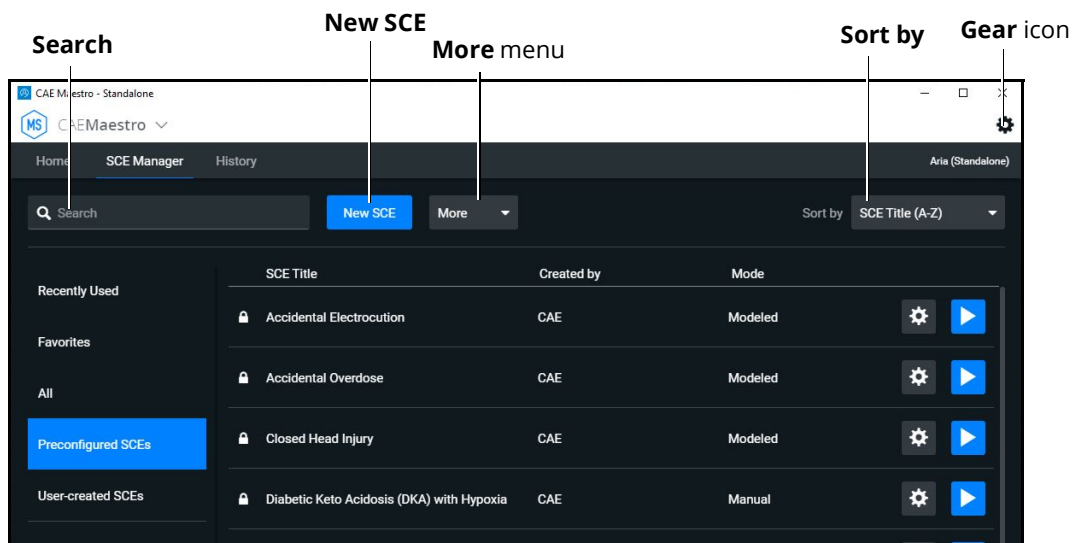

SCE Manager Screen


The default screen shows Recently Used SCEs but you can easily locate any SCE and Module in the SCE Manager.

There are three ways to locate SCEs or modules from the SCE Manager screen:

- In the left column, select either **Favorites, All, Preconfigured SCEs, User-created SCEs** or **User-created Modules**.
- In the **Search** field, type part or all of the name of an SCE or module.
- Tap the **Sort by** drop-down to filter the list by ascending or descending order.

Review an SCE

To review details about an SCE, tap the name of an SCE, or tap the **Gear** icon and select **Review** from the drop-down menu.

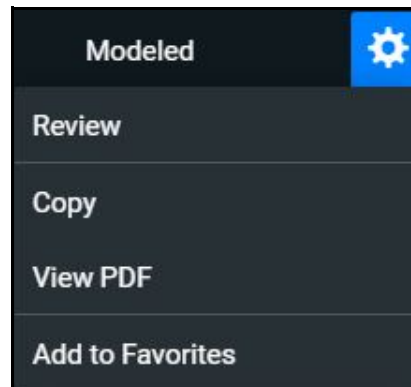


SCE Gear Drop-down Menu Options

The SCE Editor screen appears.

View SCE Details

From the SCE Editor screen, you can select a tab or panel to view details.

The SCE Editor screen is where users can enter specific details for custom SCEs. For more information on entering SCE details into a new SCE, see *Create a Custom SCE* section of this user guide.

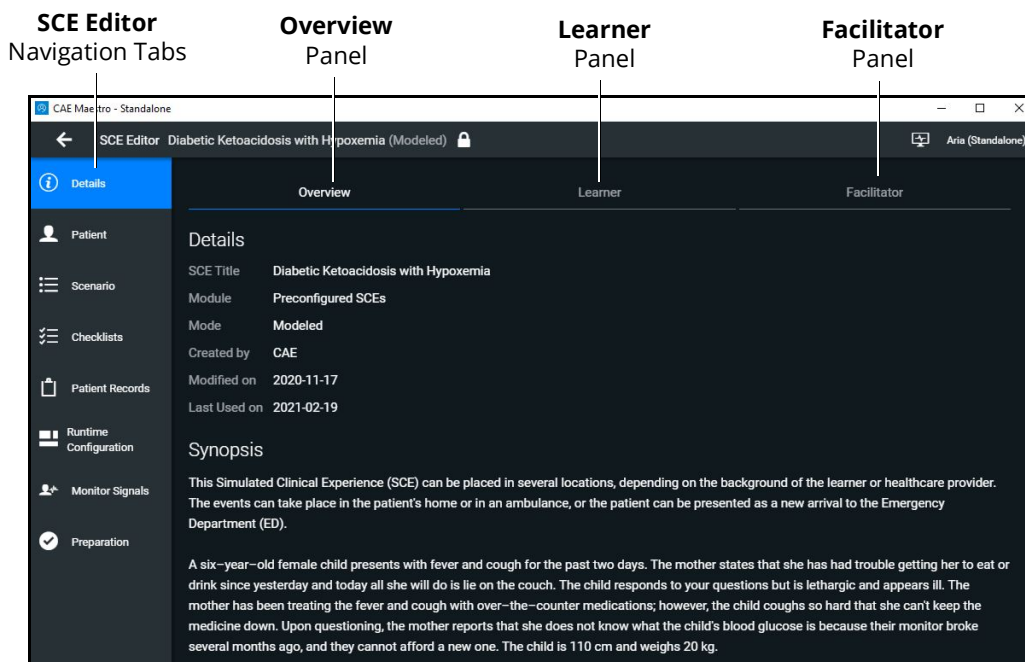

SCE Editor Screen - Overview Panel

SCE Editor Navigation Tabs

- **Details:** Lists relevant information about the SCE. Allows access to the Overview, Learner, and Facilitator panels

For more information, see *SCE Editor Panels*.

- **Patient:** Includes the patient profile information
- **Scenario:** Includes states pertaining to the SCE
- **Checklists:** Includes checklists related to learner milestones for the SCE
- **Patient Records:** Stores patient records including but not limited to:
 - Lab reports
 - X-rays
 - Medical history
 - Healthcare Provider's orders
 - Handoff reports
- **Runtime Configuration:** Allows the creation of Quicklinks for conditions, medications, and treatments
- **Monitor Signals:** Allows users to enable or disable parameters to be displayed on the patient monitor at the start of the scenario
- **Preparation:** Lists recommended equipment and supplies needed to run the SCE and manikin setup notes

SCE Editor Panels

- **Overview:** Includes information about the SCE synopsis and descriptions of the states
- **Learner:** Displays learning objectives, performance measures for each state, and preparation questions
- **Facilitator:** Includes notes, debriefing points, teaching questions and answers, as well as clinical references about the SCE

Create a Custom SCE

You can quickly create an SCE by copying an existing SCE, or by creating a new SCE and entering all of the details. Custom SCEs can be used alone or in a Learning Module. For more information, see *Learning Modules* section of this user guide.


Note: The Lock icon on any screen indicates the SCE was installed by CAE and cannot be edited or deleted.

Copy an SCE

One way to create a new SCE is to make a copy of a preconfigured (locked) SCE and then edit that as desired. To create the SCE from an existing SCE.

To copy an SCE:


1. On the SCE Manager screen, tap the **Gear** icon on the right of the desired SCE.

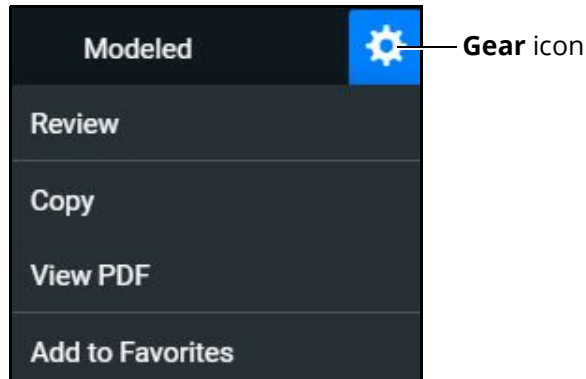

SCE Gear Drop-down Menu Options

2. Tap **Copy**.


The Copy SCE panel appears and lists sections of the SCE you can copy.

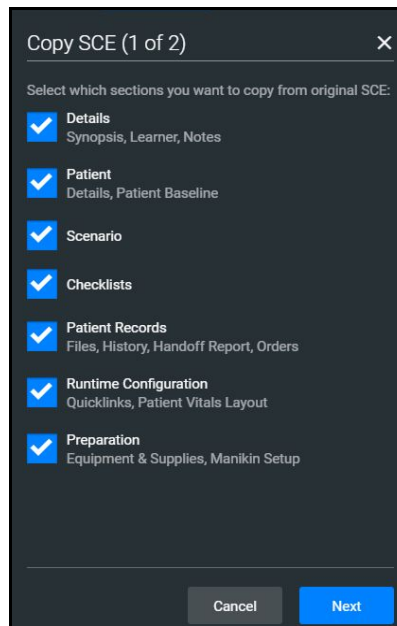

Copying SCE

3. Select the elements of the SCE to copy. When finished, tap **Next**. In the **SCE Title** field, enter a new SCE name.

4. (Optional) Assign the SCE to a Module using the drop-down menu.
5. Tap **Copy**.

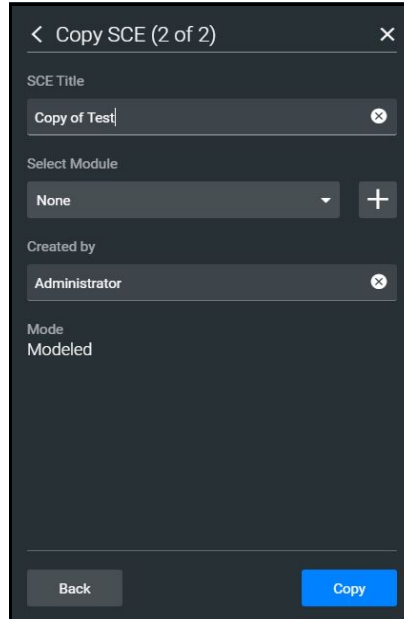

Saving Copied SCE

The new SCE is copied and available for selection from the SCE Manager.

Creating a New SCE

Creating a new SCE is a two-step process.

1. Create the SCE in the SCE Manager as described in this section.
2. Enter details about the SCE in the SCE Editor as described in *Using the SCE Editor* section of this user guide.

To create an SCE:

1. From the SCE Manager screen, tap **New SCE**.


The New SCE panel appears.

New SCE Window

2. Type a title for the SCE in the **SCE Title** field.
3. (Optional) To add an SCE to a module, tap the drop-down arrow and select a module. Or, click the + icon to create a new module.

Select Module


4. Type a name for the module in the Enter New Module Name screen and tap **Add**.

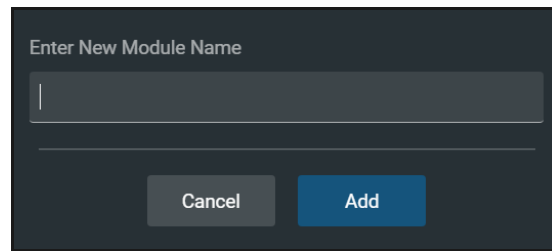

New Module Name Screen

5. Complete the remaining fields in the New SCE screen or select options as required. When finished, tap **Create**.

The SCE Editor screen appears with the **Details** tab displayed.

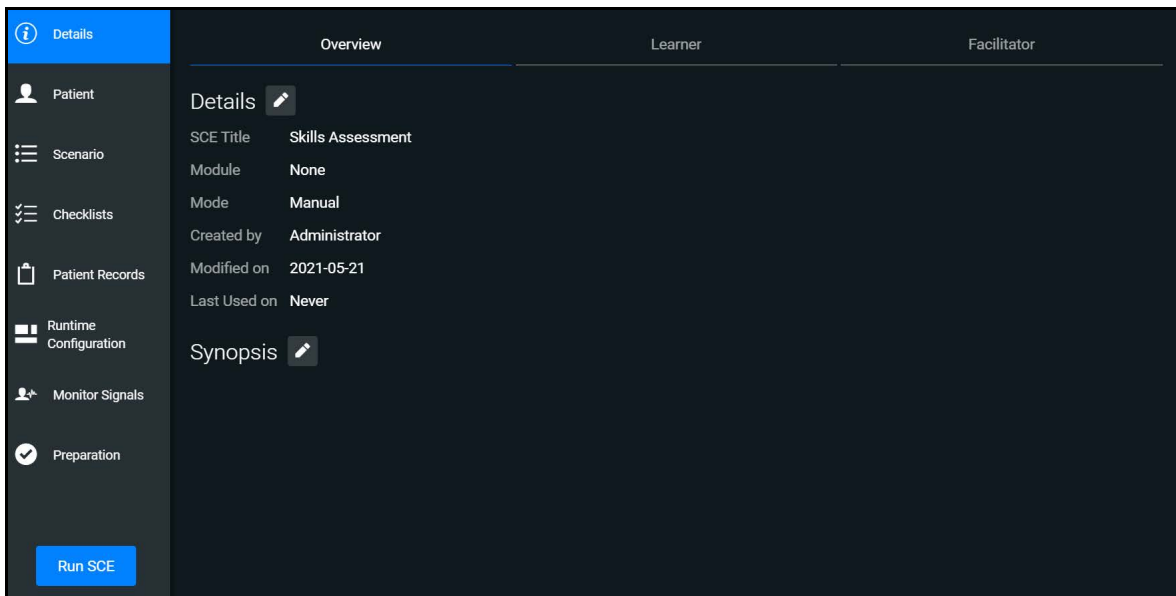

SCE Editor - Details Tab


6. In the **Overview**, **Learner**, and **Facilitator** panels, tap the **Edit** icons to enter additional information.
7. Tap the navigation tabs to enter additional details about the SCE as needed. To learn more, see *Using the SCE Editor* section of this user guide.

Import or Export an SCE

SCEs can be imported from an external device or the hard disk drive where the SCE file is saved. The SCE file extension is *msce*.


To import from the SCE Manager screen:

1. Tap the **More** drop-down menu and tap **Import SCEs**.

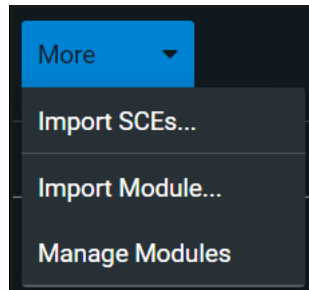

More Drop-down Menu Options


A window opens with the option to add the SCE to an existing learning module.

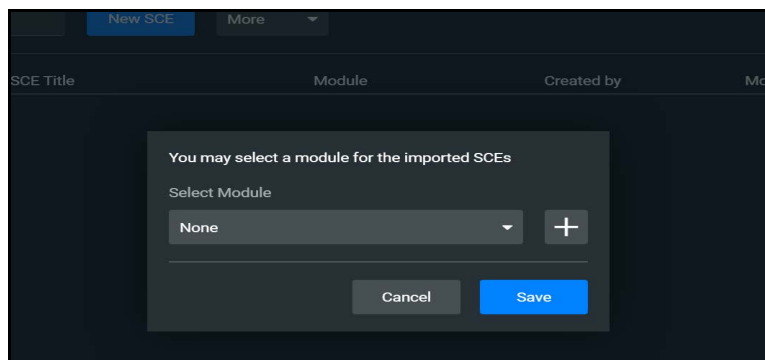

Module Selection Window

2. Choose a module from the drop-down list, or choose **None**.
3. Tap **Save**.

The file explorer window opens.

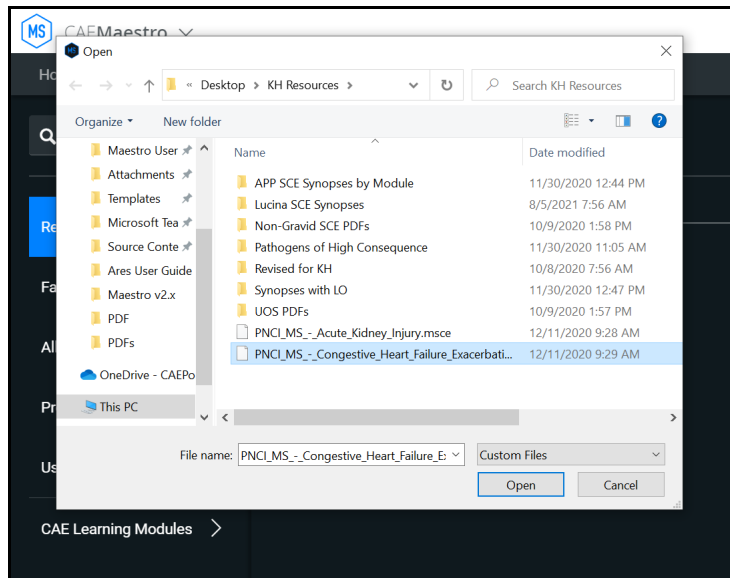


File Explorer Window

4. Choose the SCE file to import and tap **Open**.

To export an SCE:

1. In the **SCE Manager**, tap the gear icon next to the desired SCE to reveal the drop-down menu.

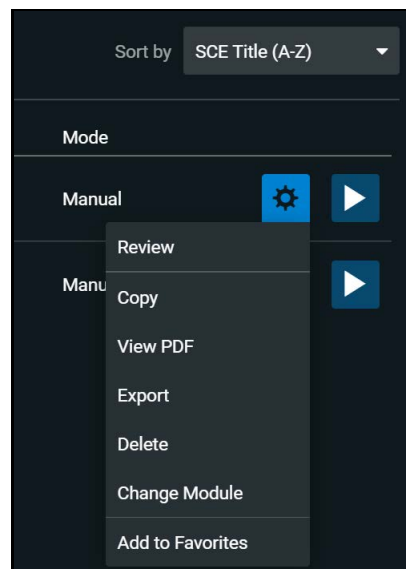

SCE Gear Drop-down Menu Options

2. Tap **Export**.

3. Select the desired location for the *msce* file in your File Explorer window and tap **Save**.

The file is saved in the designated location. If using a tablet, the files can be exported to an external device via USB-C cable.


To view the PDF of an SCE:

1. Tap **View PDF**.
2. In the window pop-up, identify where the PDF file should be saved to and select **Save**. The file can then be opened and viewed from that location. If using a tablet, the files can be exported to an external device via USB-C cable.

USING THE SCE EDITOR

Use the SCE Editor to review or manage any purchased, preconfigured SCEs and to complete or edit information for custom SCEs. From the SCE Editor screen, you can also view checklists and patient records, or delete information as needed.

To access the SCE Editor, tap on the name of an SCE from the SCE Manager screen.

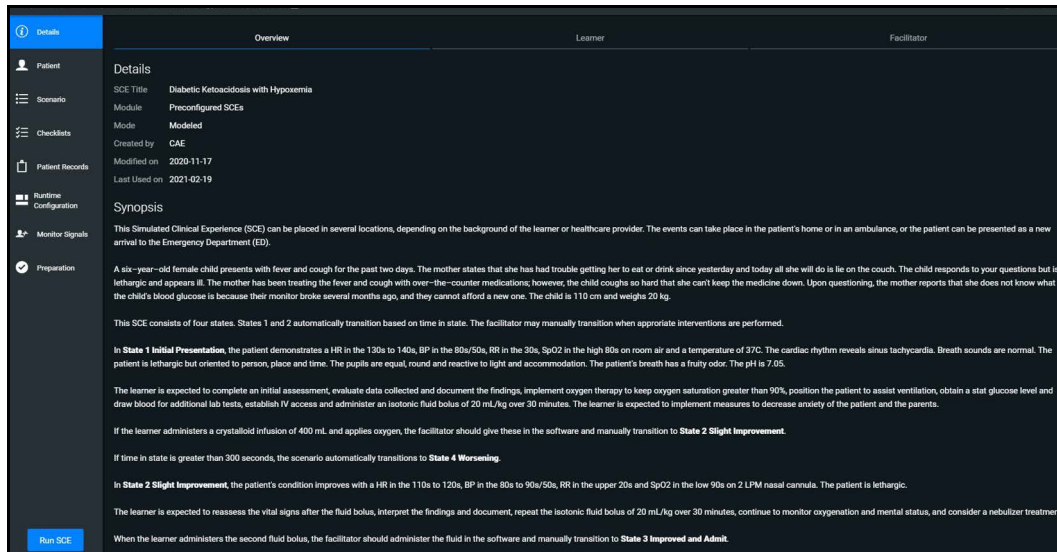

SCE Details

The buttons in the Navigation panel provide options to:

- Run the SCE.
- Edit the patient or scenario.
- Add checklists or patient records.
- Modify the runtime configuration including preparation information.


Some sections in the SCE Editor include a rich-text editor to allow free-form data entry.

Note: If the SCE is locked, you cannot modify or delete information.

Patient Profile

To edit the Patient Profile:

1. From the SCE Editor, tap the **Patient** tab, then tap the **Edit** button.

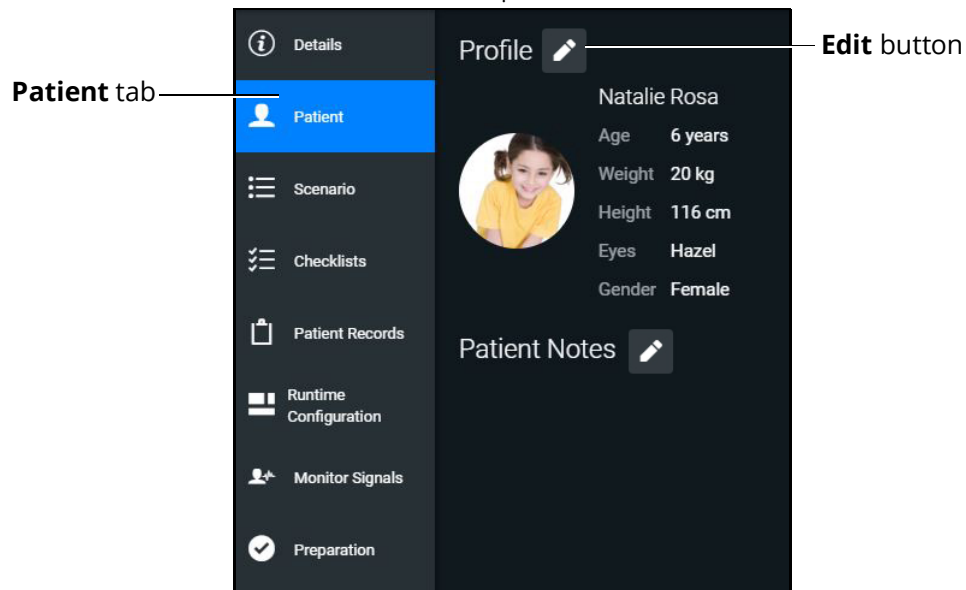

Patient Profile

The Patient Profile Editor appears.

2. Modify the patient's name, eye color, age, gender, weight, and height in the appropriate fields.
3. Tap **Change Picture** to change the patient's picture.
4. Tap **Save**.

IMPORTANT: No part of the patient's profile can contain any special characters, such as / \ : * ? < > % | “


Setting a Patient's Baseline

The patient baseline is the patient's initial status at the start of an SCE.

To set the Patient's Baseline:

1. In the **Patient** section, tap the **Edit** button on the right of **Baseline**.

The Patient Baseline Editor appears.

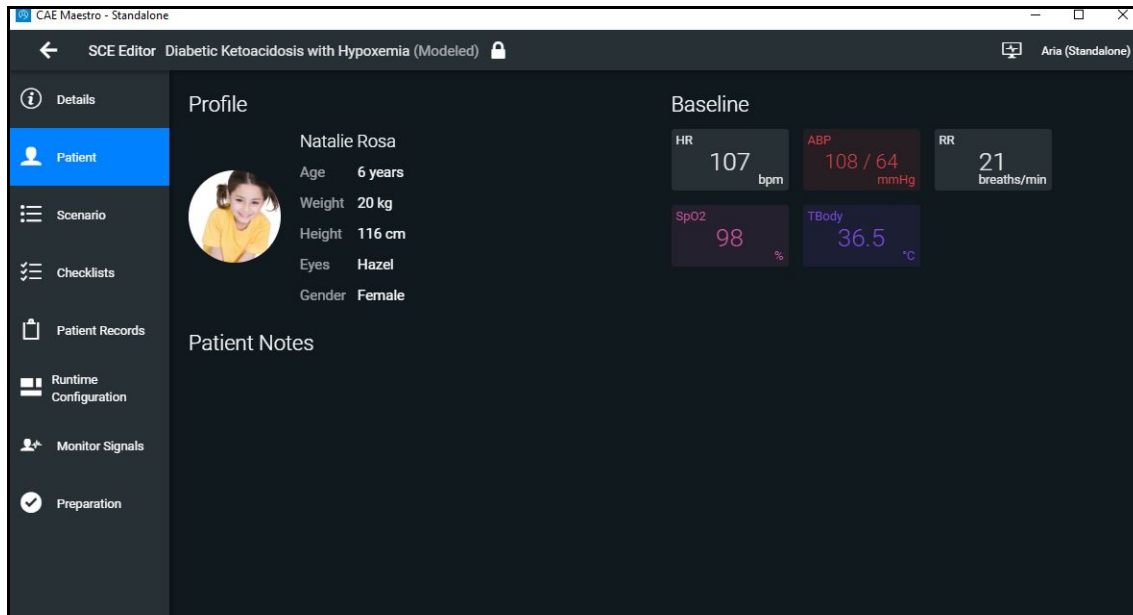

Patient Baseline Editor


2. Set the Patient's baseline status by modifying the desired parameters and tap **Save**.

When the SCE begins, the Patient status reflects the selected baseline settings.

To use the text editor:

1. Where available, tap the **Edit** button.
2. Enter or edit information as needed.

Note: Text can be copied into the fields from Text Editor or Notepad only.

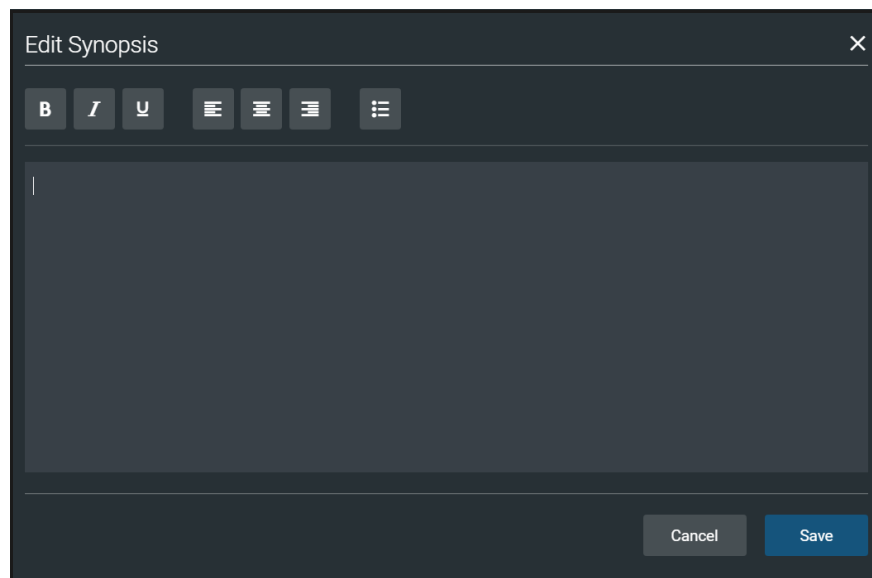

Text Editor

3. When finished, tap **Save**.

Note: Notes can also be added to each scenario state when editing a Scenario.

Scenarios

When creating a custom SCE, users can create new scenarios or modify an existing unlocked SCE using the Scenario Editor or Live Scenario Editor.


Note: The live editor is only available within unlocked SCEs that use the optional Modeled Physiology, and allows live edits to the scenario while running the simulation.

To edit from the Scenario Editor:

1. From the SCE Manager screen, select an SCE to edit.
The SCE Editor screen appears.
2. Tap the **Scenario** tab.
3. Tap the Scenario **Edit** icon.

Note: If it is a brand new SCE, tap the **Open Scenario Editor** button to open the Scenario Editor.

The Scenario Editor appears.

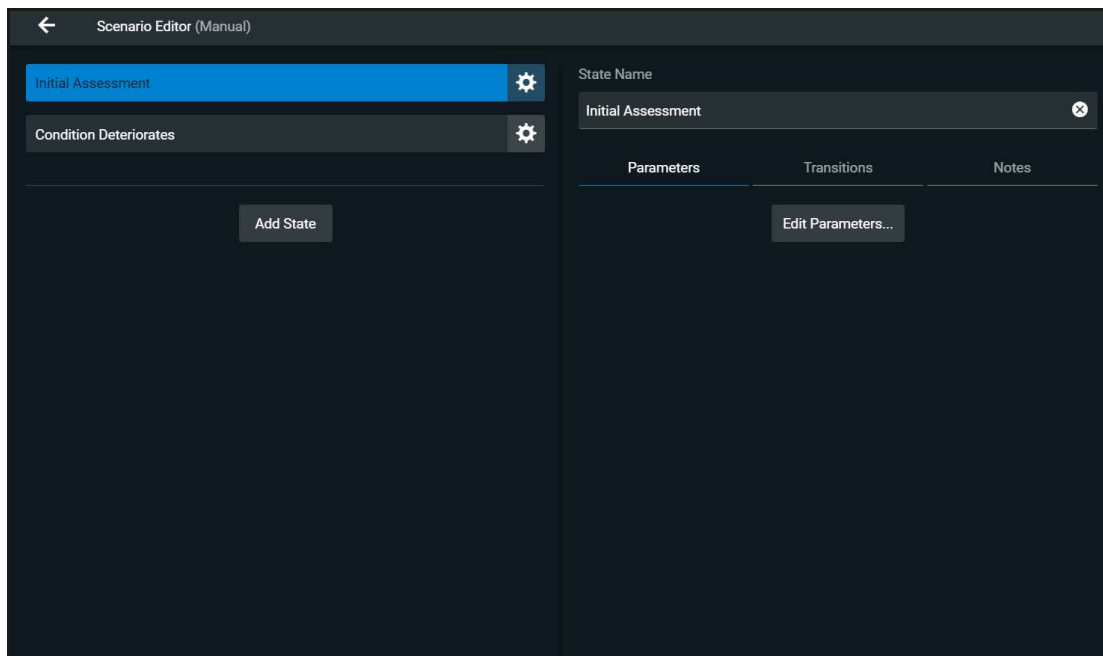


Scenario Editor

4. Tap the **Gear** icon located on the side of a state to do one or more of the following:
 - **Rename:** to rename the state
 - **Copy:** to copy the state
 - **Delete:** to delete the state
 - **Edit Parameters:** to edit the state parameters without jumping to the specified state
 - **Add Transition:** to add a transition from one state to another
 - **Edit Note:** to add state notes

From the Live Scenario Editor, states can be added, modified, and deleted. Patient Profile and other SCE sections can only be modified in the SCE Editor.

To edit from the Live Scenario Editor:

1. From the Scenario Editor screen, tap **Live Scenario Editor**. When the informational window appears, tap **Close** and the Live Scenario Editor screen opens.

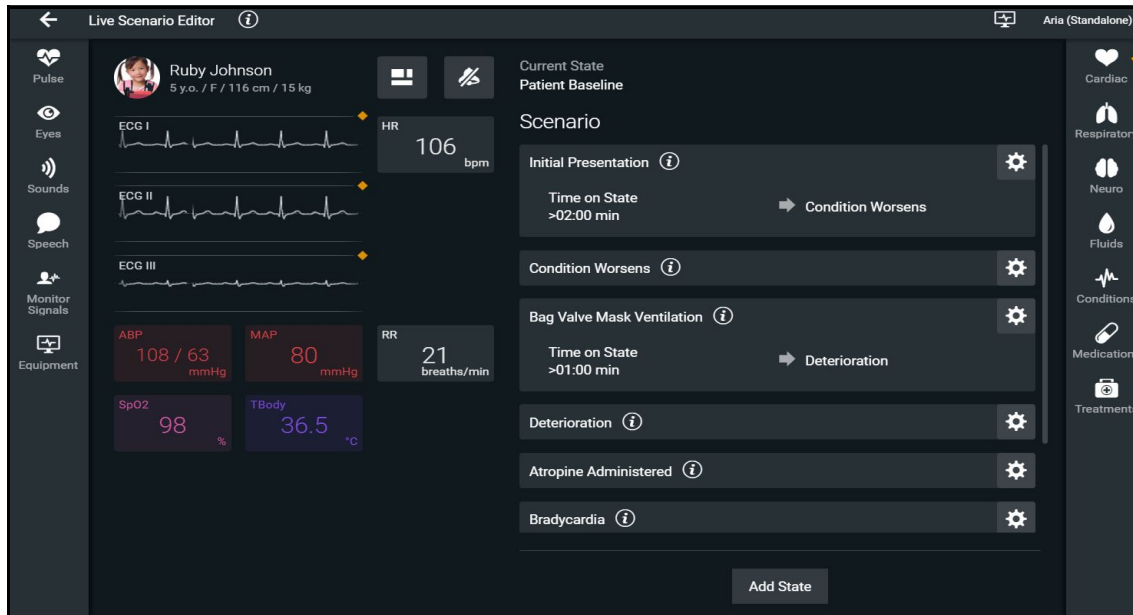

Live Scenario Editor

2. Tap the **Gear** icon located on the side of a state. Then tap one or more of the following:
 - **Jump to State:** allows users to jump to the desired state. It is possible to perform a live edit, by selecting the **Edit Live** button. Once completed, parameter changes will be applied to the state. This option allows users to edit state parameters and see the resulting physiological impact on the patient.
 - **Rename:** to rename the state.
 - **Copy:** to copy the state.
 - **Delete:** to delete the state.
 - **Edit Parameters:** to edit the state parameters without jumping to the specified state.
 - **Add Transition:** allows transitions to be added from one state to another.
 - **Edit Note:** to add state notes.

At any time, the simulation may be restarted by tapping the **Restart Simulation** button at the bottom of the screen.

Add, Modify or Delete Scenario States

A scenario state is comprised of conditions and/or parameters. A state may also include automated transitions to other states and notes for the instructor.

For scenarios, users can:

- Create new states and options.
- Add conditions and/or parameters to a state, or copy a state into a new state.
- Modify or delete portions of a state such as conditions, parameters, transitions, or the entire state itself.
- Add and delete transitions.

Add Scenario States and Parameters

You can add states, conditions, and parameters in the Scenario Editor or Live Scenario Editor.

To add a scenario state:

1. In the Scenario Editor or Live Scenario Editor, tap **Add State**.
2. In the window that appears, enter a name for the new state. Tap **Create**.

The State window appears, where you can add parameters to the state.



New State

To add parameters in the Live Scenario Editor:

1. In the Live Scenario Editor, select the desired state, and then select **Jump to State**. All changes made to controls will be added to active state.
2. Tap the **Gear** icon and select **Edit Live**.
3. Add as many parameters as needed.

Parameters appear consecutively within the state.

4. Move to different states to add or edit parameters as needed using the **Jump to State** feature. Repeat this step as needed through multiple states.
5. When finished, tap **Return** to save and exit the editor.

IMPORTANT: If the physiology of any parameter conflicts with other parameters, Maestro will retain the last parameter entered.

To add parameters in the Scenario Editor:

1. In the Scenario Editor, select the desired state.
2. On the right side of the screen, tap **Edit Parameters**.
3. Add conditions or parameters as needed by selecting them from the list on the left side of the screen. Once added, they appear on the right side of the screen.

Modify or Delete Scenario States or Parameters

To modify a scenario state:

1. In the Scenario Editor or Live Scenario Editor, select the desired scenario state. Then, tap **Edit Parameters**.
2. Make necessary changes. Tap **Save**.

To delete a scenario state in the Scenario Editor or Live Editor, tap the **Gear** icon, then tap **Delete**.

To delete parameters:


1. In the Scenario Editor or Live Scenario Editor, tap the **Information** icon to expand the state.



Information Icon

2. Tap the **Parameters** tab. Tap the **X** icon next to the parameter to delete.

3. Tap **Save**.

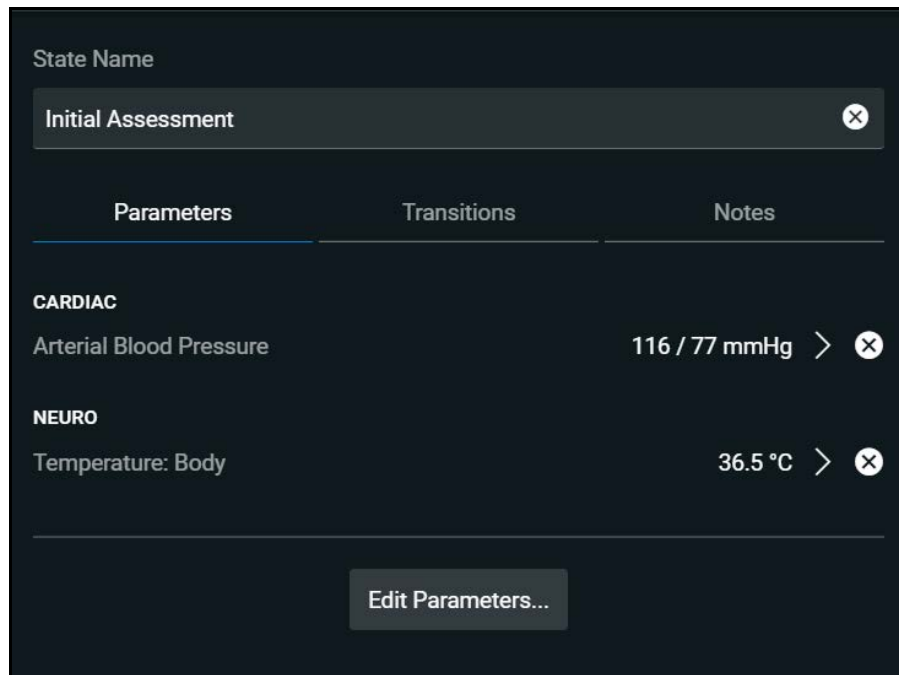

Parameters Tab

Add and Delete Transitions

To add transitions, the scenario must have both an original state and a state that results from the transition. Add or delete transitions from the Scenario Editor or Live Scenario Editor.

To add transitions:

1. In the Scenario Editor or Live Scenario Editor, tap the **Gear** icon next to the desired state.
2. Tap **Add Transition**.

The New Transition panel appears.

The image shows a 'New Transition' dialog box with the following fields and controls:

- Reason for transition:** A dropdown menu currently showing 'Treatment'.
- Select treatment:** A dropdown menu currently showing 'Defibrillation Energy'.
- Criteria:** A dropdown menu currently showing 'Greater than (>)'.
- Defibrillation Energy:** A horizontal slider ranging from 0 to 360. To the right of the slider are three controls: a '+' button, a text input field containing '0', and a '-' button.
- Jump to:** A dropdown menu currently showing 'Condition Deteriorates'.
- Buttons:** 'Cancel' and 'Save' buttons are located at the bottom right of the panel.

New Transition Panel

3. Select a Reason for Transition from the list, then select additional options as prompted.
Example: If the administration of medication is the desired reason for transition, select Medications, then select the desired medication from the list that appears.
4. Once the transition option is selected (ex: Medication), enter the criteria, transition value, and state that results from the transition.
5. Multiple transitions may be entered for a state to create alternate pathways. Follow the same steps to make selections and assign values to the Treatment, Assessment, Vitals, Medication concentration, Fluids, Time in Scenario, and Time in State variable types.
6. When finished, tap **Save**.


To delete a transition in the Scenario Editor or Live Scenario Editor:

1. Tap the **Information** icon next to the state.



Information Icon

2. Select the **Transitions** tab, then tap the **Trash** button next to the transition to delete.

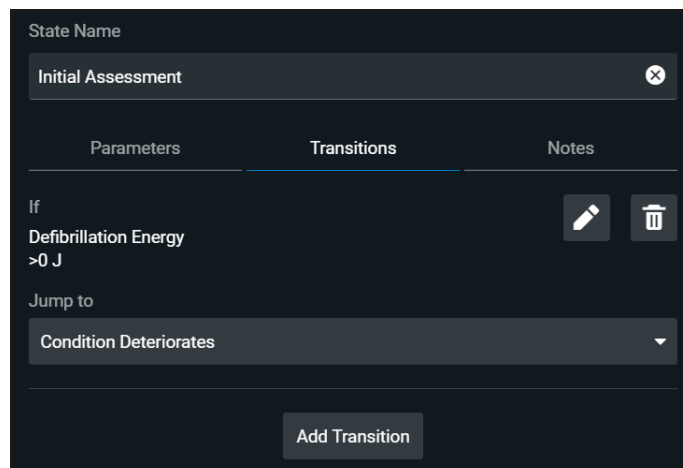

Scenario Editor - Transition Tab

Checklists

You can create new checklists or import existing checklists from the library.

To create a new checklist:

1. In the SCE Editor, tap the **Checklists** tab.
2. When the Checklists panel appears, tap **Create New**.

The New Checklist panel appears.

The screenshot shows the 'New Checklist' panel with the following details:

- Checklist Name:** Initial Assessment
- Checkbox Label:** Performs a complete assessment
- Checklist Criteria:** Performs a complete assessment (with a trash icon)
- Buttons:** Add Checkbox, Add Dropdown, Cancel, Save

New Checklist Panel


3. Enter a name for the checklist in the Checklist Name field.
4. (Optional) Tap **Add Checkbox** to add a checkbox to the checklist.
 - a. Enter a label name in the Checkbox Label field.
 - b. (Optional) Tap **Add Checkbox** to continue entering labels as needed.

- c. Tap **Save**.
5. (Optional) Tap **Add Dropdown** to add list items to the checklist.
 - a. Enter a name for the drop-down list in the Dropdown Label field.
 - b. Tap **Add Option** to provide items that can be selected from the drop-down list.
 - c. Enter a name for the list item in the Dropdown Options field.
 - d. (Optional) Tap **Add Dropdown** to continue entering drop-down lists as needed.
 - e. Tap **Save**.
6. (Optional) Rearrange the checklist order by dragging individual checklists up or down as desired
7. (Optional) Tap the checklist Gear icon next to the created checklist to Save to Library (or to Rename, Edit, Copy or Delete).
8. (Optional) Use the Edit function to:
 - a. Edit the Checklist Name.
 - b. Edit the Checkbox Label.
 - c. Rearrange the order of the Checklist Criteria by dragging any criteria up or down.
 - d. Add a Checkbox or Dropdown.

To import a checklist:

1. In the SCE Editor, tap the **Checklists** tab.
2. When the Checklists screen appears, tap **Import from Library**.

The Import Checklist panel appears and displays all checklists from all SCEs in the system.

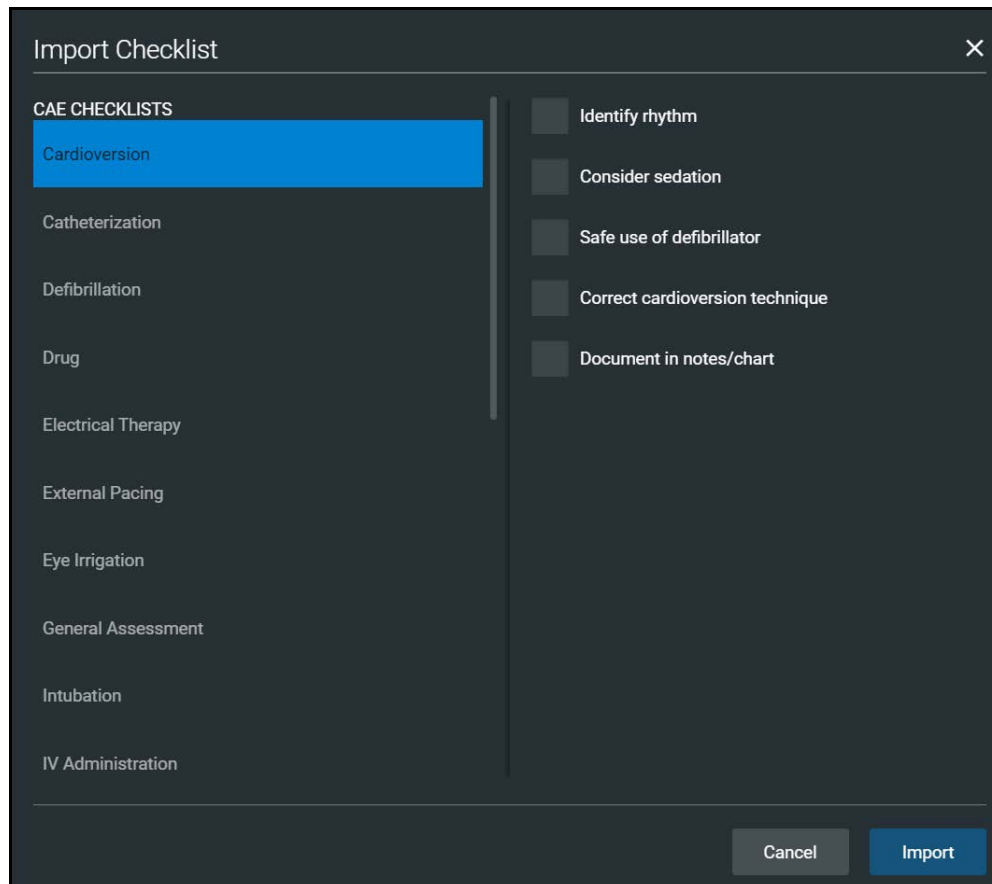

Import Checklist Panel

3. Highlight the checklist.
4. Tap **Import**.

Patient Records

Patient records can be uploaded into Maestro for display in the CAE Patient Monitor software. Once uploaded, a patient record is available for use with the SCE.

Note: A single patient record file cannot exceed 20MB.


To ensure adequate space, delete patient records that are no longer needed.

To access a patient record:

1. From the SCE Editor screen, tap the **Patient Records** tab.

The Patient Records list appears with all available patient records shown.

2. (Optional) To preview a patient record before sending to the Patient Monitor, select the record, and tap the **Preview** button.

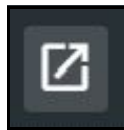

Preview Button

3. Select a patient record, then tap **Send to Patient Monitor**.

Upload Patient Records


You can upload the following file types:

- GIF, JPG, PNG, and XPS images
- MPEG and MOV videos
- PDF documents
- MP3 audio Files

To upload a patient record:

1. In the SCE Editor, tap the **Patient Record** tab.
2. In the panel that appears, tap **Patient Files > Add File**.

The New Patient File panel appears.

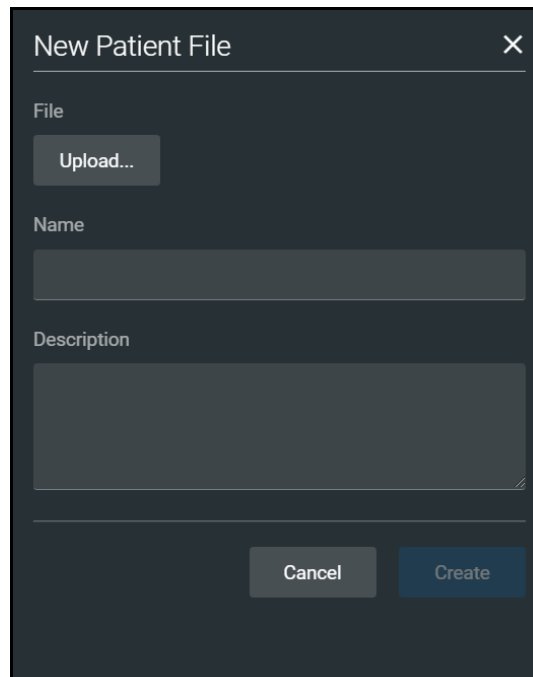

New Patient File - Upload Panel

3. Tap **Upload**. Select the desired file and tap **Open**.
4. When the file name and description appear, modify as needed in the text fields to reflect the desired file name and description.
5. Tap **Create**.

Edit or Delete Patient Records

You can only change the name or description of the patient record. You cannot edit the content of the record from the Patient Record tab.

To edit a patient record name:

1. From the list of Patient Files, tap the **Gear** icon next to the desired file.
2. Tap **Edit**. Change the **Name** or **Description** as needed.
3. Tap **Save**.

To delete a patient record:

1. From the list of Patient Files, tap the **Gear** icon next to the desired file.
2. Tap **Delete**.
3. When the message appears to confirm your selection, tap **Delete**.


Runtime Configuration

Tap **Runtime Configuration** to access the Quicklinks setup as well as the Vitals Layout & Alarms setup screen.

Quicklinks Setup

From the Quicklinks Setup screen within the SCE Editor, conditions, medications, and treatments can be preconfigured for the SCE by creating Quicklinks. For more information about using Quicklinks, see the *Quicklinks* section of this user guide.

To navigate through available conditions, medications, and treatments, tap the **Conditions**, **Medications** and **Treatments** buttons.

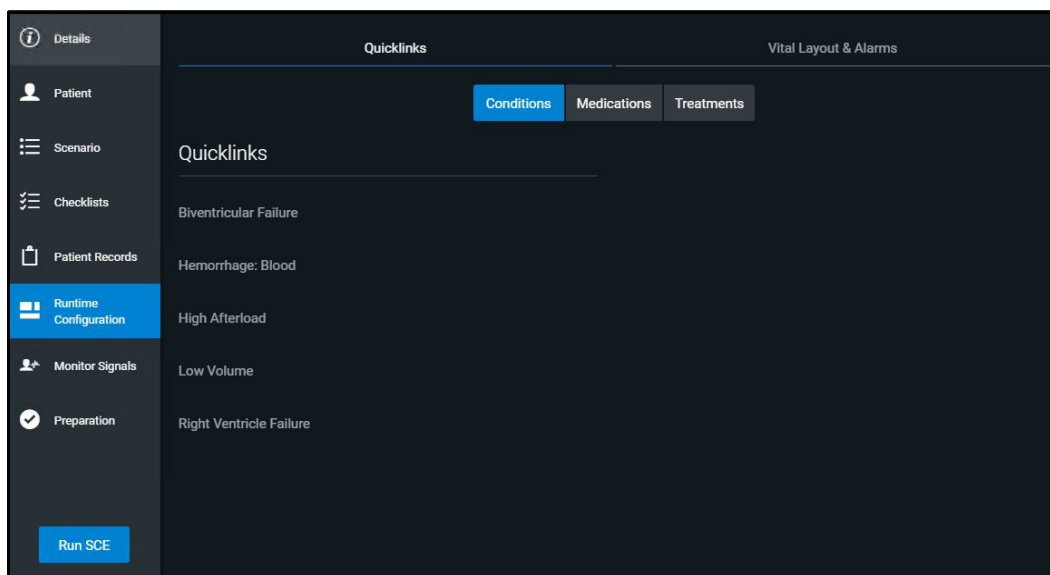

Runtime Configuration Quicklinks Setup Screen


To create a Quicklink, select an item from the **Conditions**, **Medications**, or **Treatments** lists.

To remove a Quicklink, deselect the option.

Edit Vital Layout & Alarms

To edit the vital layout and alarms, tap the **Vital Layout & Alarms** tab.

Any current vital widgets and alarms appear. If the SCE is new, click the **Edit** button to the right of **Vital Layouts & Alarms** and begin adding vital widgets and alarms by dragging the desired widget template from the right side of the screen to the left.

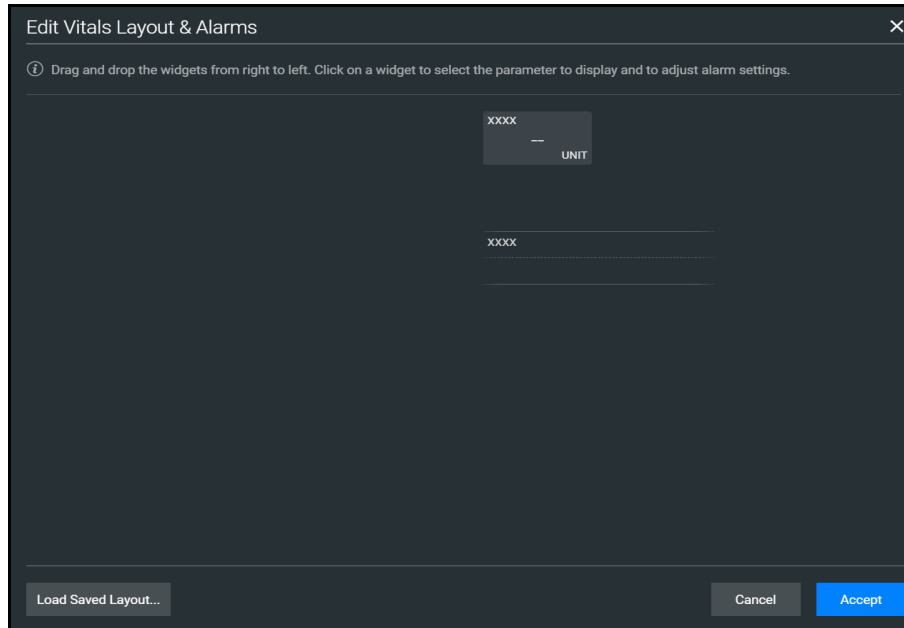

Runtime Configuration Vital Layout & Alarms Screen

Upon dragging the widget, the Select Numeric Widget or Select Waveform box will appear. Select the desired vital or waveform from the available options, modify alarms and thresholds as desired, and tap **Save** when complete.

The option to load a saved layout is also available by selecting the **Load Saved Layout** button.

When all modifications are complete, select **Accept**.

Preparation


From the Preparation tab, users can create a list of equipment and supplies, or notes about preparing the manikin for the SCE.

To create a list preparation items:

1. From the SCE Editor, tap the **Preparation** tab. Tap either **Equipment & Supplies** or **Manikin Setup**.
2. Tap the **Edit** button and enter items.
3. Tap **Save**.

ADMINISTRATIVE TOOLS

The Maestro software includes administrative tools to access and manage system settings, preferences, and additional information such as historical data about simulation sessions.

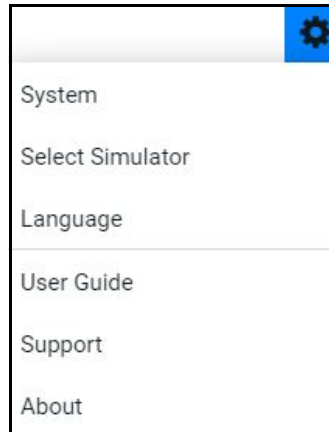

Administrative Tools

Access administrative tools via the **Gear** icon located on the upper-right corner of the Maestro screen.



Gear Icon

Select one or more of the following to access system settings:


- **System:** Access information about the type of simulator, the Maestro software version, the type of simulator, Data Management, System Configuration, Preferences, Performance Metrics, License Manager, and Content Library.
- **Select Simulator:** Change the simulator (only available when using Maestro Standalone)
- **Language:** Change the Maestro language
- **User Guide:** Access the user guide (English version). Go to: www.caehealthcare.com and click the **Support** link
- **Support:** Access CAE Support contact information
- **About:** Access information about the CAE Maestro software version, the type of simulator and the serial number.

System Administration

From the System Administration screen, you can access system information, set preferences, and manage licenses and performance metrics for CAE Maestro.

System Information and Settings

To access the System Settings, from the Home screen, tap the **Gear** icon. Then select **System**.

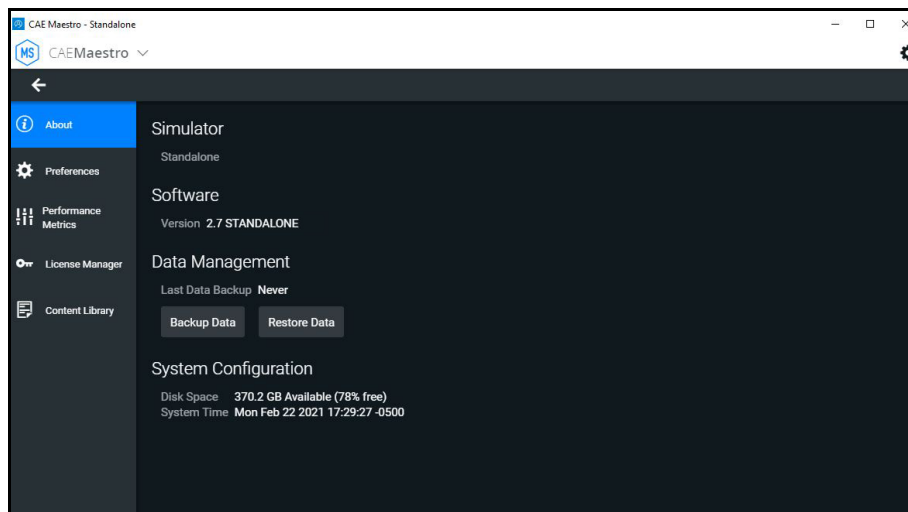

System Administration


From this screen, you can select:

- **About:** to view software version and system configuration
 - Under Data Management, you can backup and restore data through the **Backup Data** and **Restore Data** buttons respectively.
 - CAUTION:** Restoring data permanently replaces all current data on the device.
- **Preferences:** to change settings to different software features
 - **General Preferences:** to adjust language, sweeper speed, units of measure (metric or imperial), pressure, temperature, energy (electrical therapy), airway pressure, CO2 units, O2 units, Anesthetic Gas Pressure, and color preference
- **Performance Metrics:** to change settings to CPR Training Target Values, including compression rate, compression depth, and ventilation volume
- **License Manager:** to access license information (from here, you can start a trial of the Maestro software, and activate or deactivate the license)
- **Content Library:** to access and create new Patient Files and Custom Speech Files

Set the Default System Language

To set Maestro's language:

1. From the Home screen, tap the **Gear** icon and from the drop-down menu, select Language.

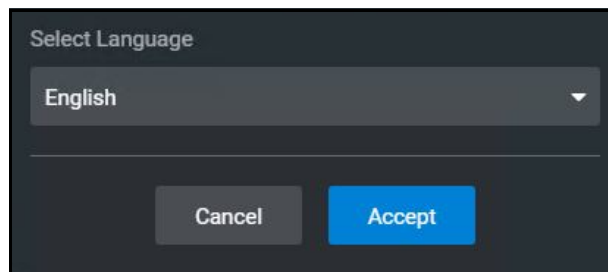

Select Language Window

2. Select the desired language from the drop-down menu.
3. Tap **Accept**.

Note: Language can also be set from **System > Preferences**.

Additional Administrative Tools

You can access the CAE Maestro User Guide, support information, or system information.

From the Home screen, tap the **Gear** icon, then select one of the following:

- **User Guide:** to download the English-language user guide (Go to: www.caehealthcare.com and click the **Support** link)
- **Support:** for CAE Support contact information
- **About:** to access information about the CAE Maestro software version, the type of simulator, and the serial number

SCE Management

The SCEs in Maestro are managed in the SCE Manager screen. For more information on managing and modifying settings of the SCEs using the SCE Manager, see *Using Maestro* section of this user guide.

Session History - History Screen


The History screen displays a log of simulation event data.

Start Time	Duration	Simulator	Session Name	SCE Title
2021-02-22 18:02	0min	Standalone	Aria session	Obstructed Airway (Modeled)
2021-02-19 16:08	58min	Standalone	Aria session	Diabetic Ketoacidosis with Hypoxemia (Modeled)
2021-02-19 15:46	20min	Standalone	Aria session	Running on the Fly (Modeled)
2021-02-17 19:02	28min	Standalone	Aria session	Diabetic Ketoacidosis with Hypoxemia (Modeled)
2021-02-17 17:14	1h 48min	Standalone	Aria session	Diabetic Ketoacidosis with Hypoxemia (Modeled)
2021-02-17 17:13	0min	Standalone	Aria session	Running on the Fly (Modeled)
2021-02-17 16:52	14min	Standalone	Aria session	Diabetic Ketoacidosis with Hypoxemia (Modeled)

History Screen

To view session data:

1. Tap the **History** tab.
2. Tap the **Gear** icon for the desired simulation session, then select **View Session Data**.

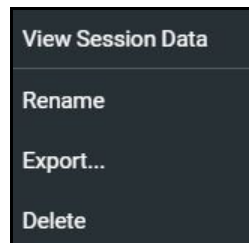

History Log Options

The Event Log, Physiological Data, CPR Data, and Checklists appear. Tap the Physiological Data for a session to view all physiological data that occurred during the SCE.

You can export data to a CSV or MSS file (session file in Maestro format) and store it on an external device.

To export data from the History screen, tap the **Gear** icon for the desired simulation session, then tap **Export**.

USING THE CAE PATIENT MONITOR

CAE’s Patient Monitor is one of the many types of equipment applications that CAE offers to enhance the simulation learning experience. The patient monitor emulates a typical bedside monitor and allows you to view the patient’s physiology expressed in waveforms and numeric values. In this User Guide, information is provided to access and configure the Patient Monitor software.

The software can be launched from the CAE Maestro Instructor Tablet, or another computing device, provided it has joined the simulator’s wireless network and meets the minimum system requirements. Refer to the *System Requirements* section of this User Guide.

Accessing the Patient Monitor


To launch Patient Monitor :

1. With an SCE running, select the **CAE Patient Monitor** icon in the upper-right corner of the SCE Run screen.



SCE Run Screen - CAE Patient Monitor Icon


The patient monitor screen appears.

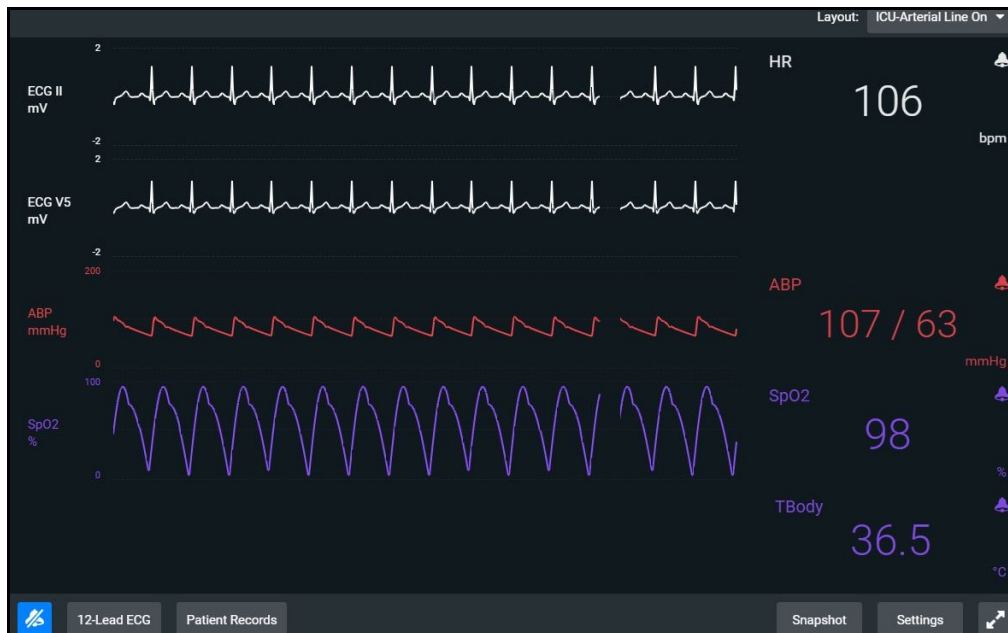

CAE Patient Monitor

- The CAE Patient Monitor can also be accessed from the CAE Maestro Home screen. Tap the CAE Maestro Application drop-down menu in the upper-left corner of the screen and select **CAEPatient Monitor**.

Note: An SCE must be running in the Maestro software for any physiological data to appear on the monitor. The CAE Patient Monitor can only show one patient at a time.

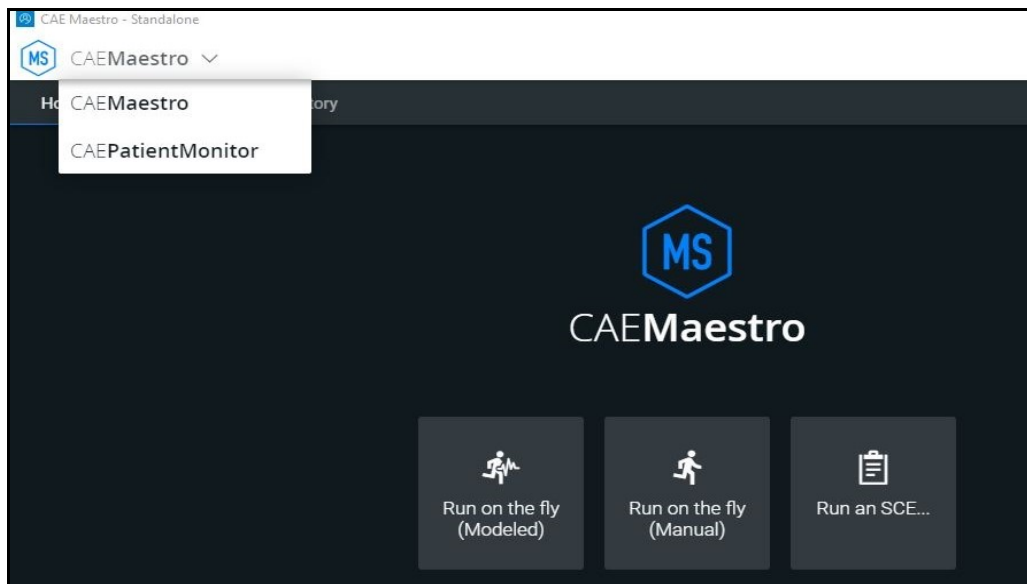

CAE Maestro Application Drop-down Menu

Settings


CAE Patient Monitor settings options allow for configuration preferences. The following selections are available on the settings panel:

- Layout - customize specific vital signs, colors, waveforms, numerics and specific location of the parameters on the display
- Audio Setup- specify alarm ranges and suspension times
- Sweeper Speed - adjust intervals from 3 to 60 seconds for sweeper speed
- Language - select preferred language

To access the Settings panel:

1. Tap **Settings** in the lower-right corner of the screen.

The Settings menu appears. The **Layout** tab is displayed by default.

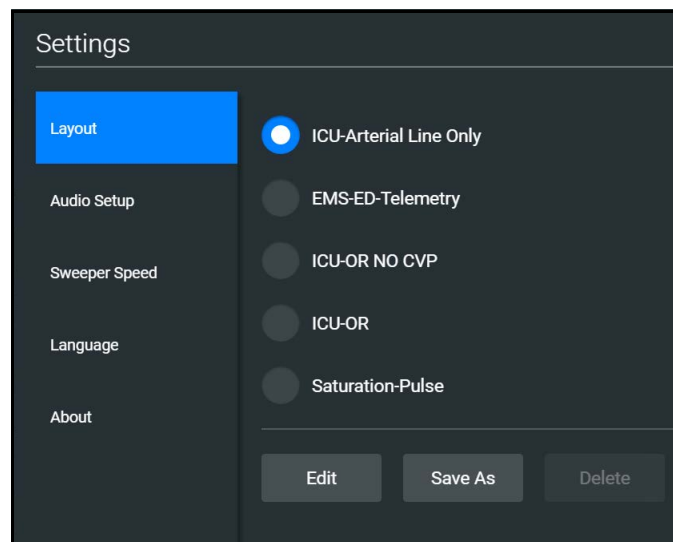


Settings Panel - Layout Options

Layout

To access the Layout options in CAE Patient Monitor:

1. Tap the **Settings** tab at the lower-right corner of the Patient Monitor screen. The Layout tab is displayed by default.
2. From the Layout options, select a layout.

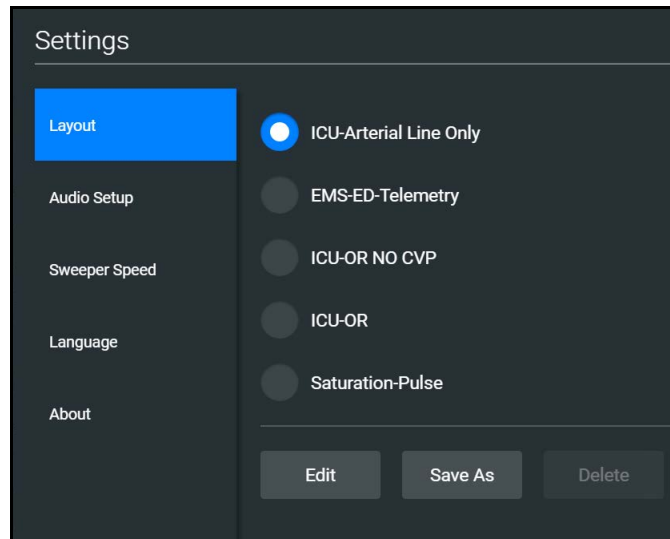

Settings Panel - Layout Options

3. Tap **Edit**.


The Layout Edit screen appears.



Layout Edit Screen

4. Select a signal to edit its parameters.


The Insert a parameter screen appears.

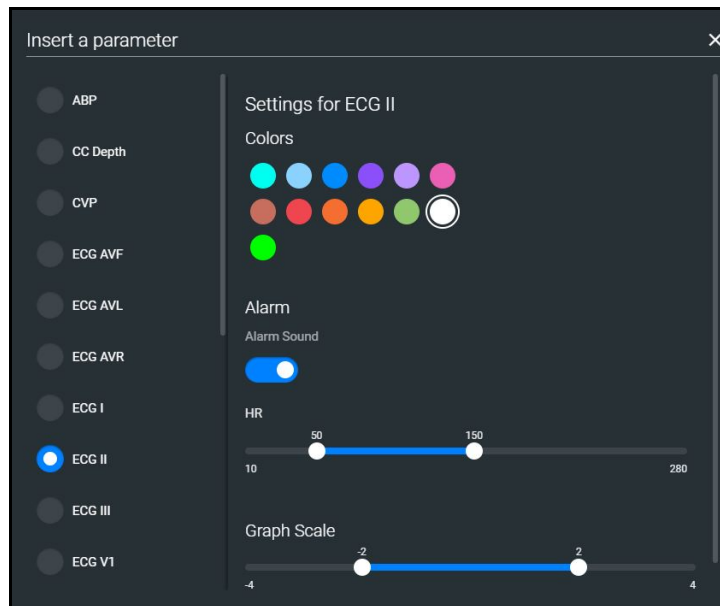

Insert a Parameter

5. Adjust the signal's **Color**, **Alarm**, and **Graph Scale** parameters as desired,
OR
Select a parameter to insert it in the place of the selected parameter.
6. When finished, tap the **X** in the upper-right corner to close the panel.

The Layout Edit screen reappears.

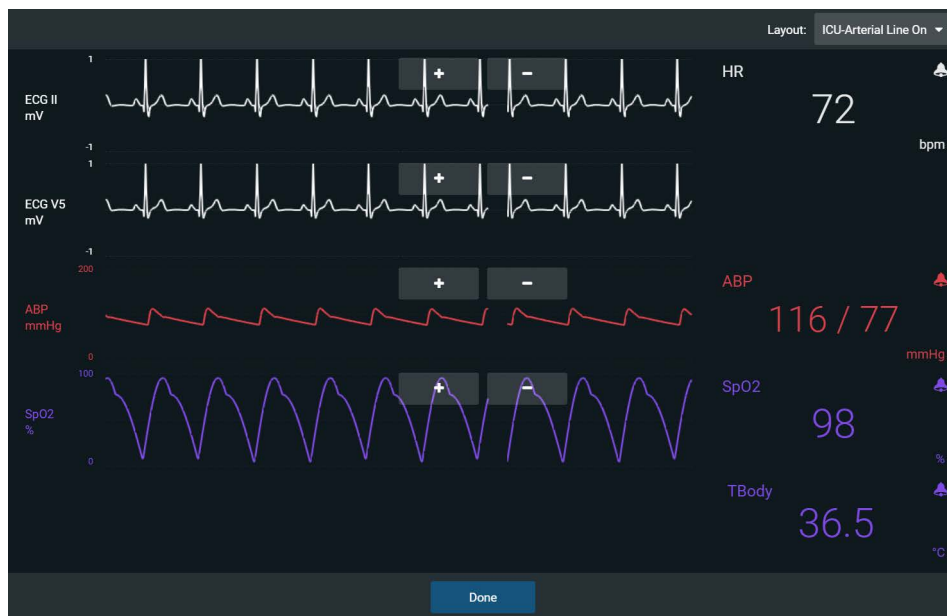

Layout Edit Screen

7. Use the plus (+) buttons to add waveforms to the layout.
Patient Monitor adds a line to the Layout.
8. Select the new line to open the Insert a Parameter window.
9. Select the parameter to display on the new line.
10. Set the parameter's **Color** and **Alarms**. When finished, close the parameter panel.
11. Tap **Done** to close the Layout Edit screen.

The Settings Layout panel opens.

12. Tap **Edit** to resume editing the layout.
13. Tap **Save As** to save the layout.
14. Type a name for the layout, then tap **Save**.

NIBP Cycling

Most layouts offer Non-Invasive Blood Pressure (NIBP) cycling options. To select this option within the layout:

1. Tap **NIBP** at the bottom of the Patient Monitor screen.
2. Tap the NIBP Cycling dropdown menu to open.
3. Select a timeframe for automatic cycling of NIBP.



NIBP Cycling Option

Sounds


To silence all sounds, tap the **Mute** button in the lower-left corner of the screen.



Mute Button

To set up the audio for Patient Monitor:

1. Tap **Settings** in the lower-right corner of the Patient Monitor screen.
2. From the Settings panel, select the **Audio Setup** tab.

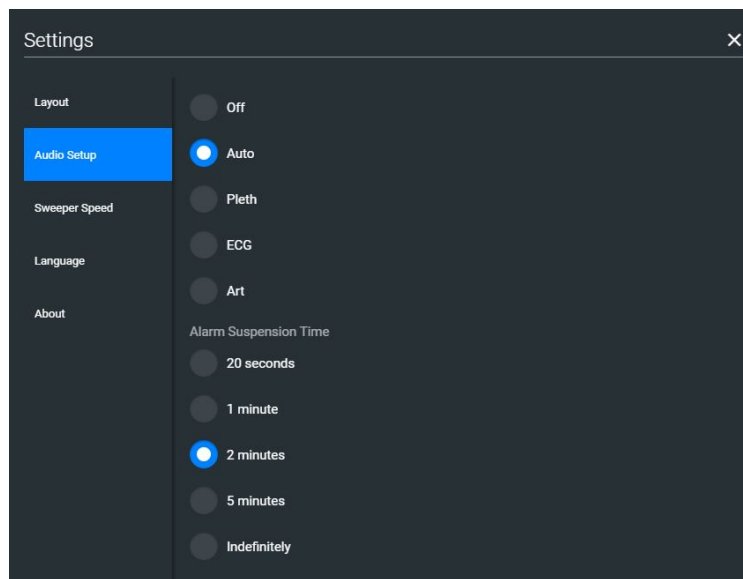

Settings - Audio Setup Options

3. (Optional) Select a waveform to set it as the pulse sound trigger.
4. (Optional) Select an **Alarm Suspension Time** to disable the selected waveform for an indicated amount of time.
5. When finished, tap **X** to close the window.


Snapshot

The snapshot tool captures an image of data on the screen, and then provides the ability to save it to a laptop or tablet. This function is unavailable if the device is connected to a wireless network where users cannot print a report.

To capture an image:

1. Tap **Snapshot** at the lower-right corner of the Patient Monitor screen.

The Snapshots window appears showing the live data available to capture.

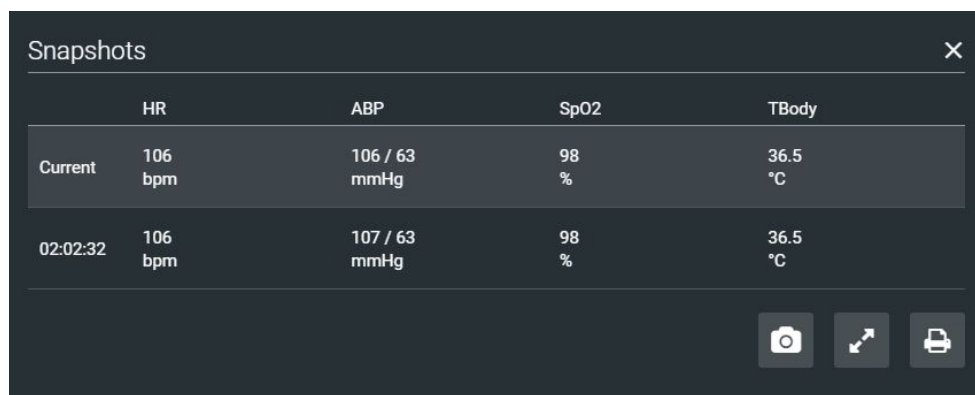

	HR	ABP	SpO2	TBody
Current	106 bpm	106 / 63 mmHg	98 %	36.5 °C
02:02:32	106 bpm	107 / 63 mmHg	98 %	36.5 °C

At the bottom right of the window are three icons: a camera icon for capturing a snapshot, a share icon, and a print icon.

Snapshots Window

2. To take another snapshot, tap the **Capture Snapshot** (camera) button at the lower-right corner of the screen.
3. (Optional) Tap the **Full Screen View** button at the lower-right corner of the screen.


Tap the **Esc** key to exit full screen view.

Patient Records

To view Patient Records:

1. Tap **Patient Record** from patient monitor controls at the lower-left of the screen.

The Patient Records window appears.

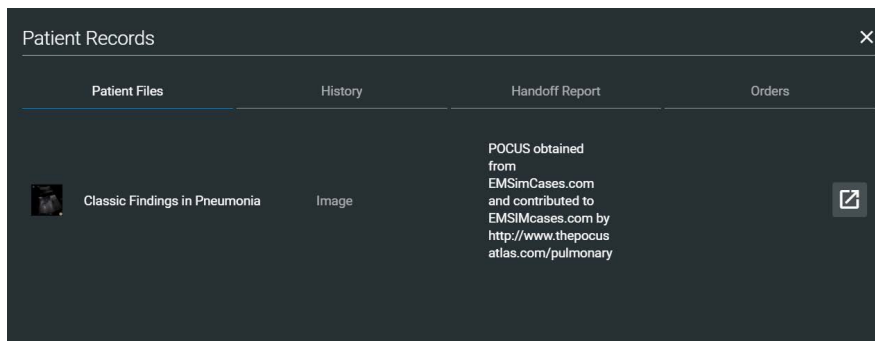

Patient Records Window


This information provides access to the same Patient Files, History, Handoff Report, and Orders information contained in Maestro.

Note: For this information to be visible in the Patient Monitor, the facilitator must send it from the Maestro software.

12-Lead ECG


To view a 12-lead ECG report:

1. Tap **12-Lead ECG** from patient monitor controls at the lower-left of the screen.

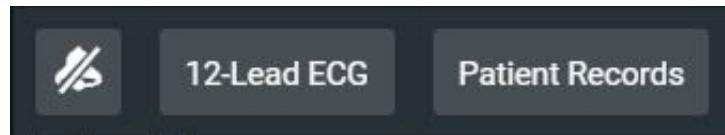

Patient Monitor Controls

The report appears.

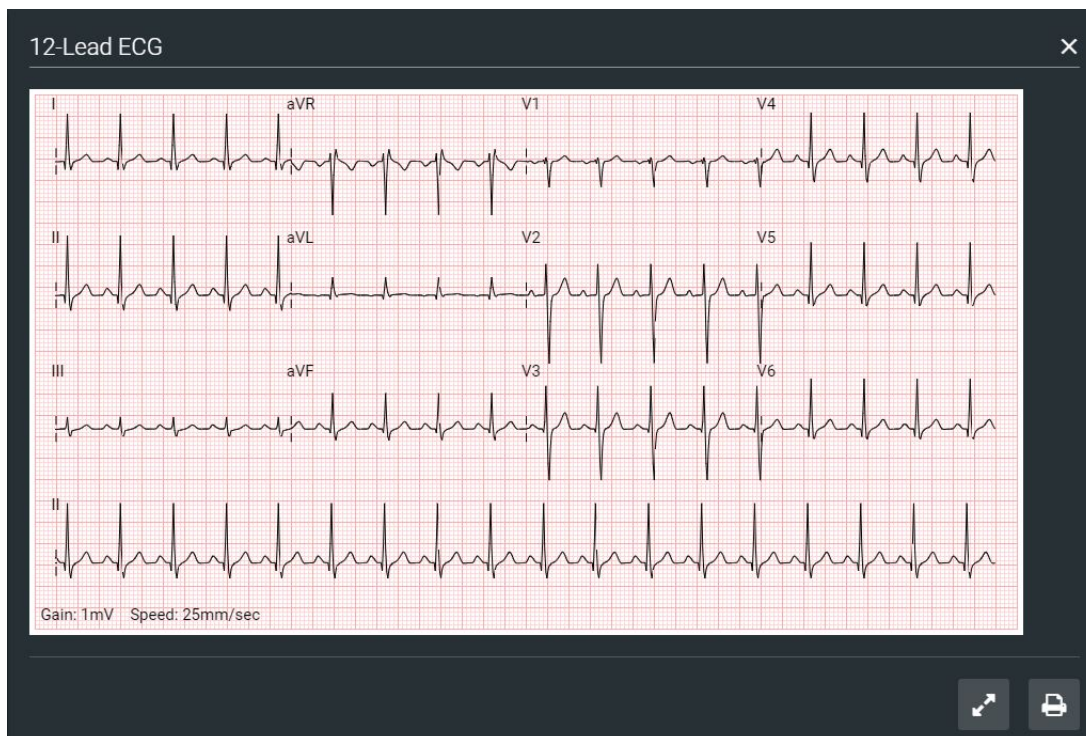

12-Lead ECG Report


2. (Optional) To view the full screen, tap the **Full Screen View** button at the lower-right corner of the 12-lead ECG report.



Full Screen View and Print Buttons

3. Tap the **Esc** key to return to the inset view.
4. Tap the **Print** button to print the report.

The Print Settings window appears.

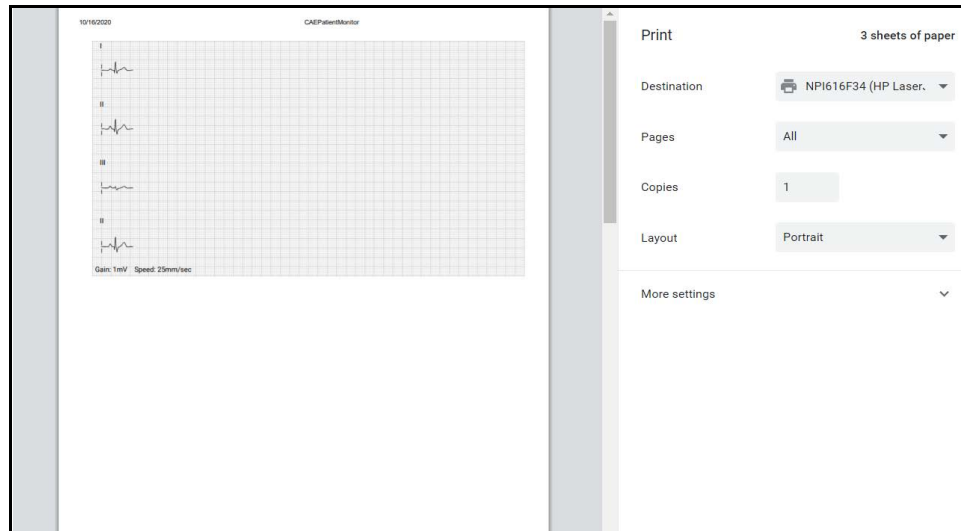

Print Settings Window

5. Select the print settings on the right side of the window.
6. Tap **Print** to print the report.


USING THE INTERCOM

CAE Maestro provides an intercom feature which allows the facilitator to speak as the patient or to communicate with other facilitators participating in the simulation. Users can speak through the intercom using a headset or by speaking directly into the tablet's microphone. Users can initiate one-way and two-way communications or mute audio communications.

Connect the Intercom

To connect the intercom:


1. From the run screen, tap **Intercom** in the left panel to expand intercom options.

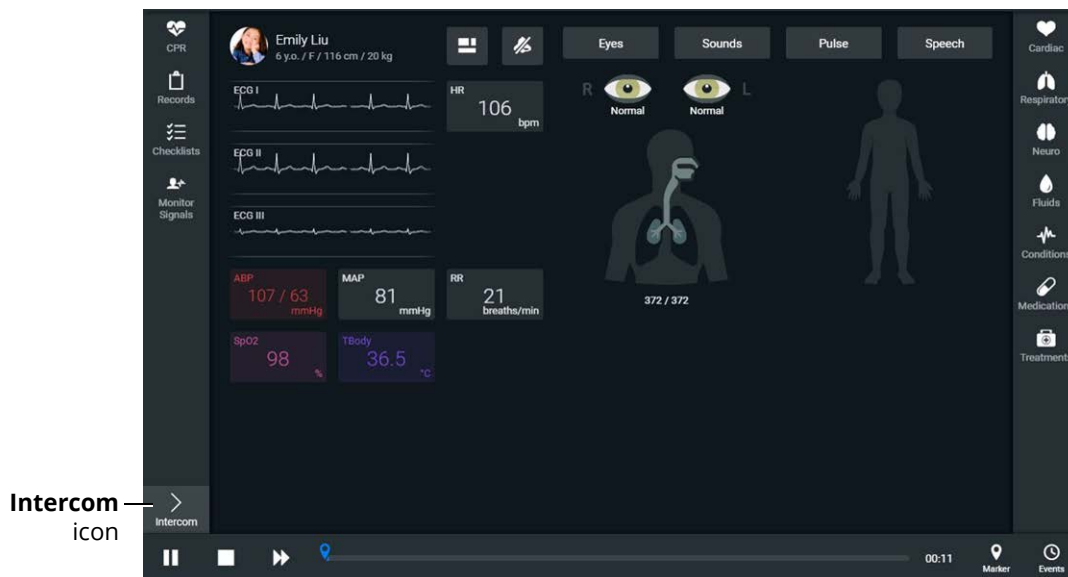

Run Screen

2. Once expanded, tap **Connect**.

The Connect Window appears.

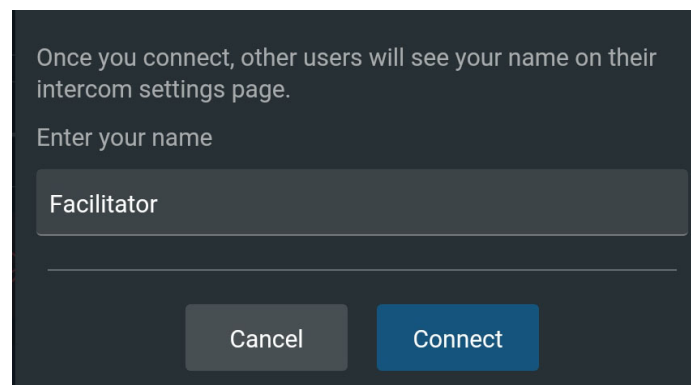

Connect Window

3. Tap in the text field to access the keyboard and enter the desired name for the intercom.
4. Tap **Connect**.

Once connected, the Intercom Tools menu appears.



Intercom Tools Menu

Speak as the Patient

On the Intercom Tools menu:

- Tap and hold the **Patient** button to speak through the manikin's vocal speaker.
- Release the button to stop communication and mute the headset or tablet microphone.
Note: When the **Patient** button is released, the facilitator will continue to hear the learners via the manikin's microphone.
- To mute communications between facilitator and learners, tap **Mute All** on the Intercom Tools menu.

The manikin appears in the Settings panel list as **Simulator**. For more information, see *Settings*.

Communicate with Participants

Additional participants, such as another facilitator playing a role in the simulation, can join the communication network. To join:

1. Use another tablet to launch Maestro and connect to the Intercom.
2. Tap **Participants** on the Intercom Tools menu to begin communications with other participants in the simulation.


Once connected, each user will appear in the Settings panel list and can be muted as desired. For more information, see *Settings*.

Settings

Settings allow users to control how the intercom functions. To modify settings:

1. On the Intercom Tools menu, tap **Settings**.

The Settings panel appears.

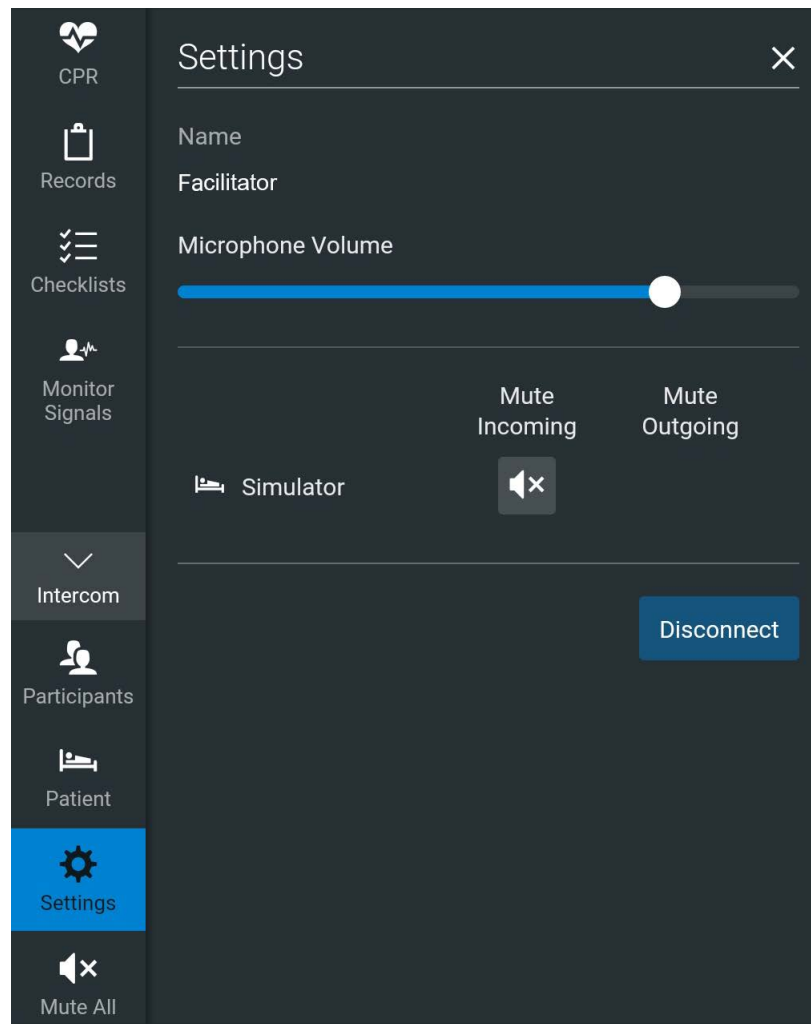

Settings Panel

2. In the Settings panel, users can:
 - Use the slider to adjust the microphone volume.
 - Tap a **Mute** icon to mute communications with the manikin or with a selected participant.
 - Tap **Disconnect** to disconnect from the manikin's intercom functions.

To exit the panel, tap the **X** icon.

THIS PAGE INTENTIONALLY LEFT BLANK

APPENDIX A - MAESTRO PARAMETER DESCRIPTIONS

The Maestro software has a number of parameters that control the patient status and software-controlled features of the simulator.

The parameters are grouped by category: Cardiac, Respiratory, Neuro, Fluids, Eyes, Sounds, Pulse, and Speech.

The following is a brief description of each parameter. Each parameter description lists the default settings for a pediatric patient, as well as the ranges and/or controls for all patients.

Cardiovascular: Basic Parameters

Arterial Blood Pressure

The **Blood Pressure** parameter is used to set the value of the blood pressure (Manual mode) or override the physiological modeling for blood pressure in Modeled mode. The systolic and diastolic blood pressures can both be set to fixed numeric values, regardless of interventions performed. Resetting the parameter to **Modeled** returns control of the underlying blood pressure to the physiological models. The set change can also be programmed to occur over time using the onset control.

Default: 107/63

Range:

- Systolic: 0 mmHg - 200 mmHg
- Diastolic: 0 mmHg - 200 mmHg

Central Venous Pressure (CVP)

The **CVP** parameter is used to set the CVP baseline and atrial contraction amplitude to fixed numeric values. Once set, intravascular volume changes have no effect on the CVP. In addition, once an override is applied, changes in tidal volume have no effect on the CVP waveform with the exception of an apneic patient where the minimum and maximum would be the same value since there is no inspiration or expiration. Depending on the volume status of the patient, the minimum/maximum value can be shifted up or down.

The available CVP controls are as follows:

- Minimum Diastolic: Baseline of the CVP at the end of an inspiration
- Maximum Diastolic: Baseline of the CVP at the end of an exhalation
- Pulse Amplitude: Size of the CVP wave during atrial contraction

For the override to take effect, the **Central Venous Catheter** must be set to the *Intrathoracic Vein*.

For example, with the minimum diastolic set to 5 mmHg, maximum diastolic set to 15 mmHg and pulse amplitude set to 2 mmHg, the CVP baseline is 15 mmHg, dipping to 5 mmHg with each inhalation, and the amplitude of the wave is 2 mmHg with each atrial contraction. The CVP baseline remains the same even in the event of intravascular volume changes and the depth of each dip due to inhalation remains at 5 mmHg even in the event of tidal volume changes. However, if the respiratory rate increases or decreases, the frequency of the dips will show a corresponding increase or decrease. The set change can also be programmed to occur over time using the onset control.

Default: Modeled or Manual mode as follows

- Minimum Diastolic: -2 mmHg
- Maximum Diastolic: 2 mmHg
- Pulse Amplitude: 3 mmHg

Range:

- Minimum Diastolic: -10 mmHg - 20 mmHg
- Maximum Diastolic: -10 mmHg - 20 mmHg
- Pulse Amplitude: 0 mmHg - 50 mmHg

Pulmonary Artery Pressure (PAP)

The **PAP** parameter is used to set the pulmonary artery pressure in Manual mode or to override the physiological modeling for pulmonary artery pressure in Modeled mode. The systolic and diastolic pressures can both be set to fixed numeric values, regardless of interventions performed. Resetting the parameter to **Modeled** returns control of the underlying pulmonary artery pressure to the physiological model. The set change can also be programmed to occur over time using the onset control.

Default: Modeled or 23/7(Manual mode)

Range:

- Systolic: 0 mmHg - 50 mmHg
- Diastolic: 0 mmHg - 50 mmHg

Pulmonary Capillary Wedge Pressure (PCWP)

The **PCWP** parameter is used to display the patient's pulmonary capillary wedge pressure. It is used to simulate the pressure as measured by wedging a pulmonary catheter with an inflated balloon into a small pulmonary arterial branch. The set change can also be programmed to occur over time using the onset control.

Default: Modeled or 8 mmHg (Manual mode)

Range: -10 mmHg - 100 mmHg

Heart Rate

The **Heart Rate** parameter is used to set the heart rate to a given (fixed) number of beats per minute. Once the heart rate is set to a numeric value, administered drugs or intravascular volume changes have no effect on the heart rate but continue to influence other components of the physiological models (in Modeled mode). Use this parameter to “fix” or set the heart rate to a specific number. In Manual mode, the set change can also be programmed to occur over time using the onset control.

Default: Modeled or 105 bpm (Manual mode)

Range: 10 beats per minute - 280 beats per minute

Cardiac Output

The **Cardiac Output** parameter displays the volume of blood pumped by the heart per minute. **Cardiac Output** is a function of heart rate (the number of heart beats per minute) and stroke volume (the volume of blood pumped out of the heart with each beat). **Cardiac Output** does not affect the rest of the physiology. For example, if cardiac output is set to zero, it will be shown on the CAE Patient Monitor as zero, but the patient will still have a blood pressure and pulses. In Manual mode, the set change can also be programmed to occur over time using the onset control.

Default: Modeled or 3.3 L/min (Manual mode):

Range: 0 L/min - 30 L/min

Cardiac Rhythm

The **Cardiac Rhythm** parameter is used to change the patient's underlying cardiac rhythm displayed on the Patient Status Display or the CAE Patient Monitor. To change the cardiac rhythm, click the **Cardiac Rhythm** parameter and select the desired rhythm from the available list. If a number appears following the cardiac rhythm on the list, this overrides the heart rate to the rate indicated.

For cardiac rhythms without a number, the **Heart Rate Factor** parameter can be used to independently control the heart rate.

Default: Modeled or Sinus (Manual mode)

A

Asystole

Atrial Enlargement, Left

Atrial Enlargement, Right

Atrial Fibrillation

Atrial Flutter

Atrial Tachycardia

AV Block, First-Degree

AV Block, Second-Degree, Mobitz I

AV Block, Second-Degree, Mobitz II

AV Block, Third-Degree

AV Block, Third-Degree (Wide Complex)

Bundle Branch Block, Incomplete Right

Bundle Branch Block, Left

Bundle Branch Block, Right

H

Hypercalcemia

Hyperkalemia (Mild)

Hyperkalemia (Moderate)

Hyperkalemia (Severe)

Hypertrophy, Biventricular

Hypertrophy, Left Ventricular

Hypertrophy, Right Ventricular

Hypocalcemia

Hypokalemia

Hypothermia

I

Idioventricular

J

Junctional

Long QT Syndrome

M

Myocardial Ischemia, Mild

Myocardial Ischemia, Moderate

Myocardial Ischemia, Severe

N

NSTEMI

P

Paroxysmal Junctional Tachycardia

Pericarditis

Premature Atrial Contraction

S

Sinus

ST Elevation with Chest Pain

STEMI Anterior

STEMI Anterolatera

STEMI Inferior

STEMI Lateral

STEMI LBBB

STEMI Posterior

STEMI Septal

T

Torsade de Pointes

Trifascicular Block

V

Ventricular Fibrillation, Coarse

Ventricular Fibrillation, Fine

Ventricular Tachycardia

Ventricular Tachycardia, RV Outflow Tract

W

Wellen's Syndrome

Wide Complex Tachycardia

WPW Syndrome, Left Lateral Pathway

Pulseless Electrical Activity

The **Pulseless Electrical Activity** parameter triggers a clinical condition characterized by unresponsiveness and lack of palpable pulse in the presence of organized cardiac electrical activity. It is either ON or OFF.

Default: OFF

PVC Probability

The **PVC Probability** parameter represents the percentage of cardiac cycles containing a premature ventricular contraction (contraction of the ventricles that occurs earlier than usual due to abnormal electrical activity of the ventricles).

The **PVC Probability** is used to set the frequency of PVCs within any cardiac rhythm. The set change can also be programmed to occur over time using the onset control.

Default: Modeled or 0 (Manual mode)

Range: 0% - 90%

Ventricular Escape Rate

The **Ventricular Escape Rate** parameter is used to set the rate of ventricular escape beats. Ventricular escape rate does not affect the rest of the physiology. The set change can also be programmed to occur over time using the onset control.

Default: 30 bpm

Range: 10 to 50 bpm

Hemoglobin

The **Hemoglobin** parameter is used to set a fixed hemoglobin value. Hemoglobin does not affect the rest of the physiology. The value set will be shown on the CAE Patient Monitor if selected in one of the numeric fields. In Manual mode, the set change can also be programmed to occur over time using the onset control.

Default: Modeled or 12.9 (Manual mode)

Range: 10.0 g/dL - 20.0 g/dL

Circumoral Cyanosis

The **Circumoral Cyanosis** parameter is based on percentage and affects the brightness of the LEDs. Setting the parameter at 0% turns the feature off and adjusting the percentage to any value above 0 to 100 will show condition, the 100 as the maximum brightness.

Default: 0

Range: 0 - 100%

Nailbed Capillary Refill: Left Thumb

The **Nailbed Capillary Refill: Left Thumb** parameter is determines the length of time for color to return to nailbed when pressed. Options include **None** (no reaction when pressed), **Normal** (color returns in 1.5 seconds) or **Prolonged** (color returns after 4 seconds).

Default: Normal

Cardiovascular: Advanced Parameters

Ventricle Contractility Factor: Left

The **Ventricle Contractility Factor: Left** parameter adjusts the contractility of the left ventricle and has a direct effect on cardiac output and blood pressure. Use this parameter to raise or lower the cardiac output.

Default: 1

Range: 0 - 10.00

Ventricle Contractility Factor: Right

The **Ventricle Contractility Factor: Right** parameter adjusts the contractility of the right ventricle and has a direct effect on cardiac output and blood pressure. Use this parameter to raise or lower the cardiac output.

Default: 1

Range: 0 - 10.00

Tamponade Volume

The **Tamponade Volume** parameter is used to set the amount of fluid or blood that is building up in the space between the myocardium and the pericardium, causing a cardiac tamponade.

Default: 0 ml

Range: 0 ml - 500 ml

Chest Compression Efficacy

The **Chest Compression Efficacy** parameter is used to determine the effectiveness of chest compressions administered by the caregiver. The ON/OFF setting indicates that chest compressions are completely effective, while the 0% setting prevents them from having any effect on intrathoracic pressure.

Default: ON

Options: ON/OFF

Resistance Factor: Aortic Valve

The **Resistance Factor: Aortic Valve** parameter is used to adjust the resistance to blood flow across the aortic valve. Increasing the value to greater than 1 corresponds to increased resistance to blood flow through the aortic valve.

Default: 1

Range: 1 - 1000

Resistance Factor: Mitral Valve

The **Resistance Factor: Mitral Valve** parameter is used to adjust the resistance to blood flow across the mitral valve. Increasing the value to greater than 1 corresponds to increased resistance to blood flow through the mitral valve.

Default: 1

Range: 1 - 1000

Resistance Factor: Systemic Vascular

The **Resistance Factor: Systemic Vascular** parameter adjusts the baseline systemic vascular resistance. Raising the value increases the systemic vascular resistance while lowering the value decreases the vascular resistance.

Raising the parameter value is analogous to increasing the resistance to blood flow through the systemic vasculature. Under such conditions, the arterial blood pressure (ABP) increases, and the heart rate may decrease due to feedback from the physiological control mechanisms.

Default: 1

Range: 0.10 - 10.00

Resistance Factor: Pulmonary Vasculature

The **Resistance Factor: Pulmonary Vasculature** parameter adjusts the baseline pulmonary vascular resistance. Raising the value increases the pulmonary vascular resistance, while lowering the value decreases the vascular resistance.

Raising the parameter value is analogous to increasing the resistance to blood flow through the pulmonary vasculature. Under such conditions, the pulmonary artery pressure (PAP) and central venous pressure (CVP) increase due to back-pressure through the right side of the heart.

Default: 1

Range: 0.10 - 10.00

Resistance Factor: Pulmonic Valve

The **Resistance Factor: Pulmonic Valve** parameter is used to adjust the resistance to blood flow across the pulmonic valve. Increasing the value to greater than 1 corresponds to increased resistance to blood flow through the pulmonic valve.

Default: 1

Range: 1 - 1000

Resistance Factor: Venous Return

The **Resistance Factor: Venous Return** parameter adjusts the resistance between the extrathoracic and intrathoracic venous compartments. Raising the value increases the resistance, while lowering the value decreases the resistance.

With less blood returning to the heart, there is a reduced volume entering the ventricles prior to ventricular contraction. This results in a drop in the cardiac output and decrease in arterial blood pressures. The heart rate increases due to feedback from the physiological control mechanisms in an attempt to maintain adequate blood pressures.

Default: 1

Range: 0.10 - 100.00

Compliance Factor: Left Ventricle

The **Compliance Factor: Left Ventricle** parameter adjusts the pulse pressure (difference between systolic and diastolic pressures) of the simulated patient's left ventricle.

Default: 1

Range: 0.20 - 5.00

Compliance Factor: Right Ventricle

The **Compliance Factor: Right Ventricle** parameter adjusts the pulse pressure (difference between systolic and diastolic pressures) of the simulated patient's left ventricle.

Default: 1

Range: 0.20 - 5.00

Compliance Factor: Systemic Arteries

The **Compliance Factor: Systemic Arteries** parameter adjusts the pulse pressure (difference between systolic and diastolic pressures) of the simulated patient's systemic blood pressure. Increases in the compliance factor result in a decreased (narrower) pulse pressure, while smaller values increase the pulse pressure. Additionally, when the pulse pressure increases as a result of a reduced compliance factor, both systolic and diastolic pressures increase. Conversely, with a narrower pulse pressure (higher compliance factor), both the systolic and diastolic blood pressures also drop.

Default: 1

Range: 0.50 - 5.00

Compliance Factor: Pulmonary Arteries

The **Compliance Factor: Pulmonary Arteries** parameter adjusts the pulse pressure (difference between systolic and diastolic pressures) of the simulated patient's pulmonary blood pressure. Increases in the compliance factor decrease (narrow) the pulse pressure, while smaller values increase the pulse pressure. Additionally, when the pulse pressure increases as a result of a reduced compliance factor, both systolic and diastolic pulmonary pressures increase. Conversely, with a narrower pulse pressure (higher compliance factor) both the systolic and diastolic pulmonary pressures also drop.

Default: 1

Range: 0.20 - 5.00

Capacity Factor: Venous

The **Capacity Factor: Venous** parameter adjusts the volume of blood contained in the unstretched venous system without an increase in venous pressure. Raising the value decreases the venous capacitance (vasodilatation and decreased vascular tone), while lowering the value increases the venous capacitance (vasoconstriction and increased vascular tone).

The volume of blood in the venous system has an inverse relationship to the blood pressure. Lowering the value is analogous to a "shift" in blood from the venous system to the arterial system, and this shift, when coordinated with increased systemic vascular resistance, results in an increase in blood pressure [arterial blood pressure (ABP), pulmonary artery pressure (PAP) and central venous pressure (CVP)].

Default: 1

Range: 0.10 - 100.00

Baroreceptor Minimum Pressure

Baroreceptor minimum pressure defines the mean arterial pressure (MAP) at which the baroreceptor inhibitory activity on the heart and systemic vasculature is minimal. When a simulated patient's MAP decreases below baseline pressure, the baroreceptor response exerts inhibitory controls on the MAP (e.g., increase in heart rate) in an attempt to return the MAP to the patient's baseline pressure. However, these controls have a lower limit, and this "minimum pressure" is defined as the baroreceptor minimum pressure.

In other words, as the MAP decreases, the physiological controls (i.e., baroreceptor response) work to bring the pressure back toward baseline, primarily by increasing the heart rate. For every 5 mmHg decrease in MAP, the heart rate may increase by 2 beats per minute in an attempt to keep the MAP in check. However, there is a lower limit ("minimum pressure"), after which these controls are no longer effective. Once the MAP reaches the baroreceptor minimum pressure, there is no additional increase in heart rate if the pressure continues to fall. For example, should the pressure continue to fall, the heart rate would not show a corresponding increase.

The MAP set-point is exactly between baroreceptor maximum pressure and baroreceptor minimum pressure.

Default: 62 mmHg

Range: 20 mmHg - 160 mmHg

Baroreceptor Maximum Pressure

Baroreceptor maximum pressure defines the mean arterial pressure (MAP) at which the baroreceptor inhibitory activity on the heart and systemic vasculature is maximal. When a simulated patient's MAP increases above baseline pressure, the baroreceptor response exerts greater inhibitory controls on the MAP (e.g., reduction in heart rate) in an attempt to return the MAP to the patient's baseline pressure. However, these controls have an upper limit, and this "maximum pressure" is defined as the baroreceptor maximum pressure.

In other words, as the MAP increases, the physiological controls (i.e., baroreceptor response) work to bring the pressure back toward baseline, primarily by reducing the heart rate. For every 5 mmHg increase in MAP, the heart rate may decrease by 2 beats per minute in an attempt to keep the MAP in check. However, there is an upper limit ("maximum pressure"), after which these controls are no longer effective. Once the MAP reaches the baroreceptor maximum pressure, there is no additional reduction in heart rate if the pressure continues to rise. For example, should the pressure continue to rise, the heart rate would not show a corresponding slowing.

The MAP set-point is exactly between baroreceptor maximum pressure and baroreceptor minimum pressure.

Default: 102 mmHg

Range: 40 mmHg - 220 mmHg

Baroreceptor Gain Factor: Overall

The **Baroreceptor Gain Factor: Overall** parameter adjusts the influence of mean arterial pressure (MAP) on heart rate, contractility, systemic vascular resistance and venous capacity. Use this parameter to adjust how vigorously the heart and vasculature respond to blood pressure changes. The degree of increase in heart rate or vascular response is influenced by the baroreceptor gain (overall) factor.

For example, when blood pressure falls, the heart rate increases, the arteries increase their vascular tone (resistance) and there is less pooling of the blood in the venous system, all in an attempt to maintain adequate blood pressure. A baroreceptor gain (overall) factor value of less than 1 corresponds to baroreceptor depression. A baroreceptor gain (overall) factor value greater than 1 leads to a stronger response to MAP changes.

Default: 1

Range: 0.00 - 100.00

Baroreceptor Gain Factor: Cardiac

The **Baroreceptor Gain Factor: Cardiac** parameter selectively adjusts the influence of mean arterial pressure (MAP) on the heart rate and contractility, influencing how much the heart rate increases or decreases with changes in blood pressure. Use this parameter to adjust how vigorously the heart responds to blood pressure changes.

A baroreceptor gain (cardiac) factor of less than 1 corresponds to baroreflex depression (e.g., less heart rate response to MAP changes). A value greater than 1 leads to a stronger response to MAP changes.

Default: 1

Range: 0.00 - 10.00

Baroreceptor Gain Factor: Peripheral

The **Baroreceptor Gain Factor: Peripheral** parameter adjusts the influence of mean arterial pressure (MAP) on systemic vascular resistance and venous capacity, influencing how much the vasculature responds to changes in blood pressure.

For example, when blood pressure falls, the arteries increase their vascular tone (resistance), and there is less pooling of the blood in the venous system, in an attempt to maintain adequate blood pressure. A factor of less than 1 corresponds to baroreflex depression (e.g., less systemic vascular resistance response to MAP changes). A value greater than 1 leads to a stronger response to MAP changes.

Default: 1

Range: 1.00 - 10.00

Ischemic Index Sensitivity

The **Ischemic Index Sensitivity** parameter determines the relative sensitivity of the simulated patient to myocardial ischemia. A lower ischemic index sensitivity value corresponds to less sensitivity to an unfavorable oxygen supply/demand ratio (i.e., poor oxygenation with high heart rate). A patient with a low value is less sensitive to poor oxygenation, takes longer to go into the “death spiral” and, therefore, survives longer.

Default: 0.10

Range: 0.10 - 5.00

Model-Driven ECG Rhythm	Ischemic Index (I.I.)
Normal Sinus Rhythm (NSR)	I.I. \geq 0.90
Mild ST Segment Depression	0.90 > I.I. \geq 0.70
Moderate ST Segment Depression	0.70 > I.I. \geq 0.60
Premature Ventricular Contractions (PVCs)	0.60 > I.I. \geq 0.40
Ventricular Tachycardia (VTach)	0.40 > I.I.
Ventricular Fibrillation (VFib)	1 minute after VTach
Asystole	1 minute after VFib

The patient’s response to myocardial ischemia may be altered using the **Ischemic Index Sensitivity** parameter found on the Cardiovascular view. To make the patient less sensitive to ischemia, lower the value below the default setting. To make the patient more sensitive, increase the value above the default setting. These changes are then reflected in the patient’s Ischemic Index, as shown in the table above.

Defibrillation Energy

The **Defibrillation Energy** parameter is used to simulate a specified amount of energy discharged via an external cardiac defibrillator. Setting this parameter results in the characteristic spike in the ECG, followed by a return to the pre-defibrillation rhythm. **Defibrillation Energy** has no direct effect on the electrical conduction system of the heart. Thus, synchronized cardioversion may be done “on the fly” or scripted using the Scenario Designer.

Default: 0 Joules

Range: 0 Joules - 360 Joules

Pacing Capture Threshold

The **Pacing Capture Threshold** parameter determines the minimum pacing current necessary to pace the heart via an external cardiac pacer. Also see **Pacing Current**. Pacing current values below the pacing capture threshold have no effect on the patient’s heart rate.

Default: 50 mA

Range: 0 mA - 119 mA

Pacing Current

The **Pacing Current** parameter is used to simulate a specified amount of current discharged via an external cardiac pacer. Setting this parameter results in the characteristic pacing signal on the ECG waveform when the pacing current is at or above the capture threshold. Also, see **Pacing Capture Threshold**.

Default: 0 mA

Range: 0 mA - 200 mA

Pacing Rate

The **Pacing Rate** parameter determines the cardiac rate (in beats/minute) when the pacing current is at or above the pacing capture threshold. Also, see **Pacing Current** and **Pacing Capture Threshold**.

Default: 80 beats per minute

Range: 0 beats per minute - 119 beats per minute

Respiratory: Basic Parameters

Apnea

The **Apnea** parameter triggers a clinical condition characterized by no spontaneous breathing. Lung sounds and vocal sounds will cease when apnea is enabled. It is either ON or OFF.

Default: OFF

Swollen Tongue

This parameter is a toggle switch used to create a swollen tongue effect on the pediatric patient. The ON setting creates the effect of a swollen tongue while the OFF setting returns the tongue to its normal anatomic state.

Default: OFF (Not Swollen)

Post Pharynx Swelling

Use the **Post Pharynx Swelling** parameter to simulate post pharynx swelling.

Default: OFF

Laryngospasm

Use the Laryngospasm parameter to simulate a laryngospasm. A laryngospasm actuator closes the patient's vocal cords and prevents both ventilation and intubation. When activated with the Airway Occluder parameter, a "cannot intubate, cannot ventilate" crisis scenario is achieved.

Default: OFF

Substernal Retractions

Use the **Substernal Retractions** parameter to display substernal retractions on the manikin. It is either ON or OFF.

Default: OFF

Bronchial Occlusion (Left and Right)

Turning on the **Bronchial Occlusion** parameter completely obstructs the right or left bronchi, simulating a lower airway obstruction (e.g., mucus plug).

Right and left bronchi can be occluded individually.

Improper intubation creates a mainstem occlusion, yielding an inability to ventilate the lungs. However, the right and left bronchi are not occluded individually.

Default: OFF

Bronchial Resistance Factor (Left and Right)

The **Bronchial Resistance Factor** parameter can be used to set the rate of left and right bronchial resistance individually. The rate of resistance can also be set to occur over time.

Default: 1

Range: 0.20 - 250,000.00

Respiratory Rate

The **Respiratory Rate** parameter is used to set the respiratory rate to a given number of breaths per minute. In Modeled mode, when the Respiratory Rate is set, arterial oxygen and carbon dioxide values have no effect on the resulting respiratory rate, but continue to influence other components of the physiological models. The patient continues to breathe at the set number of breaths per minute, regardless of the arterial oxygen or carbon dioxide levels.

For example, when the respiratory rate is set to 10 breaths per minute, the respiratory rate remains at 10 breaths per minute, regardless of arterial oxygen or carbon dioxide levels.

Default: Modeled or 22 (Manual mode)

Range: 0 breaths per minute - 40 breaths per minute

SpO₂

The SpO₂ parameter overrides the physiology and sets a fixed numeric value, regardless of the oxygen applied.

Default: 98%

Range: 0% - 100%

EtCO₂

The EtCO₂ parameter is used to set the end-tidal CO₂ to a fixed numeric value, measured in mmHg, regardless of the minute ventilation. The end exhalation point of the capnogram waveform will also reflect the set end-tidal CO₂ value. Setting the EtCO₂ has no effect on the arterial carbon dioxide values (PaCO₂), respiratory rate or tidal volume.

For example, when the EtCO₂ is set to 50 mmHg, the numeric end-tidal CO₂ will display 50 mmHg and the capnogram waveform rises to an end-tidal of 50 mmHg. However, the respiratory rate and tidal volume will remain the same unless the Respiratory Rate and/or the Tidal Volume parameter(s) is adjusted. When in Manual mode, the set change can also be programmed to occur over time using the onset control.

Default: Modeled or 0 mmHg (Manual mode)

Range: 0 mmHg – 100 mmHg

Tidal Volume

The **Tidal Volume** parameter sets the tidal volume to a given volume per breath. Once Tidal Volume is set to a numeric value, arterial oxygen and carbon dioxide values have no effect on the tidal volume, but continue to influence other components of the physiological models (in Modeled mode).

For example, with the tidal volume set to 177mL, the tidal volume remains a constant (set) 177 mL even in the event of falling arterial oxygen levels. In such situations, the patient can only respond to arterial oxygen or carbon dioxide levels by altering the respiratory rate. In Manual mode, the set change can also be programmed to occur over time using the onset control.

Default: Modeled or 177mL (Manual mode)

Range: 0 mL - 1500mL

I to E Ratio (1:X)

The **I to E Ratio (1:X)** parameter can be used to change the ratio of inspiratory time:expiratory time (I:E). The I to E Ratio does not affect physiology. The set change also be programmed to occur over time using the onset control.

Default: 2.0

Range: 0.5 - 7.0

pH

Use the pH parameter to set a fixed pH value. The pH does not affect the rest of the physiology. The value set will be shown on the patient monitor if selected in one of the numeric fields. The set change can also be programmed to occur over time using the onset control.

Default: 7.4

Range: 6.5- 7.9

Fraction of Inspired O₂ (FiO₂)

This parameter is used to simulate changes in the **FiO₂**, such as would occur with the administration of supplemental oxygen.

Default: 21%

Range: 0% - 100%

Needle Decompression

The **Needle Decompression** parameter is used to activate the **Needle Decompression** hardware in the simulator to relieve a pneumothorax in the simulator. This causes a rush of air to be heard on successful decompression. The amount of decompression is automatically subtracted from the **Intrapleural Volume** set.

Default: OFF

Intrapleural Volume (Vol): (Left and Right)

The **Intrapleural Vol** parameters allow intrapleural volume to accumulate, for example, as happens during pneumothorax, hydrothorax or hemothorax.

To simulate a pneumothorax, set the corresponding **Intrapleural Vol** to a value greater than 0 mL. Breath sounds are automatically diminished on the appropriate side due to decreased ventilation of the affected lung.

Default: 0 mL

Range: 0 mL - 2500 mL

Chest Tube Flow: (Left and Right)

The **Chest Tube Flow** parameter is used with the chest tube feature of the simulator. The Chest Tube Flow specifies the rate at which fluid can be removed from the simulated pleural space via a chest tube drainage system. As the chest tube drains, the volume is automatically subtracted from the set amount of Intrapleural Volume.

Default: 50 mL/min

Range: 0 mL/min - 50 mL/min

Respiratory: Advanced Parameters

Chest Wall Capacity

The **Chest Wall Capacity** parameter sets the total (combined) intrapleural and lung volumes at which the chest wall is considered distended. Also, see **Chest Wall Compliance Factor** and **Distended Chest Wall Compliance Factor**.

Default: 3900

Range: 1500 - 3900

Chest Wall Compliance Factor

The **Chest Wall Compliance Factor** parameter describes the interaction of the chest wall with the lungs. The **Chest Wall Compliance Factor** parameter defines the volume-pressure relationship in the normal operating lung volumes. Once distended, however, the chest wall rapidly becomes much less compliant (i.e., much “stiffer”) and resistant to further inflation.

Default: 1

Range: 0.15 - 10.00

Distended Chest Wall Compliance Factor

The **Distended Chest Wall Compliance Factor** parameter, along with the **Chest Wall Compliance Factor** parameter, describes the interaction of the chest wall with the lungs. The **Chest Wall Compliance Factor** parameter defines the volume-pressure relationship in normal lung volumes. Once distended, however, the chest wall rapidly becomes much “stiffer” and resistant to further inflation.

The **Distended Chest Wall Compliance Factor** parameter must be set to a low value for increased intrapleural volumes to result in elevated inspiratory pressures with positive pressure ventilation. Also, see **Intrapleural Volume (Vol): (Left and Right)**.

Default: 1

Range: 0.10 - 10.00

Functional Residual Capacity

The **Functional Residual Capacity** parameter sets the combined left and right lung volume remaining at the end of a normal, spontaneous exhalation. This parameter influences the speed of desaturation during apnea.

Default: 700 mL

Range: 400 mL - 1200 mL

Lung Compliance Factor: (Left and Right)

These two parameters independently set the left and right lung compliance. **Lung Compliance Factor** determines how easily the lungs inflate. Low compliance factors (less than 1) create “stiff” lungs (such as in acute respiratory distress syndrome or pulmonary edema) requiring more pressure for expansion. High compliance factors (greater than 1) create “loose” lungs that easily inflate with less pressure.

Default: 1

Range: 0.15 - 10.00

PaCO₂ Set-point

The **PaCO₂ Set-point** parameter is a set-point for PaCO₂. The control-of-breathing model adjusts tidal volume and respiratory rate in order to bring the PaCO₂ toward this set-point. Factors that influence the success of this control effort include baseline tidal volume, baseline respiratory rate, respiratory gain, O₂ consumption, respiratory quotient, lung compliances, chest wall compliance, bronchial resistances, the presence of artificial airways in the simulator and the inspired gas mixture.

When the **PaCO₂ Set-point** is set to a new value, the physiological controls adjust the simulator’s respiratory pattern in an attempt to attain the desired set-point. For example, when the set-point is raised from 40 to 50 mmHg, there is a transitory decrease in respiratory rate and tidal volume, as the physiological controls attempt to drive the PaCO₂ toward 50 mmHg. When the PaCO₂ reaches the new set-point, the simulator’s respiratory rate and tidal volume should return to normal values.

Default: 40 mmHg

Range: 20.0 mmHg - 70.0 mmHg

PetCO₂ - PaCO₂ Factor

The **PetCO₂ - PaCO₂ Factor** adjusts the end-tidal CO₂ relative to the PaCO₂. At the default value of 1, PetCO₂ very closely approximates PaCO₂. When **PetCO₂ - PaCO₂ Factor** is set at a value of 2, PetCO₂ is approximately one half of PaCO₂. PetCO₂ depends on CO₂ production and alveolar ventilation. Because the alveolar dead space is not modeled physically in the hardware, the responses to changes in mechanical ventilation settings may not be exact. The use of the Onset feature (e.g., onset over a 1-minute period) is recommended for this parameter.

Default: 1

Range: 0.9 - 10.0

Respiratory Gain Factor

The **Respiratory Gain Factor** determines how strong an influence arterial CO₂ levels have on the simulated patient’s tidal volume and respiratory rate. Under default conditions (value = 1), when

arterial CO₂ levels rise, the patient's respiratory rate and tidal volume show a transitory increase in an attempt to return the patient to the physiological control CO₂ set-point. If the **Respiratory Gain Factor** is increased to more than 1, the patient has a more pronounced response, while values less than 1 correspond to a blunted response.

Default: 1

Range: 0.00 - 10.00

Volume/Rate Control Factor

Ventilatory responses to increased arterial carbon dioxide or decreased arterial oxygen may take the form of increased tidal volume, increased respiratory rate, or both. The **Volume/Rate Control Factor** determines these relative changes. At a value of 1, increased and decreased ventilatory drive affect tidal volume and respiratory rate equally. When the **Volume/Rate Control Factor** is greater than 1, increased or decreased minute ventilation is predominantly achieved by changes in tidal volume. When the **Volume/Rate Control Factor** is less than 1, ventilatory changes are affected primarily by changes in respiratory rate.

For example, set the **Volume/Rate Control Factor** to 0.1 and increase the shunt fraction to 0.4 to decrease the arterial O₂. The patient responds to falling arterial oxygen levels with increased minute ventilation. Increasing the respiratory rate with minimal increase in tidal volume produces this.

Default: 1

Range: 0.1 - 10.0

Venous CO₂ Shift

The **Venous CO₂ Shift** parameter affects the partial pressure of CO₂ in the venous blood. Changing this parameter allows large and rapid shifts in total body CO₂ concentration. Increases in alveolar and arterial CO₂ follow rapidly in a physiologically correct magnitude and time course.

This parameter is useful for giving a "bolus" of CO₂ to the venous system. The alveolar and arterial CO₂ levels rise rapidly in response to the added carbon dioxide but soon return to "pre-bolus" levels as increased ventilation efforts work to eliminate the added CO₂. Therefore, the rise in CO₂ levels is only transitory. This parameter can be used to simulate external CO₂ administration such as that used during laparoscopy.

Note: *This parameter is only intended to be used while running an SCE. SCEs and patients should NOT be saved once the parameter has been applied. If an SCE or patient is saved after the **Venous CO₂ Shift** parameter has been applied, unexpected behavior may occur when the SCE or patient is reloaded.*

Default: 0 mmHg

Range: 0.0 mmHg - 60.0 mmHg

pH Shift

The **pH Shift** parameter is used to create a metabolic acidosis or metabolic alkalosis under script control.

The default pH value displayed on the Patient Status Display or TouchPro software is dependent on respiratory arterial CO₂ values. Under default conditions (PaCO₂ = 40 mmHg), the pH is approximately 7.4. Rising arterial CO₂ produces a subsequent drop in pH, while falling arterial CO₂ levels result in rising pH values.

To simulate pH changes with metabolic changes (acidosis or alkalosis), the **pH Shift** value is a mathematical addition to (or subtraction) from the displayed pH value to that which is desired.

Default: 0.0

Range: -(0.50) - 0.50

O₂ Consumption

The **O₂ Consumption** parameter is used to change the rate of consumption of oxygen and production of carbon dioxide. When **O₂ Consumption** is increased and used with increased **Shunt Fraction**, profound levels of hypoxia can be achieved rapidly.

Default: 140 mL per minute

Range: 0 mL per minute - 2000 mL per minute

CO₂ Production Factor

The **CO₂ Production Factor** parameter allows for the manipulation of metabolic CO₂ production to simulate a variety of pathophysiological conditions. CO₂ production is determined by the **O₂ Consumption** and **Respiratory Quotient** settings. A CO₂ Production Factor value of 2 doubles the CO₂ production, while a value of 0.5 decreases the CO₂ production by 50%.

Default: 1

Range: 0.50 - 4.00

Respiratory Quotient

Respiratory Quotient is the rate of carbon dioxide production divided by the rate of oxygen consumption. Changes to the **Respiratory Quotient** parameter alter the rate of carbon dioxide production relative to the rate of oxygen consumption.

Default: 0.8

Range: 0.70 - 1.10

Alveolar Enflurane

The **Alveolar Enflurane** parameter is used to simulate the presence of enflurane in the alveolar space without using real anesthetic vapors. The enflurane percentage is input to the drug models to achieve the expected pharmacodynamic effects (e.g., respiratory depression).

Using this parameter bypasses pharmacokinetics, real and instructor-specified inspired fractions, venous content, lung perfusion and ventilation. This parameter can be used to focus on cardiorespiratory effects (pharmacodynamics).

Note: Maestro does not verify a 100% sum of all fractions, because this would require all fractions to be set.

Default: Modeled

Range: 0.00% - 5.00%

Fraction of Inspired Enflurane

The **Fraction of Inspired Enflurane** parameter is used to simulate the amount of enflurane set in the anesthetic vaporizer and is used to calculate alveolar enflurane.

This parameter has a faster effect on physiology than anesthesia machine settings, because mixing in the breathing circuit is not simulated.

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: 0%

Range: 0.00% - 5.00%

Alveolar Halothane

The **Alveolar Halothane** parameter is used to simulate the presence of halothane in the alveolar space without using real anesthetic vapors. The halothane percentage is input to the drug models to achieve the expected pharmacodynamic effects (e.g., respiratory depression).

Using this parameter bypasses pharmacokinetics, real and instructor-specified inspired fractions, venous content, lung perfusion and ventilation. This parameter can be used to focus on cardiorespiratory effects (pharmacodynamics).

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: Modeled

Range: 0.00% - 5.00%

Fraction of Inspired Halothane

The **Fraction of Inspired Halothane** parameter is used to simulate the amount of halothane set in the anesthetic vaporizer and is used to calculate alveolar halothane.

This parameter has a faster effect on physiology than anesthesia machine settings, because mixing in the breathing circuit is not simulated.

Note: Maestro does not verify a 100% sum of all fractions, because this would require all fractions to be set.

Default: 0%

Range: 0.00% - 5.00%

Alveolar Isoflurane

The **Alveolar Isoflurane** parameter is used to simulate the presence of isoflurane in the alveolar space without using real anesthetic vapors. The isoflurane percentage is input to the drug models to achieve the expected pharmacodynamic effects (e.g., respiratory depression).

Using this parameter bypasses pharmacokinetics, real and instructor-specified inspired fractions, venous content, lung perfusion and ventilation. This parameter can be used to focus on cardiorespiratory effects (pharmacodynamics).

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: Modeled

Range: 0.00% - 5.00%

Fraction of Inspired Isoflurane

The **Fraction of Inspired Isoflurane** parameter is used to simulate the amount of isoflurane set in the anesthetic vaporizer and is used to calculate alveolar isoflurane.

This parameter has a faster effect on physiology than anesthesia machine settings, because mixing in the breathing circuit is not simulated.

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: 0%

Range: 0.00% - 5.00%

Alveolar Nitrous Oxide

The **Alveolar Nitrous Oxide** parameter is used to simulate the amount of nitrous oxide set in the anesthetic vaporizer and is used to calculate alveolar nitrous oxide.

Using this parameter bypasses pharmacokinetics, real and instructor-specified inspired fractions, venous content, lung perfusion and ventilation. This parameter can be used to focus on cardiorespiratory effects (pharmacodynamics).

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: 0.00%

Range: 0.00% - 80.0%

Fraction of Inspired Nitrous Oxide

The **Fraction of Inspired Nitrous Oxide** parameter is used to simulate the amount of nitrous oxide set in the anesthetic vaporizer and is used to calculate alveolar nitrous oxide.

This parameter has a faster effect on physiology than anesthesia machine settings, because mixing in the breathing circuit is not simulated.

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: 0%

Range: 0.00% - 80.0%

Alveolar Sevoflurane

The **Alveolar Sevoflurane** parameter is used to simulate the presence of sevoflurane in the alveolar space without using real anesthetic vapors. The sevoflurane percentage is input to the drug models to achieve the expected pharmacodynamic effects (e.g., respiratory depression).

Using this parameter bypasses pharmacokinetics, real and instructor-specified inspired fractions, venous content, lung perfusion and ventilation. This parameter can be used to focus on cardiorespiratory effects (pharmacodynamics).

Note: Maestro does not verify a 100% sum of all fractions, because this would require all fractions to be set.

Default: Modeled

Range: 0.00% - 8.00%

Fraction of Inspired Sevoflurane

The **Fraction of Inspired Sevoflurane** parameter is used to simulate the amount of sevoflurane set in the anesthetic vaporizer and is used to calculate alveolar sevoflurane.

This parameter has a faster effect on physiology than anesthesia machine settings, because mixing in the breathing circuit is not simulated.

Note: Maestro does not verify a 100 % sum of all fractions, because this would require all fractions to be set.

Default: 0%

Range: 0.00% - 8.00%

Neuro

Neuromuscular Blockade (NMB)

The pharmacokinetic and pharmacodynamic models based on the neuromuscular blocking agents administered and the time course of their injection automatically determines the degree of NMB. For some educational applications, however, the instructor may wish to set a fixed degree of neuromuscular blockade that remains stable for an indefinite period. This can be accomplished using the **NMB** parameter. The default setting instructs the pharmacologic models to determine the degree of neuromuscular blockade based upon the drugs injected and their pharmacologic properties.

When a numeric value is assigned to this parameter, the degree of NMB is set to that level. For example, 80% NMB causes the simulator to set the degree of NMB to 80%, regardless of the presence (or absence) of neuromuscular blocking drugs. Clinically, the spontaneous tidal volume is markedly reduced.

Default: Modeled

Range: 0% - 100%

Intracranial Pressure (ICP)

The ICP parameter is used to set the ICP displayed as a numeric value on the Patient Status Display and on the CAE Patient Monitor.

Default: Manual mode: 9.4 mmHg

Range: 0 mmHg - 65 mmHg

Temperature: Body

The temperature measured at the body surface can be set using this parameter and can be displayed on the Patient Status Display and the CAE Patient Monitor. Body temperature is not linked to the physiologic models, however, changes can be made “on the fly” or scripted using the Scenario Designer. The set change can also be programmed to occur over time using the onset control.

Default: 36.5°C

Range: 32.0°C - 42.0°C

Temperature: Blood

The arterial blood temperature can be set using the **Temperature: Blood** parameter. The arterial blood temperature can then be displayed on the Patient Status Display and the CAE Patient Monitor. The set change can also be programmed to occur over time using the onset control.

Default: 37°C

Range: 32.0°C - 42.0°C

Convulsions

The **Convulsions** parameter is used to simulate the presence of convulsions. It is either **ON** or **OFF**.

Default: OFF

Sternal Rub

The **Sternal Rub** parameter enables the chest sensor for stimulation. It is either **ON** or **OFF**. When the parameter is **ON**, the simulator will say “Ouch” when rubbed three times.

Default: ON

Fluids

There are three categories of fluids: BLEEDING, MANIKIN BLEEDING, and INFUSION.

BLEEDING

Fluid Loss Blood

When used, the **Fluid Loss Blood** parameter allows users to apply a decrease in total blood volume. Blood loss proportionally decreases both the red blood cell volume and the plasma volume according to the current hematocrit. The loss of volume can be an immediate one time loss or a loss over time. A custom volume amount and rate can also be set.

Range: 100 mL - 4000mL

Fluid Loss Plasma

When used, the **Fluid Loss Plasma** parameter reflects a decrease in plasma volume. Plasma loss decreases the plasma volume without changing the red blood cell volume. It refers collectively and generically to all fluid losses, including evaporative, transcellular, bowel and third space fluid losses. The loss of volume can be an immediate one time loss or a loss over time. A custom volume amount and rate can also be set.

Range: 100 mL - 4000 mL

MANIKIN BLEEDING

Bleeding

Use the manikin bleeding parameter to control bleeding by select type (**Venous** or **Arterial**) and the amount of bleeding by selecting the size: **None**, **Small**, **Medium**, or **Large**.

Default: None

INFUSION

Crystalloid Infusion

When used, the **Crystalloid Infusion** parameter reflects an addition to the plasma volume without changing the red blood cell volume. The term crystalloid is used to describe salt solutions for infusion (e.g., normal saline, dextrose in water, Ringer's Lactate). The volume selected can be administered as an immediate bolus or as an infusion over time. A custom bolus amount or infusion rate can also be set.

Range: 50 mL - 1000 mL

Colloid Infusion

When used, the **Colloid Infusion** parameter reflects an addition to the plasma volume without changing the red blood cell volume. Colloids include modified fluid gelatin starch solutions, dextran and human albumin. The volume selected can be administered as an immediate bolus or as an infusion over time. A custom bolus amount or infusion rate can also be set.

Range: 50 mL - 1000 mL

PRBC Infusion

Packed red blood cells are a preparation of 70% red blood cells and 30% liquid plasma, often administered in severe anemia to restore adequate levels of hemoglobin and red cells without overloading the vascular system with excess fluids. The volume selected can be administered as an immediate bolus or as an infusion over time. A custom bolus amount or infusion rate can also be set.

Range: 50 mL - 1000 mL

Whole Blood Infusion

The term whole blood is used to refer to blood that has not been separated into its various components. It represents a preparation of 40% red blood cells and 60% liquid plasma. The volume selected can be administered as an immediate bolus or as an infusion over time. A custom bolus amount or infusion rate can also be set.

Range: 50 mL - 1000 mL

Eyes

The following Eyes settings apply to simulators with SymEyes installed. The eyes can be controlled by tapping on the **Eyes** button or the eyes pictograph on the Run screen.

Blink Mode

The **Blinking** and **Closed** settings allow the user to have one or both eyes either blinking or closed and override the automatic response.

Default: Blinking

Eyes: Blink Speed

The **Blink Speed** parameter controls the eyelid blinking frequency and can be set to **Slow**, **Normal**, **Fast**, or **Rapid**. Presently, blinking frequency is not linked to the physiological models. However, the response can be done “on the fly” or scripted using the Scenario Designer.

Default: Normal

Control Eyes Together

Both eyes can be controlled together by enabling the **Control Eyes Together** parameter. When this option is selected, any change made to one eye, will automatically be made to the other eye.

Default: Disabled

Blink Mode

The **Blinking** and **Closed** settings allow the user to have one or both eyes either blinking or closed and override the automatic response.

Default: Blinking

Light Reactivity

The **Light Reactivity** parameter determines the speed at which the eyes react to light. **Light Reactivity** can be set to **Brisk**, **Sluggish** or **None**.

Default: Brisk

Pupil Diameter

Settings allow the user to fix one or both pupils to a specific size.

Default: 5 mm

Range: 2 mm - 8mm; Blown

Condition

Eight (8) eye conditions are available for selection in the neurological patient controls window.

Default: None

Options:

- Normal (both eyes)
- Jaundice (both eyes)
- Bloodshot (both eyes)
- Hemorrhage (right eye)
- Hemorrhage (both eyes)
- Keyhole Pupil (right eye)
- Droopy Eyelids (both eyes)
- Cataracts (both eyes)

Panning

Panning enables random eye movement (left to right).

Default: ON

Consensual Pupil Response

Setting the **Consensual Pupil Response** option to **ON** enables synchronized pupil reactivity between both eyes. When enabled (default action), shining a light in either eye will cause the opposite eye to also react. When disabled, only the pupil of the eye where light is shined will react.

Default: ON

Eyes: Brightness

Tap the **Brightness** option to launch a slider which controls the brightness of the OLED displays. Brightness can be adjusted between 0 and 100%.

Default: 100%

Sounds

A variety of simulated sounds are available to create a realistic experience. Tap the **Sounds** button on the Run screen to access the Sounds controls.

Heart Sounds

Heart sounds can be adjusted by tapping on the Sounds icon on the Run screen. When the Sounds panel appears, select **Heart**. The Heart Sounds menu will appear.

Independent control of the type and volume of heart sounds may be selected in each anatomical region.

Locations:

- Aortic
- Mitral
- Pulmonic
- Tricuspid

To affect the heart sounds simultaneously in all anatomical regions, select **All** and the desired sound.

Default: Normal

Type:

- Normal
- S3
- S4
- S3 and S4
- Early Systolic Murmur
- Mid Systolic Murmur
- Late Systolic Murmur
- Pan Systolic Murmur
- Late Diastolic Murmur

Note: The volume control slider can be used to adjust the amplitude of the sound.

Lung Sounds

Normal and abnormal breath sounds are selected using this parameter. Breath sounds are synchronized with ventilation of the left and right lungs. Breath sounds are audible over posterior and anterior.

Breath sounds can be adjusted by tapping on the Sounds button on the Run screen. When the Sounds panel appears, select **Lungs**. The Lung Sounds menu will appear.

Independent control of the type and volume of heart sounds may be selected in each anatomical region.

Locations:

- Left Upper
- Left Lower
- Right Upper
- Right Lower

To change breath sounds, select the desired sound from the **Lung Sounds** menu.

Default: Normal**Type:**

- Normal
- Wheezing
- Crackles
- Rhonchi
- Diminished
- Gurgling
- Pleural Rub

NOTE: The volume control slider can be used to adjust the amplitude of the sound.

Bowel Sounds

Bowel sounds can be adjusted by tapping on the Sounds button on the Run screen. When the Sounds panel appears, select **Bowel**. The Bowel Sounds menu will appear.

Normal, Hypoactive, Hyperactive and absent bowel sounds (**None**) are selected using this parameter. For no bowel sounds, tap the status toggle to OFF.

Type:

- Normal
- Hypoactive
- Hyperactive

Independent control of the type and volume of bowel sounds may be selected in each anatomical region.

Locations:

- Left Upper
- Right Upper
- Left Lower
- Right Lower

To affect the bowel sounds simultaneously in all anatomical regions, select All Bowel Sounds and the desired sound.

Default: Normal

Note: The volume control slider underneath each area may be used to adjust the amplitude of the sound. The volume control slider is only enabled while connected to a simulator.

Korotkoff Sounds

Korotkoff sounds can be adjusted by tapping on the **Sounds** button on the Run screen. When the Sounds panel appears, select **Korotkoff**. The Korotkoff Sounds menu will appear.

Default: ON

Note: The volume control slider may be used to adjust the amplitude of the sound.

Pulse

All pulses are enabled by default, unless altered by an SCE. To change a pulse setting, tap the **Pulse** button on the Run screen. Tap the desired pulse location on the image.

Pulse	Default	Range
Carotid Pulse	ON, Normal, Deficit: 60 mmHg	0 - 300 mmHg
Brachial Pulse - Right	ON, Normal, Deficit: 70 mmHg	0 - 300 mmHg
Brachial Pulse - Left	ON, Normal, Deficit: 70 mmHg	0 - 300 mmHg
Radial Pulse - Right	ON, Normal, Deficit: 90 mmHg	0 - 300 mmHg
Radial Pulse - Left	ON, Normal, Deficit: 90 mmHg	0 - 300 mmHg
Femoral Pulse - Right	ON, Normal, Deficit: 80 mmHg	0 - 300 mmHg
Femoral Pulse - Left	ON, Normal, Deficit: 80 mmHg	0 - 300 mmHg
Popliteal Pulse - Right	ON, Normal, Deficit: 80 mmHg	0 - 300 mmHg
Popliteal Pulse - Left	ON, Normal, Deficit: 80 mmHg	0 - 300 mmHg
Dorsalis Pedis - Right	ON, Normal, Deficit: 80 mmHg	0 - 300 mmHg
Dorsalis Pedis - Left	ON, Normal, Deficit: 80 mmHg	0 - 300 mmHg

The pulse can be turned ON or OFF, and the pulse intensity can be set to:

- Absent
- Weak
- Normal
- Bounding

The pulse deficit can be changed from the default to another value. When the systolic pressure falls below the set pulse deficit, the pulse will turn off.

Vocal Sounds and Speech Sounds

Vocal speech sounds and speech sounds are selected using this parameter. These sounds can be turned on or off, and the volume can be adjusted using the Volume slider.

Note: A patient must be running in the Maestro software for the Speech sounds to work. The Vocal Speech Sound is emitted immediately when selected and plays continuously until it is turned off or another vocal or speech sound is selected.

Vocal speech sounds can be selected by tapping on the **Speech** button on the Run screen. When the Speech panel appears, select **Vocal Speech Sound**.

Default: None

Vocal Speech Sound Types:

- None
- Gagging
- Gasping
- Groaning
- Long Loud Cough
- Long Soft Cough
- Crying
- Wheezing
- Mumbling
- Stridor
- Normal

Speech Sounds contain predefined phrases and are arranged in Conversation and Symptom categories. Each speech sound will play once each time you make a selection.

Speech sounds can be selected by tapping on a selection in the Speech Sounds menu.

Conversation Speech Sounds:

- Hello
- Hi
- Yes
- Yes, I am
- Yes, thank you
- No
- Ok
- Don't touch me
- How much longer?
- I don't know
- I'll try
- I want my Daddy
- I want my Mommy
- Can I have something to drink?
- Can I have something to eat?
- Is everything ok?
- Not at the moment
- What did you say?
- What's happening?
- Where am I?
- Where's my Mommy?
- Where's my Daddy?

Symptoms Speech Sounds:

- Short Loud Cough
- Short Soft Cough
- A little bit (mild pain)
- A lot (pain)
- Feels like someone is poking me with a stick (mild pain)
- It always hurts (pain)
- It doesn't hurt bad (mild pain)
- It feels like someone is pushing on it (mild pain)
- It hurts (pain)
- IT HURTS! (severe pain, close to scream)
- It's sharp (mild pain)
- My back hurts (mild pain)
- My chest hurts (mild pain)
- My head hurts so bad
- My mouth feels tingly
- My stomach hurts
- OUCH! (severe pain, close to scream)
- Ow, that hurts (mild pain)
- Screaming (severe pain)
- Sometimes it hurts, sometimes it doesn't (mild pain)
- Everything looks fuzzy
- I can't feel my legs
- I feel funny
- I want to throw up (sick)
- I'm cold
- I'm feeling good
- I'm hot
- I'm hungry

- I'm not feeling good (sick)
- I'm really scared
- I'm tired
- There's sound in my ears
- I'm thirsty

APPENDIX B - MEDICATION INFORMATION

The following table describes the medications available for administration in the Maestro software. Each medication is listed along with:

- Any effects on the patient’s physiology (modeled or log-only)
- The medication category
- The predefined dosage choices
- The units used for custom dosages
- The route of administration.

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Acetaminophen	Analgesic	L	mg/kg	PO	10mg/kg 15 mg/kg
			mg/kg	IV	10mg/kg 15 mg/kg
Activated Charcoal	Adsorbents	L	g mg/kg	PO	11 g 15 g 22 g 25 g .05 mg/kg 1 g/kg
Adenosine	ACLS Cardiovascular	M	mg/kg	IV	2 mg 2.2 mg 4 mg 4.4 mg 0.1 mg/kg 0.2 mg/kg
			mg/kg	IO	2 mg 2.2 mg 4 mg 4.4 mg 0.1 mg/kg 0.2 mg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Albuterol (Salbutamol)	Respiratory	L	mg mg/hr mg/kg	Nebulizer	2.5 mg 10 mg/hr
			mg/kg mcg	Inhaler	90 mcg 0.15 mg/kg 0.3 mg/kg
Alfentanil	Analegesics Narcotics	M	mcg/kg mcg/kg/min	IV	N/A
Amiodarone	Cardiovascular	M	mg/kg mcg/kg/min	IV	5 mcg/kg 5 mcg/kg/min 20 mcg/kg/min
			mg mg/kg	PO	5 mcg/kg 10 mcg/kg 15 mcg/kg 110 mg 220 mg 330 mg
Aspirin	ACLS Analgesic Cardiovascular Metabolics NSAIDS	L	mg mg/kg	PO	10 mg/kg 15 mg/kg 220 mg 330 mg
Atracurium	Neuromuscular Blockers	M	mg/kg	IV	0.1 mg/kg 0.3 mg/kg 0.4 mg/kg
Atropine	ACLS Cardiovascular	M	mg mg/kg	IV	0.2 mg 0.3 mg 0.4 mg 0.01 mg/kg 0.02 mg/kg
			mg mg/kg	IO	0.2 mg 0.3 mg 0.4 mg 0.01 mg/kg 0.02 mg/kg
			mg mg/kg	PO	0.01 mg/kg 0.02 mg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Betamethasone	Corticosteroids	L	mg	IM	N/A
Bicarbonate	ACLS Cardiovascular Toxicology	M	mEq mEq/kg	IV	0.5 mEq/kg 1 mEq/kg 10 mEq 20 mEq
			mEq mEq/kg	IO	0.5 mEq/kg 1 mEq/kg 10 mEq 20 mEq
Bretylium	Cardiovascular	M	mg/kg mg/min	IV	N/A
Calcium Chloride	ACLS Cardiovascular Toxicology	M	mg mg/kg	IV	220 mg 440 mg 10 mg/kg 20 mg/kg
			mg mg/kg	IO	220 mg 440 mg 10 mg/kg 20 mg/kg
Cefotetan	Antibiotics	L	mg mg/kg	IV	440 mg 880 mg 20 mg/kg 40 mg/kg
			mg mg/kg	IO	440 mg 880 mg 20 mg/kg 40 mg/kg
Cisatracurium	Neuromusclar Blockers	M	mg mg/kg mcg/kg/min	IV	0.1 mg/kg 0.15 mg/kg 3 mcg/kg/min
Curare (d-Tubocurarine)	Neuromusclar Blockers	L	mg	IM	N/A
		M	mg	IV	N/A
Dextrose 50%	Metabolics	L	g g/kg	IV	0.5 g/kg 1 g/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Diazepam	Hypnotics	L	mg	IM	N/A
		M	mg mg/kg	IV	1 mg 2 mg 4 mg 10 mg 0.2 mg/kg 0.5 mg/kg
			mg mg/kg	IO	1 mg 2 mg 4 mg 10 mg 0.2 mg/kg 0.5 mg/kg
Digoxin	Cardiovascular	M	mcg mcg/kg	IV	3.75 mcg/kg 4 mcg/kg 6 mcg/kg 7.5 mcg/kg 8 mcg/kg 15 mcg/kg
Diltiazem	Cardiovascular	M	mg mg/min mg/hr mg/kg mg/kg/hr	PO	0.5 mg/kg 0.7 mg/kg 0.125 mg/kg/hr
Diphenhydramine	Histamine Blocker	L	mg mg/kg	IV	6.25 mg 12.5 mg 25.0 mg 1.25 mg/kg
			mg mg/kg	IO	6.25 mg 12.5 mg 25.0 mg 1.25 mg/kg
			mg mg/kg	IM	6.25 mg 12.5 mg 25.0 mg 1.25 mg/kg
			mg mg/kg	PO	6.25 mg 12.5 mg 25.0 mg 1.25 mg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Dobutamine	ACLS Cardiovascular	M	mcg/kg/min	IV	0.5 mcg/kg/min 1 mcg/kg/min 2 mcg/kg/min 5 mcg/kg/min 10 mcg/kg/min 15 mcg/kg/min 20 mcg/kg/min
			mcg/kg/min	IO	0.5 mcg/kg/min 1 mcg/kg/min 2 mcg/kg/min 5 mcg/kg/min 10 mcg/kg/min 15 mcg/kg/min 20 mcg/kg/min
Dopamine	Cardiovascular	M	mcg/kg/min	IV	1 mcg/kg/min 2 mcg/kg/min 5 mcg/kg/min 10 mcg/kg/min 15 mcg/kg/min 20 mcg/kg/min
			mcg/kg/min	IO	1 mcg/kg/min 2 mcg/kg/min 5 mcg/kg/min 10 mcg/kg/min 15 mcg/kg/min 20 mcg/kg/min
Doxacurium	Neuromuscular Blockers	M	mg mg/kg	IV	0.03 mg/kg 0.05 mg/kg
Droperidol	Antagonists Antiemetics	M	mg mg/kg	IV	0.03 mg/kg 0.07 mg/kg
Edrophonium	Antagonists	L	mg	IM	N/A
		M	mg mg/kg	IV	0.04 mg/kg 0.15 mg/kg 1 mg 2 mg
Ephedrine	Cardiovascular	L	mg mg/kg	IM	0.5 mg/kg
			mg mg/kg	SC	0.5 mg/kg
		M	mg	IV	N/A

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Epinephrine 1:10,000	Respiratory	L	mg mg/kg	IM	0.15 mg 0.22 mg 0.3 mg 0.01 mg/kg
			mg mg/kg	SC	0.15 mg 0.22 mg 0.3 mg 0.01 mg/kg
Epinephrine 1:10,000	ACLS Cardiovascular	M	mg mg/kg mcg mcg/kg/min	IV	0.25 mg 0.01 mg/kg 0.05 mg/kg 0.1 mg/kg/min 0.5 mg/kg/min 1.0 mg/kg/min
			mg mg/kg mcg mcg/kg/min	IO	0.25 mg 0.01 mg/kg 0.05 mg/kg 0.1 mg/kg/min 0.5 mg/kg/min 1.0 mg/kg/min
Esmolol	Cardiovascular	M	mcg/kg mcg/kg/min	IV	250 mcg/kg 500 mcg/kg 50 mcg/kg/min 100 mcg/kg/min 150 mcg/kg/min 200 mcg/kg/min 250 mcg/kg/min 300 mcg/kg/min
Etomidate	Hypnotics	M	mg/kg	IV	0.1 mg/kg 0.2 mg/kg 0.3 mg/kg 0.4 mg/kg 0.5 mg/kg 0.6 mg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Fentanyl	Narcotic	L	mcg/kg mcg/hr	PO	N/A
			mcg/kg mcg/hr	Transdermal	N/A
		M	mcg mcg/kg mcg/hr	IV	22 mcg 44 mcg 1 mcg/kg 2 mcg/kg 1.0 mcg/kg/hr 2.0 mcg/kg/hr 3.0 mcg/kg/hr
			mcg mcg/kg	IM	22 mcg 44 mcg 1 mcg/kg 2 mcg/kg
Flumazenil	Antagonist	M	mg	IV	N/A
Furosemide	Diuretic	L	mg/kg	IV	0.5 mg/kg 1 mg/kg 1.5 mg/kg 2 mg/kg
			mg/kg	IM	0.5 mg/kg 1 mg/kg 1.5 mg/kg 2 mg/kg
			mg/kg	PO	0.5 mg/kg 1 mg/kg 1.5 mg/kg 2 mg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Glucagon	Metabolics Toxicology	L	mg	IV	0.5 mg 1 mg
			mg	IO	0.5 mg 1 mg
			mg	IM	0.5 mg 1 mg
			mg	SC	0.5 mg 1 mg
Glycopyrrolate	Antagonists	L	mg/kg	IM	0.004 mg/kg 0.01 mg/kg
		M	mg/kg	IV	0.004 mg/kg 0.01 mg/kg
Hydralazine	Cardiovascular	L	mg	IV	N/A
			mg	IM	N/A
Ipratropium	Respiratory	L	mcg	Nebulizer	250 mcg 500 mcg
			mcg	Inhaler	17 mcg
Isoproterenol	Cardiovascular	L	mg	IM	N/A
		M	mcg/min mcg/kg/min	IV	0.05 mcg/kg/min 0.1 mcg/kg/min 0.2 mcg/kg/min 0.5 mcg/kg/min 1 mcg/kg/min
			mcg/min mcg/kg/min	IO	0.05 mcg/kg/min 0.1 mcg/kg/min 0.2 mcg/kg/min 0.5 mcg/kg/min 1 mcg/kg/min

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Ketamine	Hypnotics	L	mg mg/kg	IM	4 mg/kg 5 mg/kg
		M	mg/min mg/kg	IV	0.5 mg/kg 1 mg/kg 1.5 mg/kg 2 mg/kg
			mg/min mg/kg	IO	0.5 mg/kg 1 mg/kg 1.5 mg/kg 2 mg/kg
Labetalol	Cardiovascular	M	mg mg/kg mg/kg/hr	IV	0.25 mg/kg 0.5 mg/kg 1 mg/kg 0.4 mg/kg/hr 1 mg/kg/hr 2 mg/kg/hr 3 mg/kg/hr
Lidocaine	ACLS Cardiovascular	L	mg	IM	N/A
		M	mg mg/kg mcg/kg/min	IV	20 mg 30 mg 40 mg 0.5 mg/kg 1.0 mg/kg 1.5 mg/kg 20 mcg/kg/min 50 mcg/kg/min
			mg mg/kg mcg/kg/min	IO	20 mg 30 mg 40 mg 0.5 mg/kg 1.0 mg/kg 1.5 mg/kg 20 mcg/kg/min 50 mcg/kg/min

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Lorazepam	Hypnotic	M	mg mg/kg mg/kg/hr	IV	0.5 mg 1 mg 2 mg 0.05 mg/kg 0.1 mg/kg 0.05 mg/kg/hr 0.1 mg/kg/hr 0.15 mg/kg/hr
Mannitol	Diuretic	L	g/kg	IV	0.25 g/kg 0.5 g/kg 1.0 g/kg
Mark I Kit	Antagonists Toxicology	L	Kit	IM	N/A
Meloxicam	NASIDS Analgesics	L	mg	PO	1.5 mg 3mg
Meperidine	Analgesics Narcotic	L	mg/kg	IM	1.0 mg/kg 1.8 mg/kg
			mg/kg	SC	1.0 mg/kg 1.8 mg/kg
		M	mg/kg	IV	N/A
Methohexital	Hypnotics	M	mg/kg	IV	6.6 mg/kg 10 mg/kg
Methyldopa	Cardiovascular	L	mg	PO	N/A
Metocurine	Neuromuscular Blockers	M	mg/kg	IV	N/A
Metoprolol	Cardiovascular	M	mg/kg	IV	0.5 mg/kg 1 mg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Midazolam	Hypnotic	L	mg/kg mcg/kg	PO	500 mcg/kg 750 mcg/kg
			mg/kg mcg/kg	IM	100 mcg/kg 150 mcg/kg
		M	mg mg/kg mg/kg/hr mcg/kg/hr mcg/kg/min mcg/kg	IV	1 mg 2 mg 3 mg 0.5 mcg/kg/min 1 mcg/kg/min 2 mcg/kg/min 50 mcg/kg 100 mcg/kg 150 mcg/kg
			mg mg/kg mg/kg/hr mcg/kg/hr mcg/kg/min mcg/kg	IO	1 mg 2 mg 3 mg 0.5 mcg/kg/min 1 mcg/kg/min 2 mcg/kg/min 50 mcg/kg 100 mcg/kg 150 mcg/kg
Mivacurium	Neuromuscular Blockers	M	mcg/kg	IV	200 mcg/kg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Morphine	ACLS Analgesics Narcotics	L	mg/kg	IM	0.05 mg/kg 0.1 mg/kg 0.2 mg/kg
			mg/kg	SC	0.05 mg/kg 0.1 mg/kg 0.2 mg/kg
			mg/kg	PO	0.2 mg/kg 0.5 mg/kg
		M	mg mg/kg mg/kg/hr	IV	1 mg 1.5 mg 2 mg 0.05 mg/kg 0.1 mg/kg 0.05 mg/kg/hr 0.1 mg/kg/hr 0.15 mg/kg/hr
			mg mg/kg mg/kg/hr	IO	1 mg 1.5 mg 2 mg 0.05 mg/kg 0.1 mg/kg 0.05 mg/kg/hr 0.1 mg/kg/hr 0.15 mg/kg/hr
Naloxone	Antagonist	L	mg mg/kg	IM	2 mg
			mg mg/kg	SC	2 mg
			mg mg/kg	Inhaler	4 mg
		M	mg/kg	IV	0.001 mg/kg .01 mg/kg 0.015 mg/kg 0.1 mg/kg 2 mg
			mg mg/kg	IO	0.001 mg/kg .01 mg/kg 0.015 mg/kg 0.1 mg/kg 2 mg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Neostigmine	Neuromuscular Blockade	M	mg/kg	IV	0.01 mg/kg 0.025 mg/kg 0.04 mg/kg
			mg/kg	IM	0.01 mg/kg 0.025 mg/kg 0.04 mg/kg
			mg/kg	SC	0.01 mg/kg 0.025 mg/kg 0.04 mg/kg
Nifedipine	Cardiovascular	M	mg/kg	SL	N/A
			mg/kg	PO	0.025 mg/kg 0.05 mg/kg
Nitroglycerin	Cardiovascular	L	mg	SL	N/A
			mg	Spray (TL)	N/A
			mg	Patch	N/A
			mg	Paste	N/A
		M	mcg/min mcg/kg/min	IV	0.25 mcg/kg/min 0.5 mcg/kg/min 1 mcg/kg/min
Nitroprusside	Cardiovascular	M	mcg/kg/min	IV	0.3 mcg/kg/min
			mcg/kg/min	IO	0.3 mcg/kg/min
Norepinephrine	Cardiovascular	M	mcg/kg/min	IV	0.05 mcg/kg/min 0.1 mcg/kg/min 0.2 mcg/kg/min

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Ondansetron	Antiemetics	L	mg mg/kg	PO	2 mg 3 mg 4 mg
			mg mg/kg	IV	0.1 mg/kg 0.15 mg/kg 2 mg 3 mg 4 mg
			mg mg/kg	IM	0.1 mg/kg 0.15 mg/kg 2 mg 3 mg 4 mg
Oral Glucose	Metabolics	L	g	PO	15 g
Pancuronium	Neuromuscular Blockers	M	mg/kg mg/kg/hr	IV	0.02 mg/kg 0.1 mg/kg 0.1 mg/kg/hr
Phentolamine	Cardiovascular	M	mg mg/kg	IV	0.05 mg/kg 0.1 mg/kg 0.2 mg/kg 1 mg
			mg mg/kg	IM	0.05 mg/kg 0.1 mg/kg 0.2 mg/kg 1 mg
Phenylephrine	Cardiovascular	M	mcg/kg mcg/kg/min	IV	5 mcg/kg 10 mcg/kg 15 mcg/kg 20 mcg/kg 0.1 mcg/kg/min 0.5 mcg/kg/min
Prednisone	Corticosteroids	L	mg mg/kg	PO	0.5 mg/kg 1 mg/kg 2 mg/kg 10 mg 20 mg 30 mg 40 mg

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Procainamide	ACLS Cardiovascular	M	mg/kg mg/min mcg/kg/min	IV	3 mg/kg 6 mg/kg 20 mcg/kg/min 40 mcg/kg/min 60 mcg/kg/min 80 mcg/kg/min
Promethazine	Histamine Blockers	L	mg	IV	N/A
Propofol	Hypnotics	M	mg mg/kg mcg/kg/min	IV	2.5 mg/kg 3.5 mg/kg 125 mcg/kg/min 300 mcg/kg/min
Propranolol	Cardiovascular	M	mg mg/kg	IV	0.01 mg/kg 0.15 mg/kg 3 mg
Quinidine	Cardiovascular	M	mg/kg	IV	N/A
Remifentanyl	Analgesics Narcotics	M	mcg/kg/min	IV	0.05 mcg/kg/min 0.25 mcg/kg/min 1 mcg/kg/min 1.3 mcg/kg/min
Rocuronium	Neuromuscular Blockers	M	mg/kg mcg/kg/min mg	IV	0.6 mg/kg 0.075 mg/kg 0.0.125 mg/kg 10 mcg/kg/min
Sugammadex	Neuromuscular Blockade Reversal	L	mg/kg	IV	N/A
Sufentanyl	Analgesics Narcotics	M	mg/kg	IV	N/A
Terbutaline	Respiratory	L	mg mg/kg mcg/kg mcg/kg/min	IV	N/A
			mg mg/kg mcg/kg	SC	0.005 mg/kg 0.01 mg/kg
			mg mg/kg mcg/kg	PO	0.05 mg/kg 0.15 mg/kg
			mg mg/kg mcg/kg mcg/kg/min	Nebulizer	N/A

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Thiopental	Hypnotics	M	mg mg/kg	IV	N/A
Tranexamic Acid	Hemostasis Fibrinolysis Inhibitor	L	mg mg/kg	IV	10 mg/kg 100 mg/kg 200 mg 2000 mg
			mg mg/kg	PO	N/A
Urapidil	Cardiovascular	L	mg mg/min	IV	N/A
Vasopressin	ACLS Cardiovascular	M	units/kg mu/kg/hr mu/kg/min	IV	0.3 unit/kg 0.05 mu/kg/min 2 mu/kg/min .01 mu/kg/min 0.5 mu/kg/min 1 mu/kg/hr 10 mu/kg/hr
			units/kg mu/kg/hr mu/kg/min	IO	0.3 unit/kg 0.05 mu/kg/min 2 mu/kg/min .01 mu/kg/min 0.5 mu/kg/min 1 mu/kg/hr 10 mu/kg/hr
		units	SC	2.5 units 10 units	
		units	Inhaler	2.5 units 10 units	
		units	IM	2.5 units 10 units	

Medication	Category	Modeled or Log Only	Custom Dosage Options		Predefined Dosages
			Units	Route	
Vecuronium	Neuromuscular Blockers	M	mg/kg mg/kg/hr	IV	0.01 mg/kg 0.05mg/kg/hr 0.07mg/kg/hr
			mg/kg mg/kg/hr	IO	0.01 mg/kg 0.05mg/kg/hr 0.07mg/kg/hr
Verapamil	ACLS Cardiovascul	M	mg/kg	IV	0.1 mg/kg 0.3 mg/kg
			mg/kg	IO	0.1 mg/kg 0.3 mg/kg



For more information about CAE products, contact your regional sales manager or the CAE distributor in your country, or visit caehealthcare.com.

Tel +1 941-377-5562 or 866-233-6384

For customer service, please contact CAE.

Customer Service Headquarters - United States

Monday - Friday from 7:00 a.m. to 6:00 p.m. ET

Phone 1-866-462-7920

Email: srqcustomerservice@cae.com

Customer Service - Canada

Monday - Friday from 8:00 a.m. to 5:00 p.m. ET

Phone 1-877-223-6273

Email: can.service@cae.com

Customer Service - Europe, Middle East, and Africa

Monday - Friday from 8:00 a.m. to 5:00 p.m. CET

Phone +49 (0) 6131 4950354

Email: international.service@cae.com

Customer Service - United Kingdom and Ireland

Monday - Friday from 9:00 a.m. to 5:00 p.m. GMT

Phone +44 (0)800-917-1851

Email: uk.service@cae.com

Customer Service - Latin America

Monday - Friday from 9:00 a.m. to 5:00 p.m. BRT/BRST

Phone +55 11 5069-1510

Email: la.service@cae.com

Customer Service - Asia Pacific

Monday - Friday from 8:00 a.m. to 5:00 p.m. CET

Phone +49 (0) 6131 4950354

Email: ap.service@cae.com

